

SERVICE HINTS

G 1 (A), G 2 (B) GENERATOR

- (B)** 1-GROUND : 13.9–15.1 VOLTS WITH THE ENGINE RUNNING AT 2000 RPM AND 25°C (77°F)
 13.5–14.3 VOLTS WITH THE ENGINE RUNNING AT 2000 RPM AND 115°C (239°F)
- (A)** 3-GROUND : 0–4 VOLTS WITH THE IGNITION SW AT ON POSITION AND ENGINE NOT RUNNING

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C11	B 24	G 2	B 22	F11	25
C13	D 24	F 6	A 22		
G 1	A 22	F 8	C 22		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
14	34	COWL WIRE			


C11 (B) BLUE

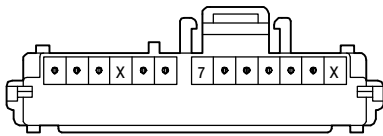

C13 (D)

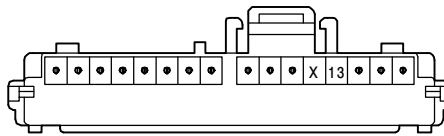


F 6 (A), F 8 (C)

 

F11

(SEE PAGE 20)

G 1 (A) GRAY

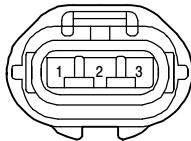

G 2 (B)

