


# Multi-Display (w/o Navigation System)

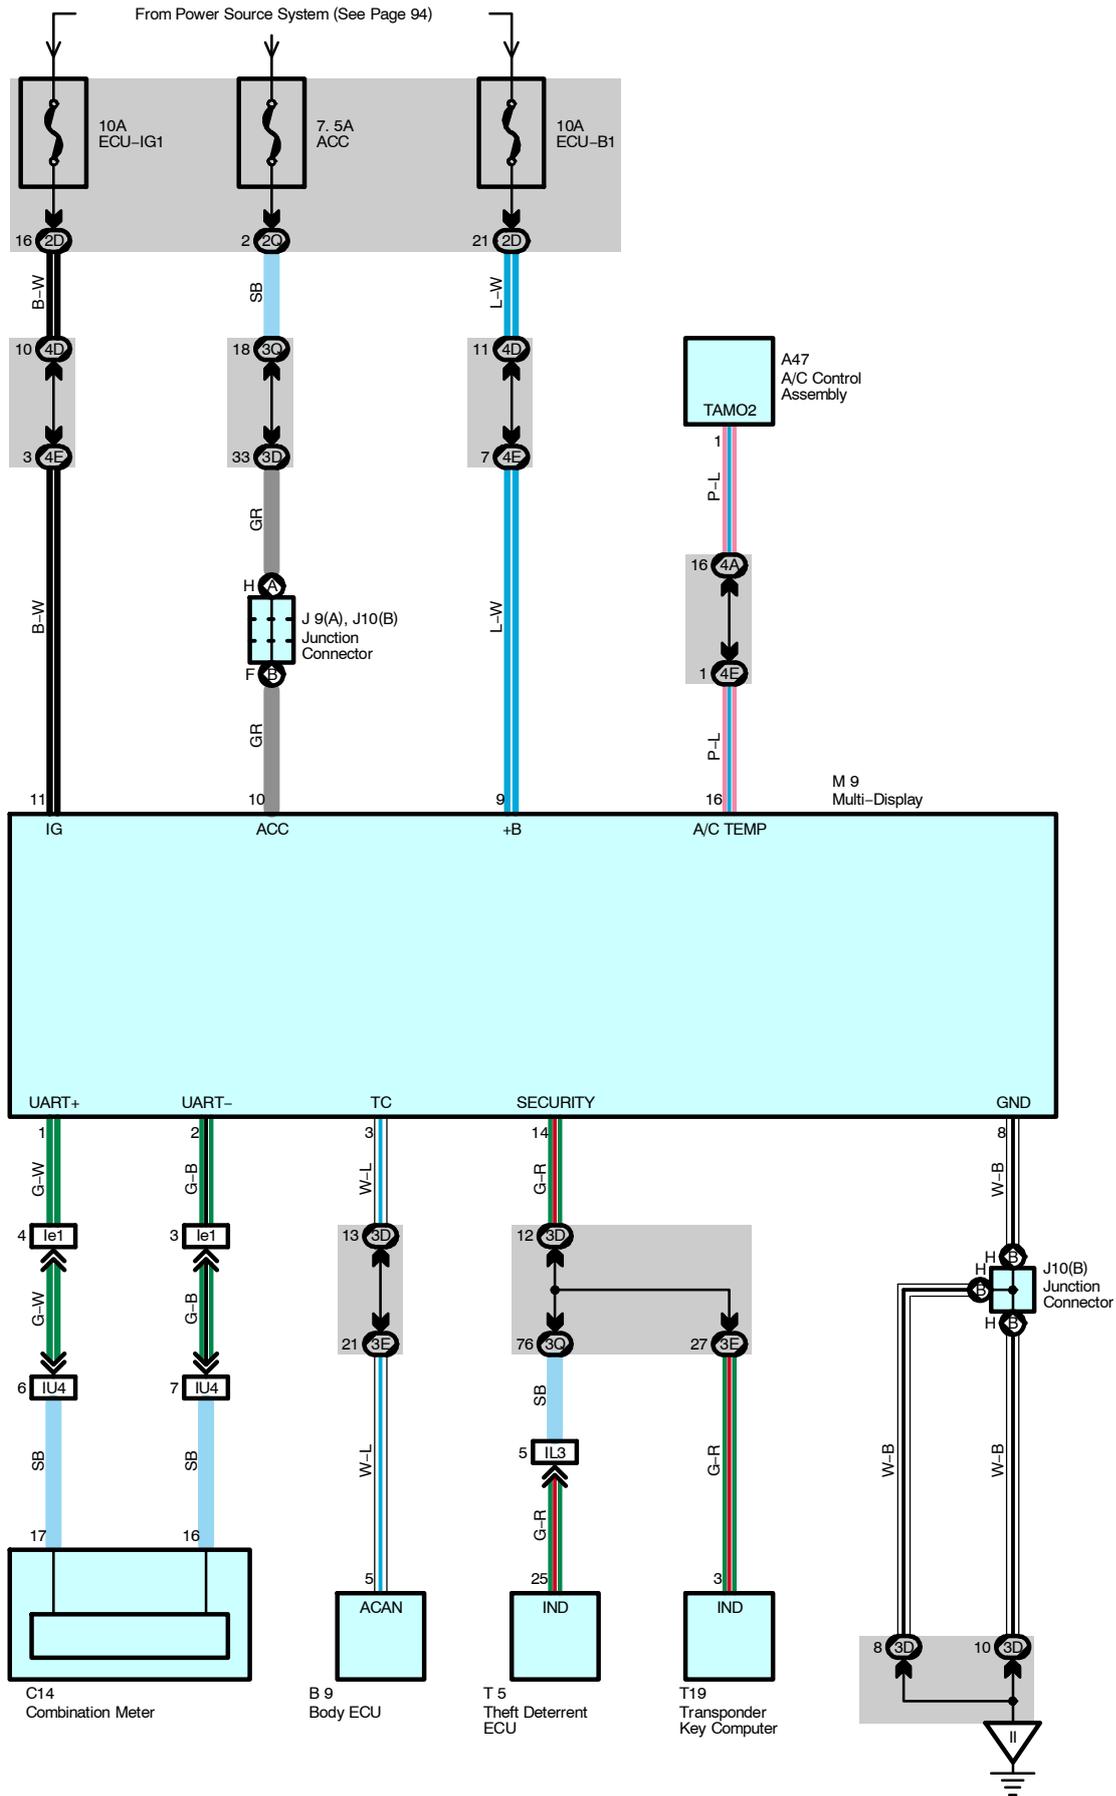

## Service Hints

### M9 Multi-Display

- 9-Ground : Always approx. 12 volts
- 10-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 11-Ground : Approx. 12 volts with ignition SW at ON or ST position
- 8-Ground : Always continuity

### ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A47	<a href="#">70</a>	J9	A	<a href="#">71</a>	T5
B9	<a href="#">70</a>	J10	B	<a href="#">71</a>	T19
C14	<a href="#">70</a>	M9		<a href="#">71</a>	

### ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	<a href="#">28</a>	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	<a href="#">30</a>	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3D	<a href="#">40</a>	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3Q	<a href="#">42</a>	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4A	<a href="#">52</a>	Dash Wire and J/B No.4 (Instrument Panel Center)
4D		
4E		

### □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IL3	<a href="#">80</a>	Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center)
IU4	<a href="#">82</a>	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
Ie1	<a href="#">84</a>	Dash Wire and Dash Wire (Behind the Glove Box)

### ▽ : Ground Points

Code	See Page	Ground Points Location
II	<a href="#">78</a>	Set Bolt of Cowl Side J/B RH