

REAR NO. 2 SEAT OUTER BELT ASSEMBLY > REMOVAL

1. REMOVE REAR NO. 2 SEAT ASSEMBLY LH
2. REMOVE REAR NO. 1 FLOOR STEP COVER
3. REMOVE QUARTER SCUFF PLATE LH
4. REMOVE REAR DOOR SCUFF PLATE LH
5. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH
6. REMOVE REAR NO. 1 SEAT OUTER LAP BELT ANCHOR COVER
7. REMOVE NO. 1 LUGGAGE COMPARTMENT TRIM HOOK
8. REMOVE NO. 1 TONNEAU COVER HOLDER CAP (w/o Tonneau Cover)
9. REMOVE FRONT DECK SIDE TRIM COVER (w/ Tonneau Cover)
10. REMOVE ASSIST GRIP PLUG
11. REMOVE ASSIST GRIP SUB-ASSEMBLY
12. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH
13. REMOVE REAR QUARTER TRIM PANEL ASSEMBLY LH
14. REMOVE STEREO COMPONENT AMPLIFIER ASSEMBLY WITH BRACKET (for LH Side, w/ Woofer)

REAR NO. 2 SEAT OUTER BELT ASSEMBLY > REMOVAL

for Preparation [Click here](#)

HINT:

- Use the same procedure for the RH and LH sides.
- The procedure listed below is for the LH side.

1. REMOVE REAR NO. 2 SEAT ASSEMBLY LH

- a. Remove the rear No. 2 seat assembly LH ([Click here](#)).

2. REMOVE REAR NO. 1 FLOOR STEP COVER

HINT:

Use the same procedure for all rear No. 1 floor step covers.


- a. Using a screwdriver, detach the 2 claws and remove the rear No. 1 floor step cover.

HINT:

Tape the screwdriver tip before use.


Text in Illustration

*1	Protective Tape
----	-----------------

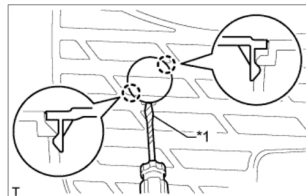

3. REMOVE QUARTER SCUFF PLATE LH

- a. Remove the 2 bolts and quarter scuff plate.

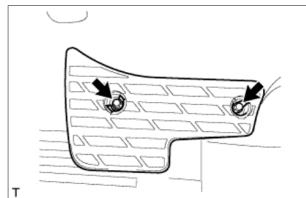

4. REMOVE REAR DOOR SCUFF PLATE LH


- a. Put protective tape around the rear door scuff plate.
- b. Using a screwdriver, detach the 3 clips, 6 claws and 2 guides and remove the rear door scuff plate.

HINT:

Tape the screwdriver tip before use.

Text in Illustration

*1	Protective Tape
----	-----------------

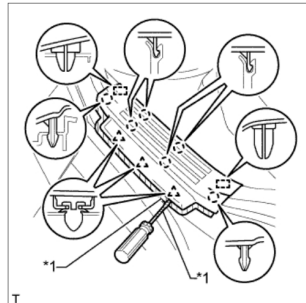

5. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH


- a. Partially remove the rear door opening trim weatherstrip so that the front quarter trim panel assembly LH and deck trim side panel assembly LH can be removed ([Click here](#)).

6. REMOVE REAR NO. 1 SEAT OUTER LAP BELT ANCHOR COVER

HINT:

Use the same procedure for the other rear No. 1 seat outer lap belt anchor cover.

- a. Detach the 3 claws and remove the rear No. 1 seat outer lap belt anchor cover.

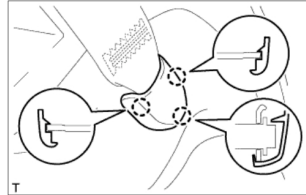


7. REMOVE NO. 1 LUGGAGE COMPARTMENT TRIM HOOK

HINT:

Use the same procedure for the other No. 1 luggage compartment trim hook.

- a. Remove the luggage compartment trim hook by turning it clockwise.

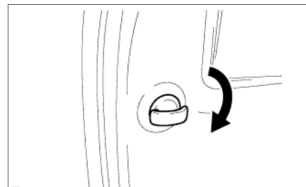

8. REMOVE NO. 1 TONNEAU COVER HOLDER CAP (w/o Tonneau Cover)

HINT:

Use the same procedure for the other No. 1 tonneau cover holder cap.


- Using a screwdriver, detach the 2 claws and remove the No. 1 tonneau cover holder cap.

HINT:

Tape the screwdriver tip before use.

Text in Illustration

*1	Protective Tape
----	-----------------

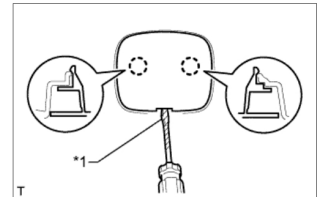

9. REMOVE FRONT DECK SIDE TRIM COVER (w/ Tonneau Cover)

HINT:

Use the same procedure for the other front deck side trim cover.


- Using a screwdriver, detach the 2 claws and remove the front deck side trim cover.

HINT:

Tape the screwdriver tip before use.

Text in Illustration

*1	Protective Tape
----	-----------------

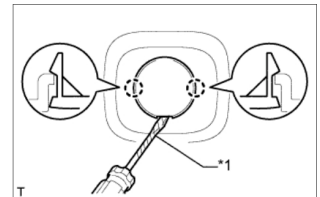

10. REMOVE ASSIST GRIP PLUG

HINT:

Use the same procedure for all assist grip plugs.


- Using a screwdriver, detach the 2 claws and remove the assist grip plug.

HINT:

Tape the screwdriver tip before use.

Text in Illustration

*1	Protective Tape
----	-----------------

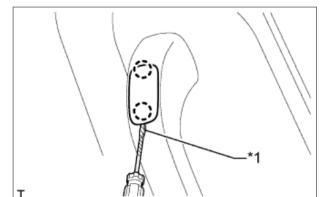


11. REMOVE ASSIST GRIP SUB-ASSEMBLY

HINT:


Use the same procedure for the other assist grip.

- Remove the 2 bolts and assist grip.

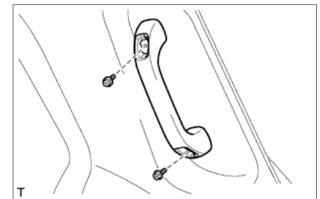


12. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH


- Remove the bolt and disconnect the rear No. 1 seat outer belt floor anchor.

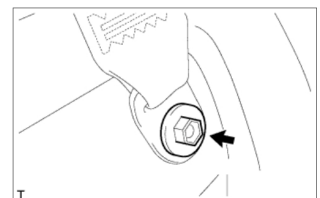

- Remove the bolt and disconnect the rear No. 2 seat outer belt floor anchor.

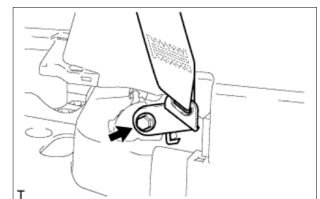


- for RH Side:
Remove the bolt and disconnect the rear No. 2 seat outer belt floor anchor.
- Remove the 2 bolts and 2 screws.
- Detach the 3 clips and 8 claws.

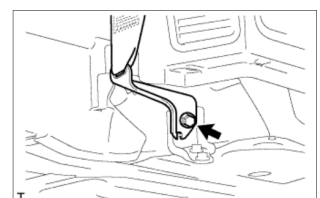


- Disconnect each connector and remove the deck trim side panel.

T. Disconnect each connector and remove the deck trim side panel.

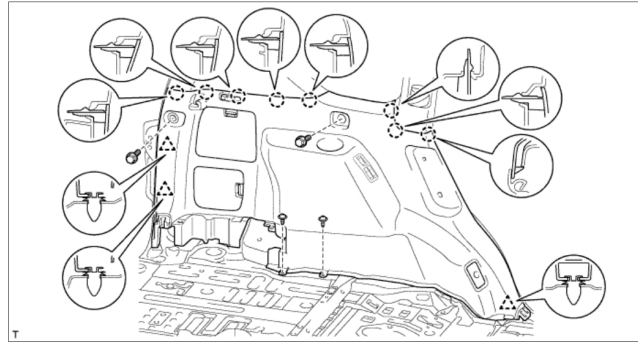


13. REMOVE REAR QUARTER TRIM PANEL ASSEMBLY LH

- a. Detach the 7 clips and 2 guides.
- b. Disconnect the connector.

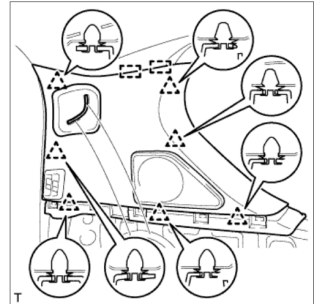


- c. Detach the 4 clips and 2 guides, pass the rear No. 2 seat outer belt floor anchor through the rear quarter trim panel and remove the rear quarter trim panel.

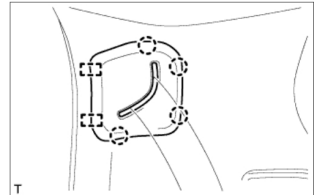


14. REMOVE STEREO COMPONENT AMPLIFIER ASSEMBLY WITH BRACKET (for LH Side, w/ Woofer)

- a. Disconnect the 4 connectors.
- b. Remove the 3 bolts and stereo component amplifier assembly with bracket.

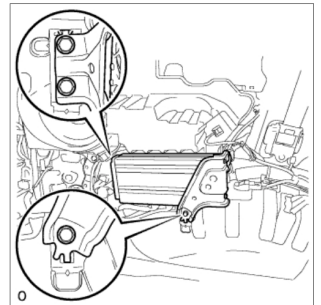

15. REMOVE NO. 1 SPEAKER WITH BOX ASSEMBLY (for LH Side, w/ Woofer)


- a. Disconnect the connector.
- b. Remove the 5 bolts and No. 1 speaker with box.

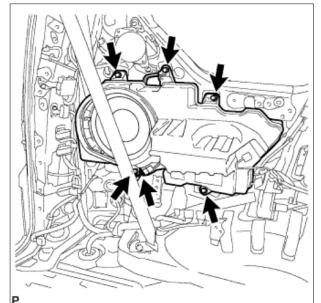


16. REMOVE REAR NO. 2 SEAT OUTER BELT ASSEMBLY LH

- a. Remove the bolt and rear No. 1 seat outer belt shoulder anchor.



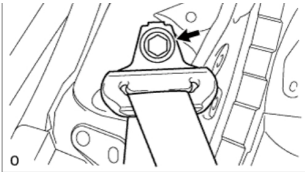


b. Remove the bolt and rear No. 2 seat outer belt assembly.

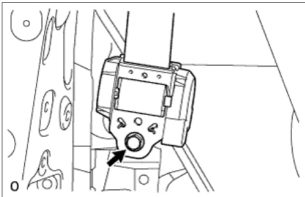

17. REMOVE REAR SEAT OUTER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Remove the bolt and anchor plate.

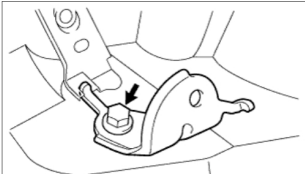

- Use the same procedure for the RH and LH sides.
- The procedure listed below is for the LH side.

1. REMOVE REAR NO. 2 SEAT ASSEMBLY LH

a. Remove the rear No. 2 seat assembly LH ([Click here](#)).

2. REMOVE REAR NO. 1 FLOOR STEP COVER

HINT:

Use the same procedure for all rear No. 1 floor step covers.

a. Using a screwdriver, detach the 2 claws and remove the rear No. 1 floor step cover.

HINT:

Tape the screwdriver tip before use.



15. REMOVE NO. 1 SPEAKER WITH BOX ASSEMBLY
(for LH Side, w/ Woofer)

16. REMOVE REAR NO. 2 SEAT OUTER BELT

Tape the screwdriver tip before use.

