
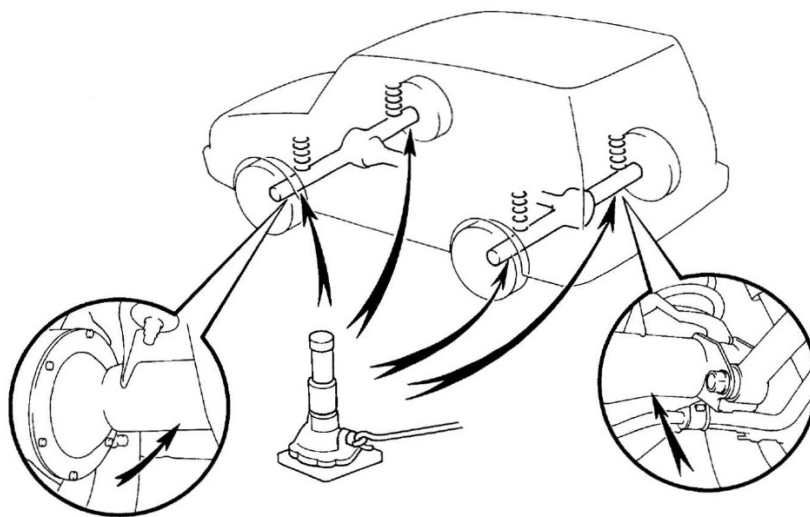


IN-8

INTRODUCTION - REPAIR INSTRUCTIONS

IN0H2-01

VEHICLE LIFT AND SUPPORT LOCATIONS

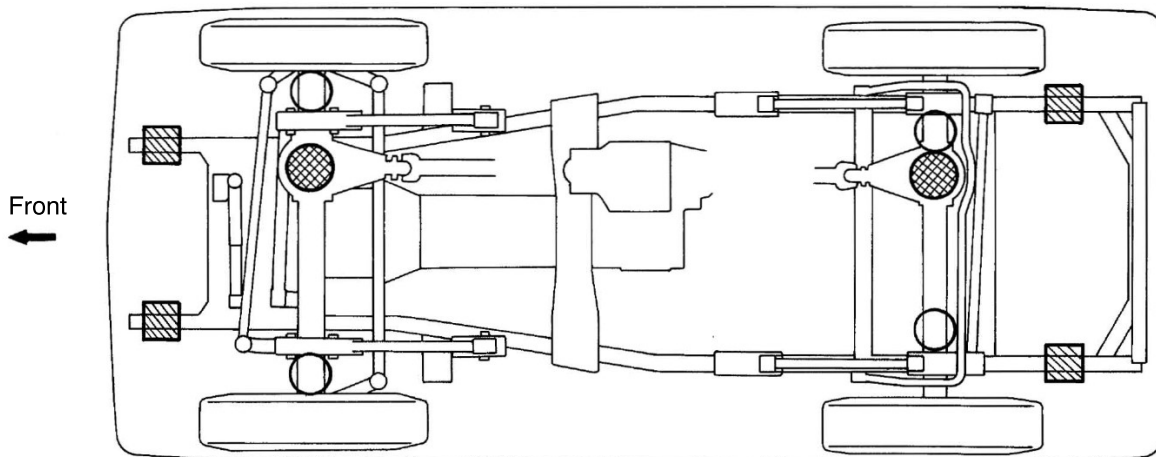

JACK POSITION

Front Under front differential

Rear Under rear differential

SCREW TYPE JACK POSITION

SUPPORT POSITION

Safety stand



Z00796