



REMOVE NO. 1 INSTRUMENT PANEL FINISH PANEL CUSHION

- a. Place protective tape as shown in the illustration.
- b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

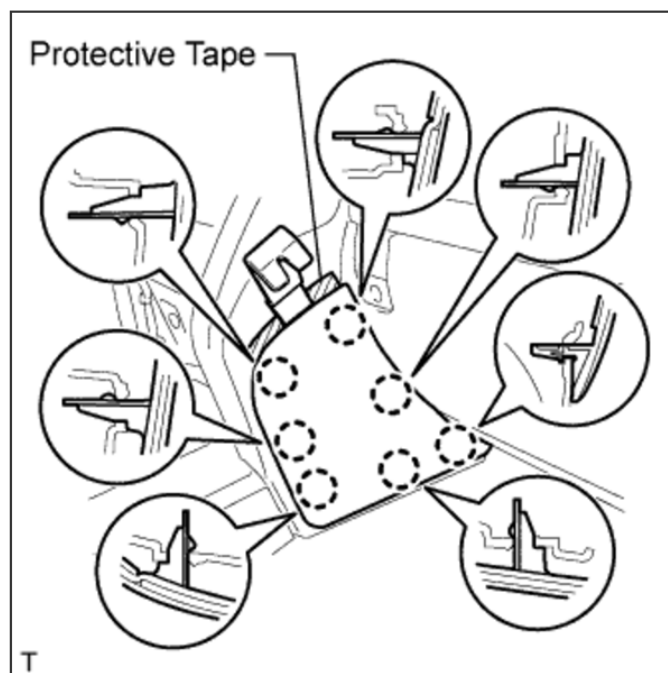


REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

- a. Remove the clip.
- b. Remove the screw.
- c. Detach the 7 claws and remove the panel.

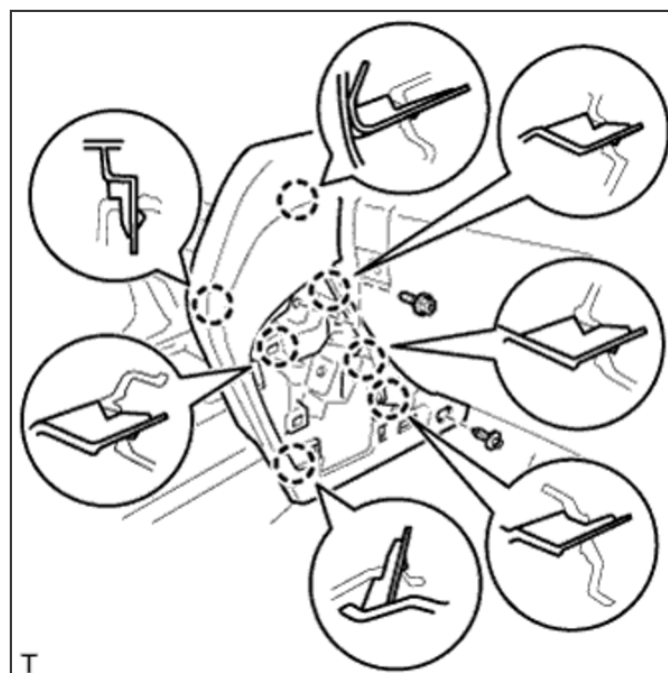


REMOVE INSTRUMENT SIDE PANEL RH (w/o Airbag Cut Off Switch)

- a. Place protective tape as shown in the illustration.
- b. Using a moulding remover, detach the 6 claws and remove the side panel.

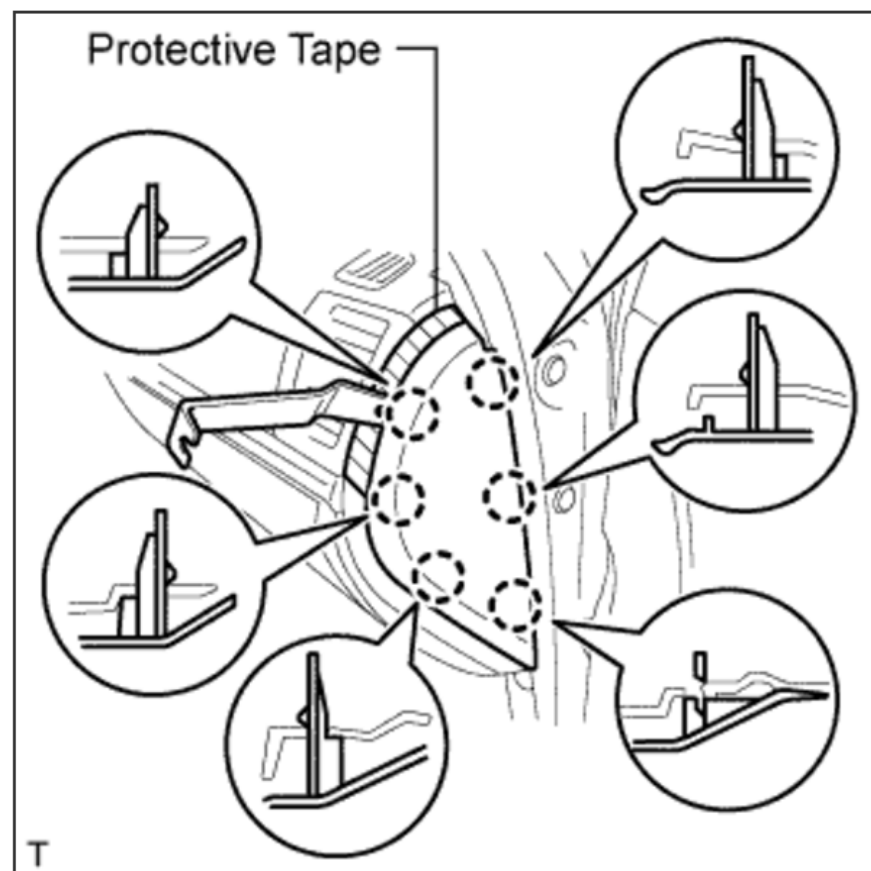


REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

- a.** Detach the 4 claws and remove the under cover.

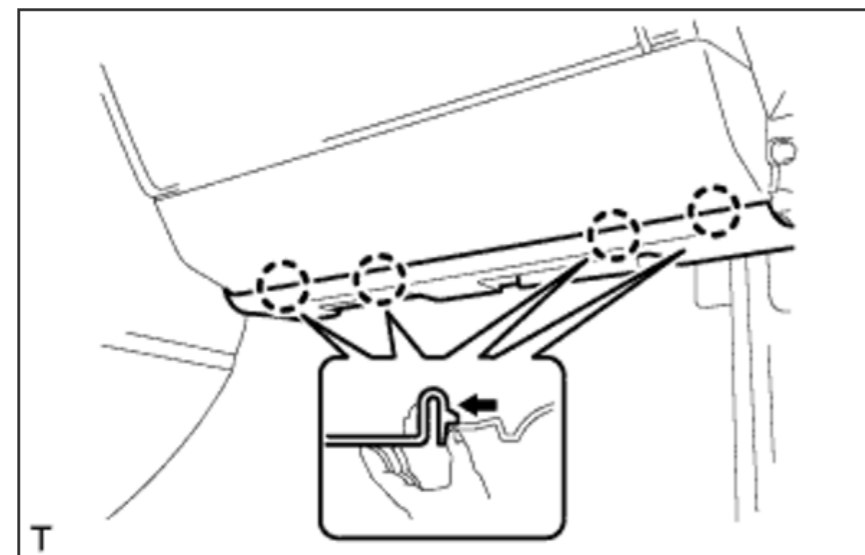

REMOVE COWL SIDE TRIM BOARD RH

- a.** Remove the cap nut.
- b.** Detach the 2 clips and remove the trim board.

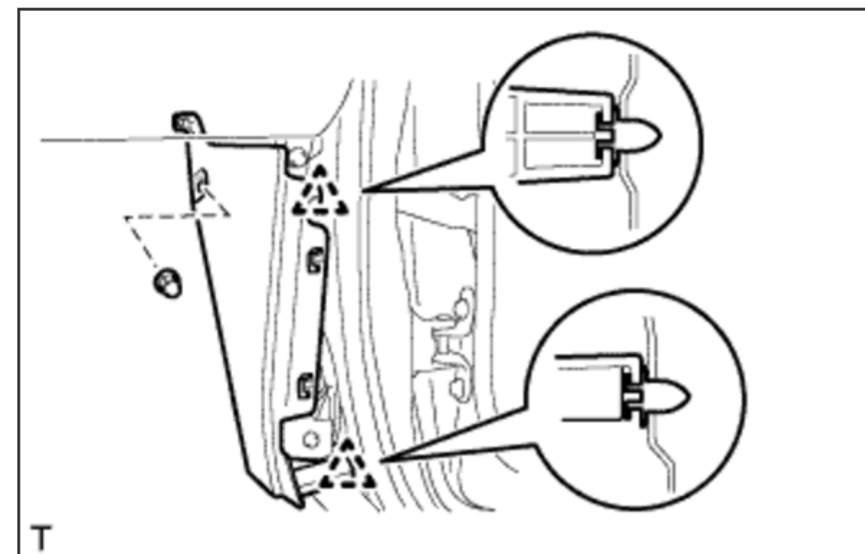


REMOVE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (w/ Passenger Side Knee Airbag)

- a. Remove the 4 bolts.
- b. Detach the 4 claws and remove the front passenger side knee airbag.
- c. Disconnect the connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

for LHD:

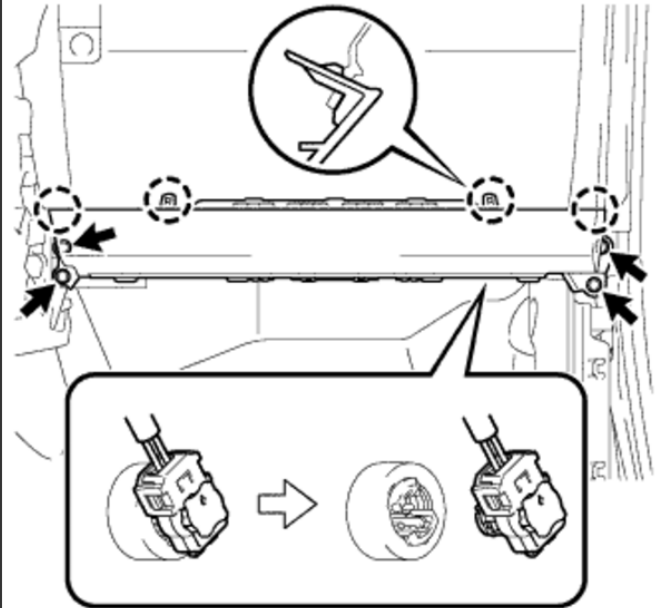



for RHD:

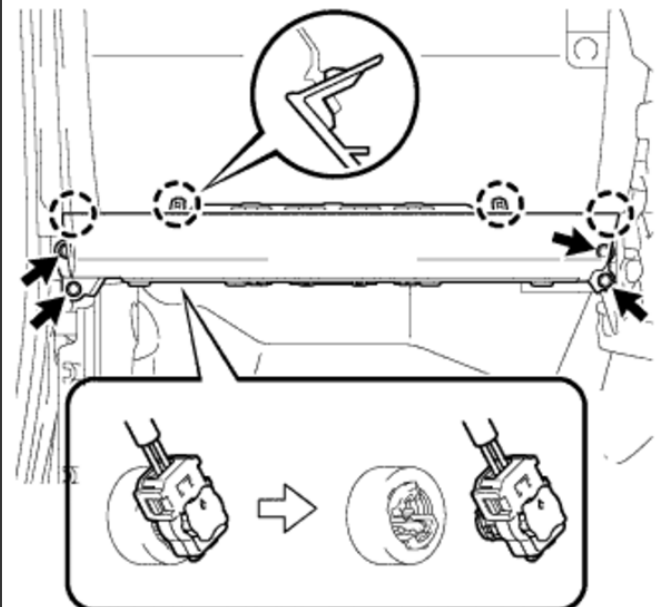

REMOVE LOWER INSTRUMENT PANEL (w/o Passenger Side Knee Airbag)

- a.** Remove the 2 bolts.
- b.** Detach the 4 claws and remove the instrument panel.

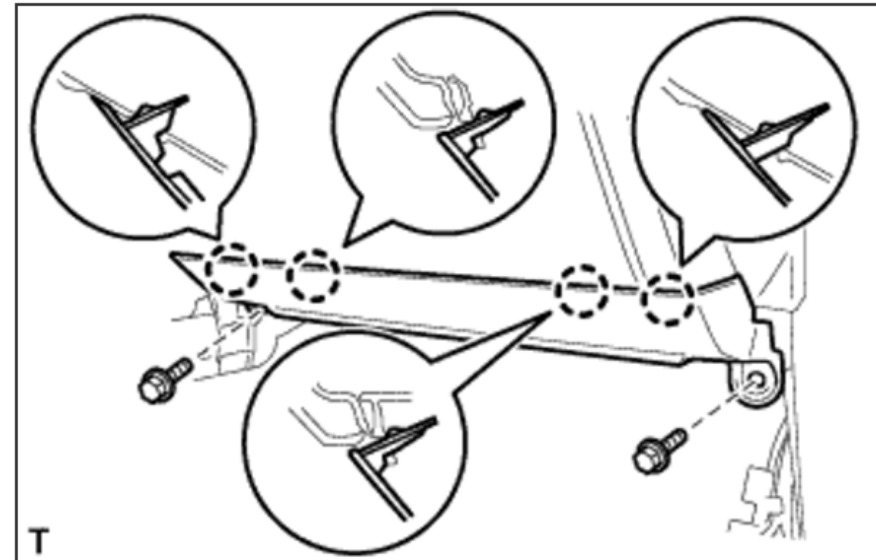

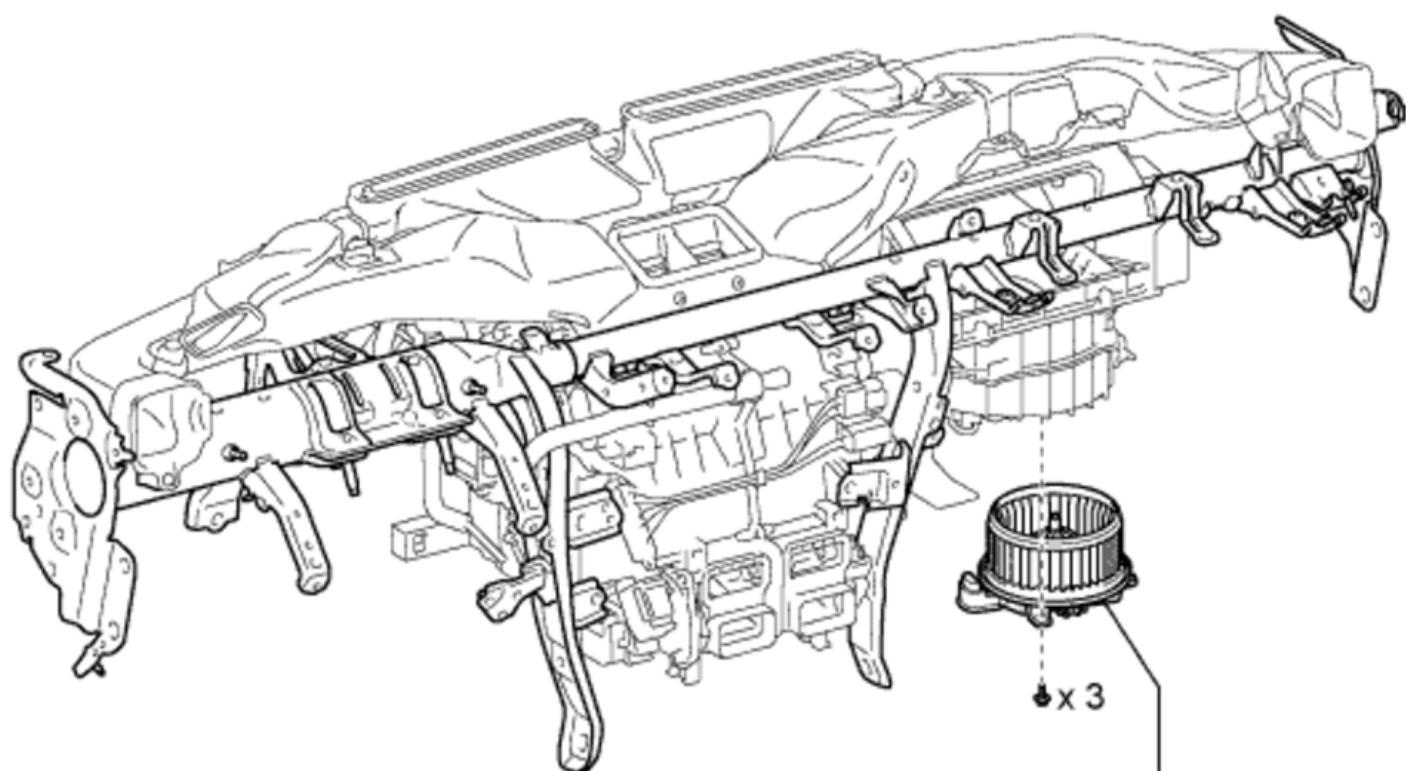

BLOWER WITH FAN MOTOR SUB-ASSEMBLY

REMOVE BLOWER WITH FAN MOTOR SUB-ASSEMBLY

- a. Disconnect the connector.
- b. Remove the 3 screws and motor.

