

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	B 4	Back Door Lock Motor	90980-11150
A 4	A/C Lock Sensor	90980-11016		Back Door Unlock Detection SW	
	A/C Magnetic Clutch		B 6	Buckle SW RH	90980-11169
A 5	Pressure SW	90980-10943	B 7	Body ECU	90980-12151
A11	ABS Speed Sensor Front LH	90980-10941	B 8	Body ECU	90980-12149
A12	ABS Speed Sensor Front RH	90980-11002	B 9	Body ECU	90980-12150
A13	Accel Position Sensor	90980-11144	B10	Buckle SW LH	90980-11599
A14	AHC Pump Motor	90980-10928		Seat Position Sensor	
A15	Airbag Sensor Front LH	90980-11856	C 1	Camshaft Position Sensor	90980-10947
A16	Airbag Sensor Front RH		C 2	Center Diff. Lock Control Motor	90980-11024
A17	Auto Antenna Motor	90980-11194	C 3	Crankshaft Position Sensor	90980-11162
A18	A/C Solar Sensor	90980-11919	C 7	Center Diff. Lock Control Relay	90980-10801
A19	A/C Thermistor	90980-11918	C12	Cigarette Lighter	90980-10760
A24	AHC Main Relay	90980-10171	C13	Cigarette Lighter Illumination	90980-11148
A25	Air Inlet Control Servo Motor	90980-11909	C14	Combination Meter	82824-60060
A26	Air Mix Control Servo Motor	90980-10797	C15	Combination Meter	82824-60050
A27	Air Vent Mode Control Servo Motor	90980-11165	C16	Combination Meter	82824-60060
A28	Airbag Squib (Front Passenger Airbag Assembly)	90980-12160	C17	Combination Meter	82824-60050
A29	Airbag Squib (Steering Wheel Pad)		C18	Combination SW	90980-11672
A30	Ashtray Illumination	90980-10825	C20	Combination SW	90980-12183
A31	Auto Antenna Control Relay	90980-10819	C21	Combination SW	90980-11594
A32	Automatic Light Control Sensor	90980-12056	C22	Control Valve Assembly	90980-11599
A33	A/C Amplifier	90980-11502	C29	Center Speaker LH	90980-10860
A34	A/C Amplifier	90980-11497	C30	Center Speaker RH	
A35	A/C Amplifier	90980-11475	C31	Center Airbag Sensor Assembly	82824-50160
A36	ABS Speed Sensor Rear LH	90980-11073	C32	Center Airbag Sensor Assembly	90980-11872
A37	ABS Speed Sensor Rear RH		C33	Center Airbag Sensor Assembly	82824-50150
A38	Accumulator Solenoid	90980-11019	C34	Center Cluster Integration Panel	90980-12200
A39	ABS & BA & TRAC & VSC ECU	90980-11935	C35	Combination SW	90980-12063
A40	ABS & BA & TRAC & VSC ECU	90980-11476	C36	Combination SW	90980-12155
A41	ABS & BA & TRAC & VSC ECU	90980-11637		Steering Sensor	
A42	ABS & BA & TRAC & VSC ECU	90980-11638	C37	Curtain Shield Airbag Squib LH	90980-11864
A43	ABS & BA & TRAC & VSC Actuator	90980-11413	C38	Curtain Shield Airbag Squib RH	
A44	ABS & BA & TRAC & VSC Actuator	90980-10895	D 1	Data Link Connector 1	90980-11195
A45	ABS & BA & TRAC & VSC Actuator	90980-11151	D 2	Daytime Running Light Relay No.3	90980-10939
A46	ABS & BA & TRAC & VSC Actuator	90980-11009	D 3	Daytime Running Light Relay No.3	90980-10940
A47	A/C Control Assembly	90980-12170	D 4	Detection SW (Center Diff. Lock)	90980-11250
A48	A/C Control Assembly	90980-11913	D 5	Detection SW (Transfer L Position)	
A49	A/C Control Assembly	90980-11927	D 6	Detection SW (Transfer Neutral Position)	90980-11025
A50	Auto Wiper ECU	90980-10801	D 7	Damping Mode Select SW and Height Control SW	90980-11923
A51	Auto Wiper ECU	90980-12183	D 8	Data Link Connector 3	90980-11665
A52	A/T Shift Lever Illumination	90980-11911	D10	Damping Force Control Actuator Front LH	90980-11960
	Shift Lock Control ECU		D11	Damping Force Control Actuator Front RH	
B 1	Blower Motor Controller	90980-10910	D12	Damping Force Control Actuator Rear LH	
B 2	Back Door Courtesy SW	90980-10039	D13	Damping Force Control Actuator Rear RH	
B 3	Back Door Key Lock and Unlock SW	90980-11490			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
D15	Door Courtesy Light Front LH	90980-11148	F13	Fuel Pump	90980-11077
D16	Door Courtesy Light Front RH			Fuel Sender	
D17	Door Courtesy Light Rear LH		F15	Fuel Pump Resistor	90980-11156
D18	Door Courtesy Light Rear RH		F16	Fusible Link Block	90980-11996
D19	Door Courtesy SW Front LH	90980-10871	F17	Fusible Link Block	90980-11881
D20	Door Courtesy SW Front RH		F18	Fusible Link Block	90980-11775
D21	Door Courtesy SW Rear LH		F19	Fusible Link Block	90980-10995
D22	Door Courtesy SW Rear RH		F20	Fusible Link Block	82675-60050
D23	Door Key Lock and Unlock SW LH	90980-11170	G 1	Generator	90980-09212
D24	Door Key Lock and Unlock SW RH		G 2	Generator	90980-11964
D25	Door Lock Control SW RH	90980-11950	G 3	Glove Box Light	90980-11098
D26	Door Lock Motor Front LH	90980-11150	G 5	Gateway ECU	90980-11911
	Door Unlock Detection SW Front LH		H 1	Headlight Cleaner Control Relay	90980-10939
D27	Door Lock Motor Front RH		H 2	Headlight Cleaner Motor	90980-11410
	Door Unlock Detection SW Front RH		H 3	Headlight LH (High)	90980-11659
D28	Door Lock Motor Rear LH		H 4	Headlight LH (Low)	90980-11294
	Door Unlock Detection SW Rear LH		H 5	Headlight RH (High)	90980-11659
D29	Door Lock Motor Rear RH		H 6	Headlight RH (Low)	90980-11294
	Door Unlock Detection SW Rear RH		H 7	Heated Oxygen Sensor (Bank 1 Sensor 1)	90980-10869
D30	Driving Position Memory SW	90980-10601	H 8	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028
D32	DVD Automatic Changer	90980-11971	H 9	Heated Oxygen Sensor (Bank 2 Sensor 1)	90980-10869
D33	Door Control Receiver	90980-11909	H10	Heated Oxygen Sensor (Bank 2 Sensor 2)	90980-11028
E 1	Electronically Controlled Transmission Solenoid	90980-12293	H11	Height Control Sensor Front LH	90980-11015
E 2	Engine Coolant Temp. Sensor	90980-10736	H12	Height Control Sensor Front RH	
E 3	Engine Hood Courtesy SW	90980-11003	H13	Horn LH	90980-10619
E 5	Electronically Controlled Transmission Pattern Select SW	90980-10933	H14	Horn RH	
E 6	Engine Control Module	90980-12143	H15	Height Control Sensor Rear	90980-11143
E 7	Engine Control Module	90980-12145	H16	High Mounted Stop Light	90980-11211
E 8	Engine Control Module	90980-12144	I 1	Ignition Coil and Igniter No.1	90980-11885
E 9	Engine Control Module	90980-12146	I 2	Ignition Coil and Igniter No.2	
E10	Engine Control Module	90980-12142	I 3	Ignition Coil and Igniter No.3	
E11	Engine Room Relay Block	90980-10897	I 4	Ignition Coil and Igniter No.4	
E12	Exhaust Gas Sensor	90980-11034	I 5	Ignition Coil and Igniter No.5	
F 1	Fluid Pressure Sensor	90980-11451	I 6	Ignition Coil and Igniter No.6	
F 2	Front Fog Light LH	90980-11156	I 7	Ignition Coil and Igniter No.7	
F 3	Front Fog Light RH		I 8	Ignition Coil and Igniter No.8	
F 4	Front Turn Signal Light LH	90980-11019	I 9	Injector No.1	90980-11153
F 5	Front Turn Signal Light RH		I10	Injector No.2	
F 6	Front Wiper Motor	90980-11599	I11	Injector No.3	
F 9	Front Door Speaker LH	90980-10935	I12	Injector No.4	
F10	Front Door Speaker RH		I13	Injector No.5	
F11	Front Interior Light	90980-12211	I14	Injector No.6	
	Rear Personal Light		I15	Injector No.7	
F12	Front Personal Light	90980-10825	I16	Injector No.8	
			I18	Ignition SW	90980-11615

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
I22	Inner Mirror	90980-11186	M11	Mayday ECU	90980-11922
I23	Inside Door Handle Illumination Front LH	90980-11918	M12	Multi-Display	90980-12094
I24	Inside Door Handle Illumination Front RH		N 1	Noise Filter (Ignition)	90980-10843
I25	Inside Door Handle Illumination Rear LH		N 2	Navigation ECU	90980-11973
I26	Inside Door Handle Illumination Rear RH		N 3	Navigation ECU	90980-11923
J 1	Junction Connector	90980-11398	N 4	Night View Projector LH	90980-10887
J 2	Junction Connector	90980-11915	N 5	Night View Projector RH	
J 3	Junction Connector	90980-11927	N 6	Night View ECU	90980-12200
J 4	Junction Connector		N 7	Night View SW	90980-12113
J 5	Junction Connector	90980-11398	N 8	Navigation ECU	90980-12221
J 6	Junction Connector		N 9	Night View Camera	90980-10795
J 7	Junction Connector		O 2	Oil Pressure Sender	90980-11363
J 8	Junction Connector		O 4	Overhead J/B	90980-12155
J 9	Junction Connector	90980-10803	P 1	Park/Neutral Position SW	90980-11784
J10	Junction Connector	90980-11661	P 2	Parking Light LH	90980-11156
J11	Junction Connector		P 3	Parking Light RH	
J12	Junction Connector		P 4	Power Outlet (Front)	90980-10760
J13	Junction Connector		P 5	Power Outlet (Rear Console Box)	90980-10860
J14	Junction Connector	90980-10803	P 6	Power Quarter Window SW LH	90980-10797
J15	Junction Connector	90980-11927	P 7	Power Quarter Window SW RH	90980-10996
J16	Junction Connector		P 8	Parking Brake SW	90980-10871
J17	Junction Connector	90980-11915	P10	Power Vent Window Motor LH	90980-10860
J18	Junction Connector	90980-11927	P11	Power Vent Window Motor RH	
J19	Junction Connector		P12	Power Window Control SW Front RH	90980-11947
J20	Junction Connector	90980-11925	P13	Power Window Control SW Rear LH	
J21	Junction Connector		P14	Power Window Control SW Rear RH	
J22	Junction Connector	90980-11915	P15	Power Window Master SW	90980-12166
J23	Junction Connector		P16	Power Window Motor Front LH	90980-11599
J24	Junction Connector		P17	Power Window Motor Front RH	
J26	Junction Connector	90980-11398	P18	Power Window Motor Rear LH	
J27	Junction Connector	90980-11915	P19	Power Window Motor Rear RH	
J28	Junction Connector		P20	Pretensioner LH	90980-11862
K 1	Knock Sensor 1	90980-11166	P21	Pretensioner RH	
K 2	Knock Sensor 2		P23	Power Seat Control SW (Front Passenger's Seat)	90980-10803
K 3	Key Interlock Solenoid	90980-10825	P31	Power Seat Motor (Front Passenger's Seat Front Vertical Control)	90980-10825
L 1	License Plate Light LH	90980-11148	P32	Power Seat Motor (Front Passenger's Seat Rear Vertical Control)	
L 2	License Plate Light RH		P33	Power Seat Motor (Front Passenger's Seat Reclining Control)	
M 1	Mass Air Flow Meter	90980-11317	P34	Power Seat Motor (Front Passenger's Seat Slide Control)	
M 2	Moon Roof Control ECU	90980-10997	P39	Power Outlet (Luggage Compartment)	90980-10860
M 3	Moon Roof Control SW	90980-10789	R 4	Remote Control Mirror SW	90980-11657
M 4	Master Cylinder Pressure Sensor	90980-11451	R 5	Remote Control Mirror SW	90980-11319
M 5	Multi-Display	90980-12203	R 6	Rheostat	90980-10799
M 6	Multi-Display	90980-12410			
M 7	Multi-Display	90980-12012			
M 9	Mayday ECU	90980-11954			
M10	Mayday ECU	90980-12161			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
R 7	Room Temp. Sensor (Front)	90980-11918	S18	Stereo Component Amplifier	90980-10848
R 8	Rear A/C Control SW	90980-11503	S19	Stereo Component Amplifier	90980-11877
R 9	Rear Air Mix Control Servo Motor	90980-11319	S20	Spot Light Illumination LH	90980-11918
R10	Rear Combination Light LH	90980-11587	S21	Spot Light Illumination RH	90980-11919
R11	Rear Combination Light LH	90980-10908	S22	Side Airbag Sensor Front LH	90980-12225
R12	Rear Combination Light RH		S23	Side Airbag Sensor Front RH	
R13	Rear Combination Light RH		S24	Side Airbag Sensor Rear LH	
R14	Rear Cooler Blower Motor	90980-10214	S25	Side Airbag Sensor Rear RH	
R15	Rear Cooler Magnetic Valve	90980-10860	S26	Sub Body ECU	90980-11877
R16	Rear Cooler Power Transistor	90980-10171	S27	Sub Body ECU	90980-12113
R17	Rear Cooler Relay		S28	Seat ECU	90980-10801
R19	Rear Door Speaker LH	90980-10935	S31	Seat Heater (Front Passenger's Seat Cushion)	90980-10794
R20	Rear Door Speaker RH		S32	Seat Heater (Front Passenger's Seat)	90980-10907
R21	Rear Evaporator Temp. Sensor	90980-11918	S34	Side Airbag Squib LH	90980-11864
R22	Rear Heater Blower Motor	90980-10860	S35	Side Airbag Squib RH	
R23	Rear Heater Power Transistor	90980-10171	T 1	Temp. Sensor (AHC)	90980-10737
R24	Rear Inlet Air Temp. Sensor	90980-11369	T 2	Theft Deterrent Horn	90980-10619
R25	Rear Interior Light	90980-10935	T 5	Telescopic Motor	90980-10799
R26	Rear Window Defogger	90980-11097	T 6	Theft Deterrent ECU	90980-12169
R27	Rear Window Defogger		T 8	Tilt and Telescopic ECU	90980-10799
R28	Rear Wiper Motor	90980-10795	T 9	Tilt and Telescopic ECU	90980-10848
R30	Remote Control Mirror ECU	90980-11877	T10	Tilt Motor	90980-10799
R31	Remote Control Mirror LH	90980-11573	T11	Ignition Key Cylinder Light	90980-12092
R32	Remote Control Mirror RH			Transponder Key Amplifier	
R33	Room Temp. Sensor (Rear)	90980-11918	T12	Turn Signal Flasher	90980-10799
R36	Radio and Player	90980-12259	T16	Tweeter LH	90980-11300
R37	Radio and Player	90980-12038	T17	Tweeter RH	
R38	Radio and Player	90980-12183	T23	Towing Converter Relay	90980-11535
R39	Rear Seat Audio Controller	90980-12200	T24	Throttle Control Motor and Sensor	90980-11858
R40	Rain Sensor	90980-12263	T25	Turbine Speed Sensor	90980-11156
R41	Roll Sensing of Curtain Shield Airbags Cutoff SW	90980-10957	T26	Towing Brake Controller	90980-11603
R42	Rear Combination Light LH	90980-11156	T27	Transponder Key Computer	90980-11911
R43	Rear Combination Light RH		T28	Theft Deterrent Siren	90980-11349
S 1	Starter	90980-11400	T29	Trailer Socket	82824-34030
S 2	Starter	90980-09585	T30	Television Camera	90980-12381
S 3	Seat Heater SW (Driver's Seat)	90980-10797	T31	Television Camera ECU	90980-12169
S 4	Seat Heater SW (Front Passenger's Seat)	90980-10996	T32	Television Camera ECU	90980-10997
S 5	Stop Light SW	90980-11118	T33	Towing Hitch Relay	82660-20340
S 6	Suspension Control ECU	90980-11390	U 1	Unlock Warning SW	90980-10860
S 7	Suspension Control ECU	90980-11391	V 1	Vapor Pressure Sensor	90980-11143
S 8	Suspension Control ECU	90980-11424	V 2	Vehicle Speed Sensor (Combination Meter)	
S13	Seat Belt Warning Occupant Detection Sensor	90980-10860	V 3	Vehicle Speed Sensor (Electronically Controlled Transmission)	90980-11156
S16	Side Step Light LH and Outer Foot Light LH	90980-11051	V 4	VSV (EVAP)	
S17	Side Step Light RH and Outer Foot Light RH				

L PART NUMBER OF CONNECTORS

[illegible]

Note: Not all of the above part numbers of the connector are established for the supply.

