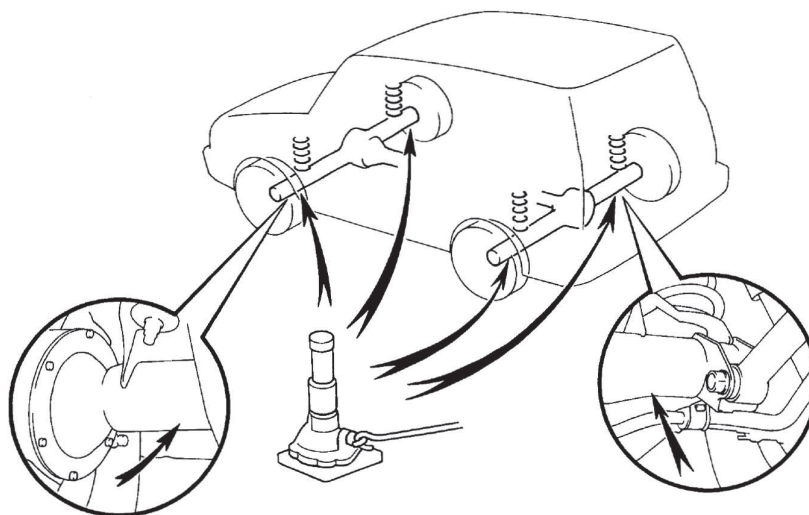
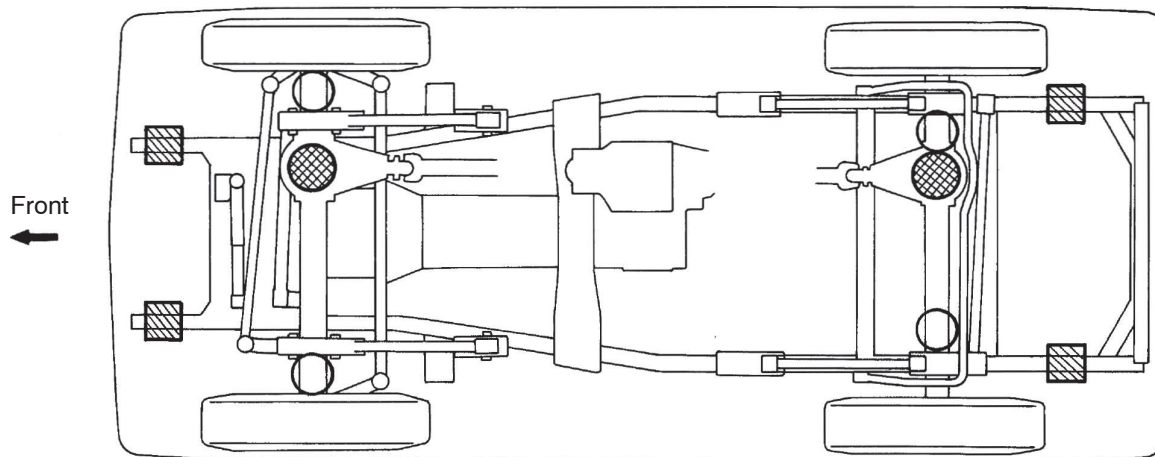


IN-8

## INTRODUCTION - REPAIR INSTRUCTIONS

IN0H2-01

## VEHICLE LIFT AND SUPPORT LOCATIONS

**JACK POSITION**

Front ..... Under front differential

Rear ..... Under rear differential

**SCREW TYPE JACK POSITION****SUPPORT POSITION**

Safety stand .....



Z00796