

**Toyota Landcruiser "100 series" -- 2006 Sahara model in Australia**

**Gross Vehicle Mass and Axle Loads as shown on Page 214 of the Owner's Manual**

- The gross vehicle weight must not exceed the following. The gross vehicle weight is the sum weight of the unloaded vehicle, driver, passengers, luggage, hitch and trailer tongue load. It also includes the weight of any special equipment installed on your vehicle.

Vehicles with 1HZ engine

3180 kg (7011 lb.)

→ Vehicles with 2UZ-FE engine or 1HD-FTE engine

→ 3260 kg (7187 lb.)

- The load on either the front or rear axle resulting from distribution of the gross vehicle weight on both axles must not exceed the following.

Vehicles with 1HZ engine

Front 1550 kg (3417 lb.)

Rear 1950 kg (4299 lb.)

→ Vehicles with 2UZ-FE engine or 1HD-FTE engine

→ Front 1630 kg (3594 lb.)

→ Rear 1950 kg (4299 lb.)