


## Vehicle settings — — Maintenance

### (e) Initializing the Bluetooth® audio settings


You can initialize the settings.

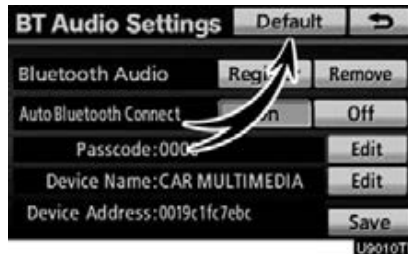


1. Touch “Default” on “BT Audio Settings” screen.




2. Touch “Yes”.

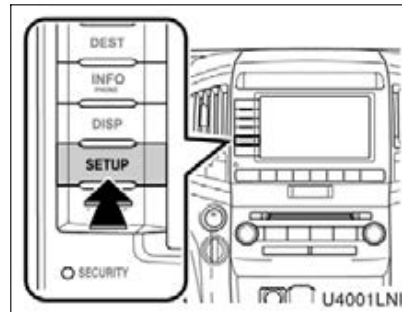

1. Push the “SETUP” button.

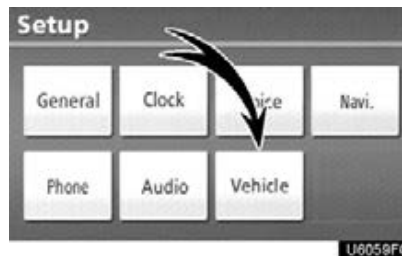

2. Touch “Vehicle”.

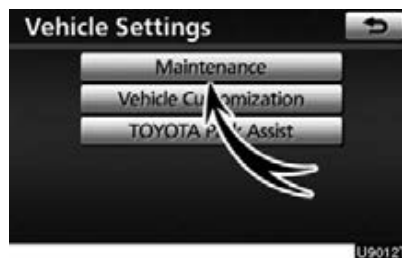

3. Touch “Maintenance”.

## SETUP

---



- Setting maintenance information (See page 334.)
- Setting dealer (See page 336.)

### (a) Maintenance information setting

1. Push the “SETUP” button.
2. Touch “Vehicle” on the “Setup” screen.
3. Touch “Maintenance” on the “Vehicle Settings” screen.



### 4. Touch the desired button.

For details of each touch screen button, see “INFORMATION ITEMS” on page 335.

“**Delete All**”: To cancel all conditions which have been inputted.

“**Reset All**”: To reset the item which has satisfied a condition.

“**Set Dealer**”: To register dealer information. (See “(b) Dealer setting” on page 336.)

“**Dealer Info.**”: To edit dealer information. (See “(b) Dealer setting” on page 336.)

“**Reminder**”: When this button is touched, the indicator is illuminated. The system is set to give maintenance information with the “Information” screen. (See page 27.)

When the vehicle needs to be serviced, the touch screen button color will change to orange.

#### INFORMATION ITEMS

- “**Engine oil**”: Replace engine oil
- “**Oil filter**”: Replace engine oil filter
- “**Rotation**”: Rotate tires
- “**Tires**”: Replace tires
- “**Battery**”: Replace battery
- “**Brake pad**”: Replace brake linings
- “**Wipers**”: Replace wiper blades
- “**Coolant**”: Replace engine coolant
- “**Brake oil**”: Replace brake fluid
- “**Trans. fluid**”: Replace transmission fluid
- “**Service**”: Scheduled maintenance
- “**Air filter**”: Replace air filter
- “**Personal**”: New information items can be created separately from provided ones.

#### 5. Input the conditions.

“**Date**”: The next maintenance date can be input.

“**Distance**”: The driving distance until the next maintenance check can be input.

“**Delete**”: To cancel the date and distance conditions.

“**Reset**”: To reset the date and distance conditions.

#### 6. Touch “OK”.

The screen then returns to the “Maintenance” screen.

#### INFORMATION

- *For scheduled maintenance information, please refer to the “Scheduled Maintenance Guide” or “Owner’s Manual Supplement”.*
- *Depending on driving or road conditions, the actual date and distance may differ from the stored date and distance in the system.*