

## TILT STEERING COLUMN REMOVAL



### 1. REMOVE STEERING WHEEL PAD

#### NOTICE:

- If the airbag connector is disconnected with the ignition switch at ON or ACC, diagnostic trouble codes will be recorded.
- Never use airbag parts from another vehicle. When replacing parts, replace with new parts.

- Place the front wheels facing straight ahead.
- Remove the steering wheel lower No. 2 and No. 3 cover.
- Using a torx socket wrench, loosen the 2 torx screws.

**HINT:** Loosen the 2 screws until the groove along the screw circumference catches on the screw case.

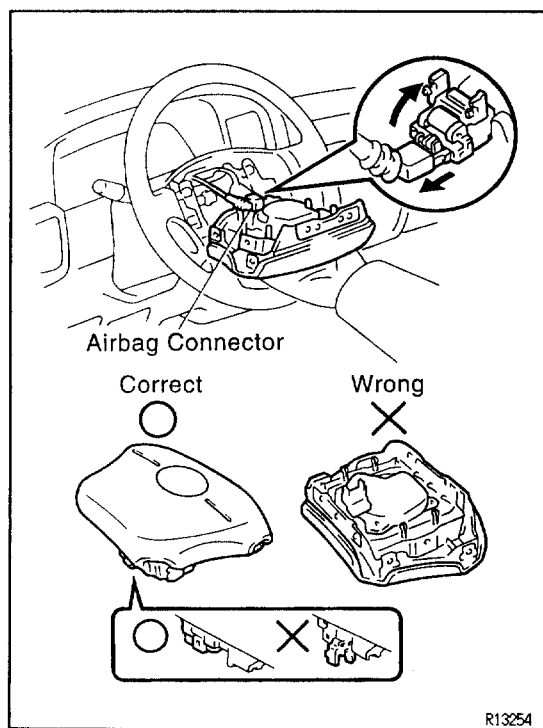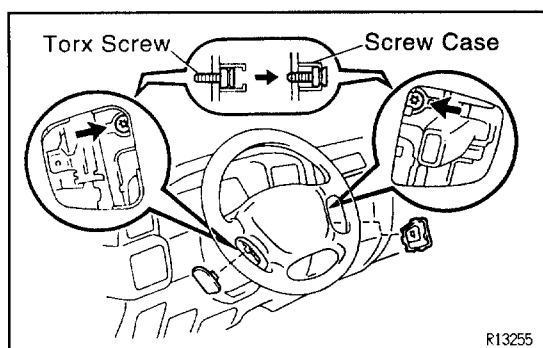

- Pull out the wheel pad from the steering wheel and disconnect the airbag connector.

#### CAUTION:

- When storing the wheel pad, keep the upper surface of the pad facing upward.
- Never disassemble the wheel pad.

**NOTICE:** When removing the wheel pad, take care not to pull the airbag wire harness.

### 2. REMOVE STEERING WHEEL

- Disconnect the connector.
- Remove the steering wheel set nut.
- Place matchmarks on the steering wheel and main shaft assembly.
- Using SST, remove the wheel.  
SST 09950-50010 (09951-05010, 09952-05010, 09953-05020, 09954-05020)

