



Push the terminal retainer down to the temporary lock position.

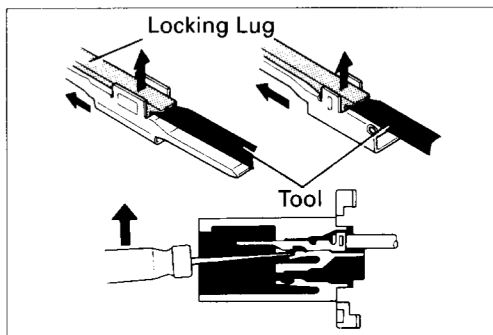

- (c) Release the locking lug from terminal and pull the terminal out from rear.

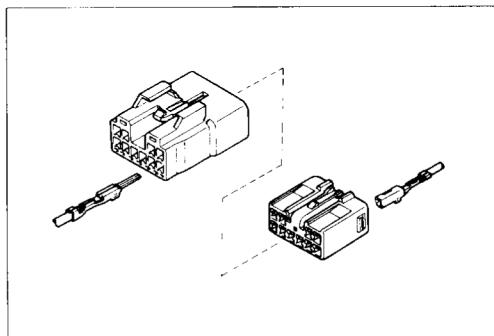


4. INSTALL TERMINAL TO CONNECTOR

- (a) Insert the terminal.

HINT:

1. Make sure the terminal is positioned correctly.
2. Insert the terminal until the locking lug locks firmly.
3. Insert the terminal with terminal retainer in the temporary lock position.

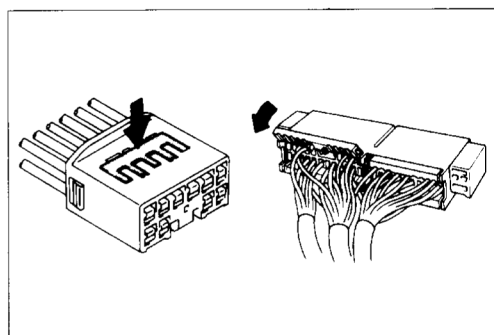

- (b) Push the secondary locking device or terminal retainer into the full lock position.

5. CONNECT CONNECTOR