

Last Modified: 11-27-2007		1.6 A
Service Category: Vehicle Interior	Section: Interior Panels/Trim	
Model Year: 2008	Model: LX570	Doc ID: RM000003B6S002X
Title: INTERIOR PANELS / TRIM: FRONT CONSOLE BOX (w/ Cool Box): REMOVAL (2008 LX570)		

REMOVAL

- 1. REMOVE ENGINE ROOM SIDE COVER LH INFO
- 2. REMOVE ENGINE ROOM SIDE COVER RH INFO
- 3. REMOVE UPPER RADIATOR SUPPORT SEAL INFO
- 4. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM INFO
- 5. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL (w/ LEXUS Link System)

CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

- w/ Navigation System:
After the engine switch is turned off, the HDD navigation system requires approximately 6 minutes to record various types of memory and settings. As a result, after turning the engine switch off, wait 6 minutes or more before disconnecting the cable from the negative (-) battery terminal.
- When disconnecting the cable, some systems need to be initialized after the cable is reconnected INFO

6. REMOVE FRONT SEAT ASSEMBLY LH

(a) Remove the front seat assembly LH INFO .


7. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

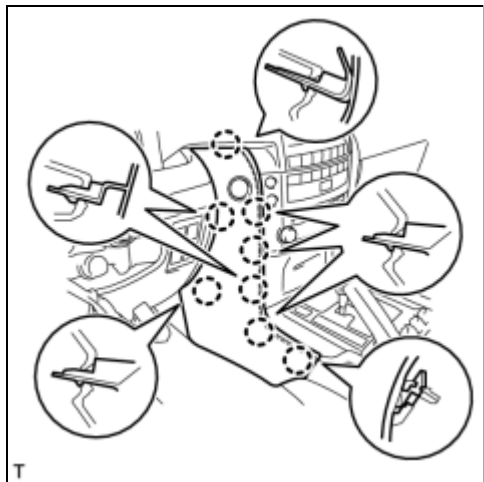

(a) Detach the 8 claws.

(b) Disconnect the connector and remove the panel pad.


8. REMOVE INNER NO. 1 INSTRUMENT PANEL BRACKET COVER LH

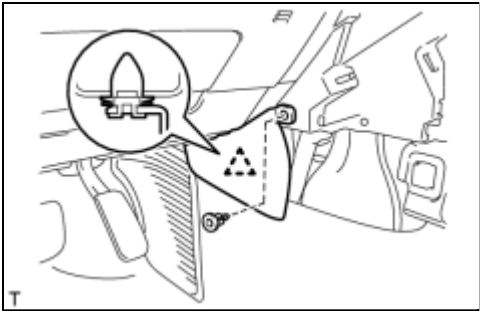

(a) Remove the clip.


(b) Detach the clip and remove the cover.

9. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

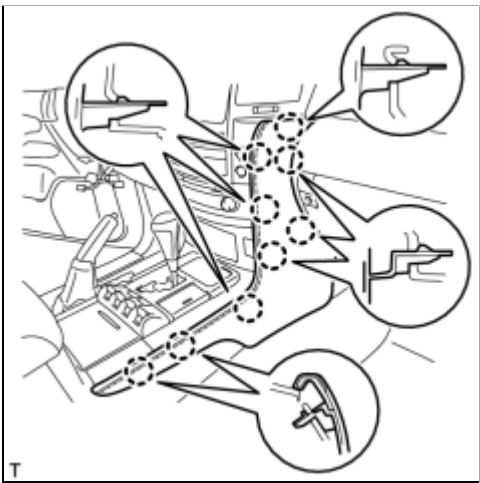


(a) Detach the 9 claws and remove the panel pad.

10. REMOVE INNER NO. 1 INSTRUMENT PANEL BRACKET COVER RH

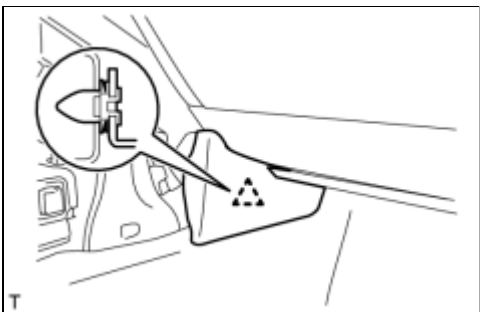


(a) Detach the clip and remove the cover.

11. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY

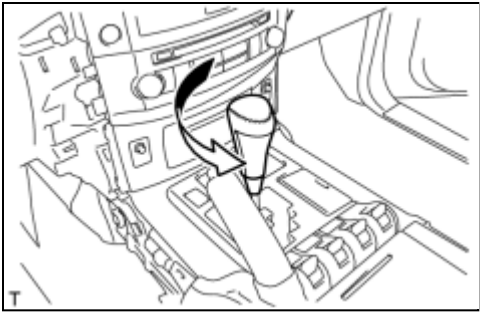

(a) Twist the shift lever knob in the direction indicated by the arrow and remove it.


12. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

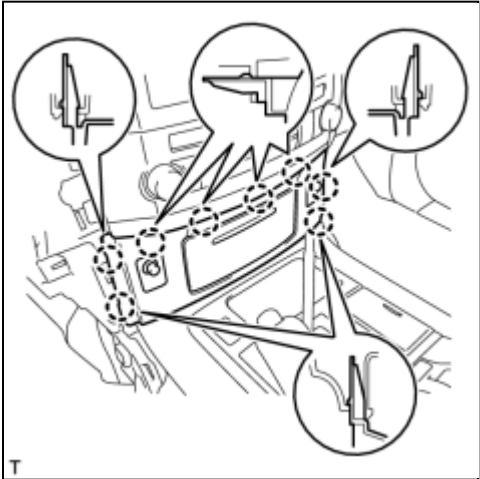

(a) Detach the 8 claws.


(b) Disconnect the connectors and remove the panel.

13. REMOVE PARKING BRAKE HOLE COVER

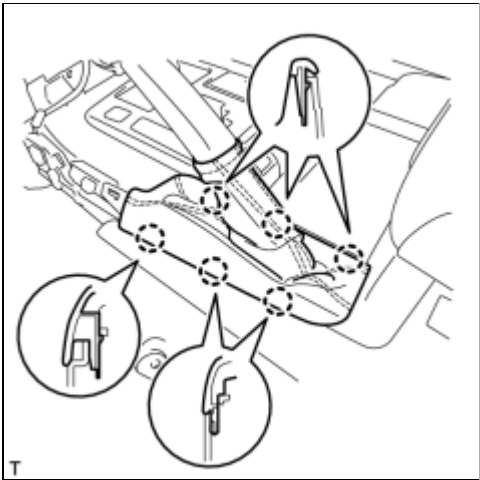


(a) Detach the 6 claws and remove the cover.

14. REMOVE CONSOLE CUP HOLDER BOX SUB-ASSEMBLY

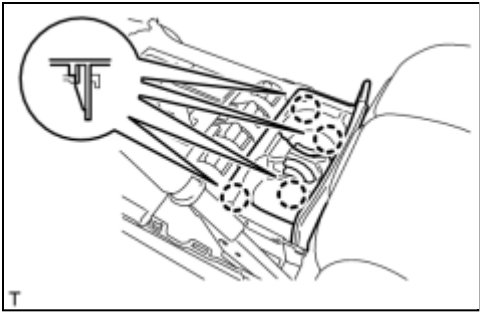

(a) Detach the 4 claws and remove the box.


15. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY

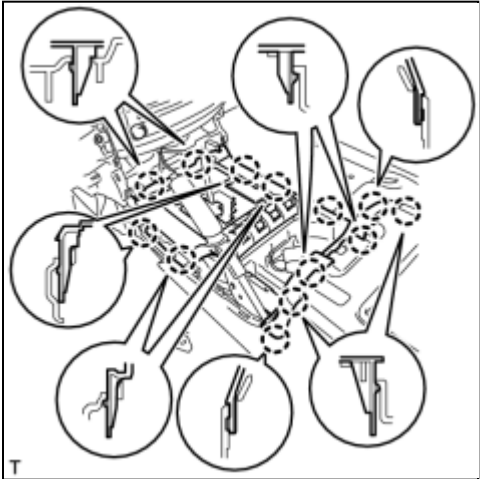

(a) Detach the 13 claws.


(b) Disconnect the connectors and remove the console panel.

16. REMOVE NO. 1 COOLER COVER

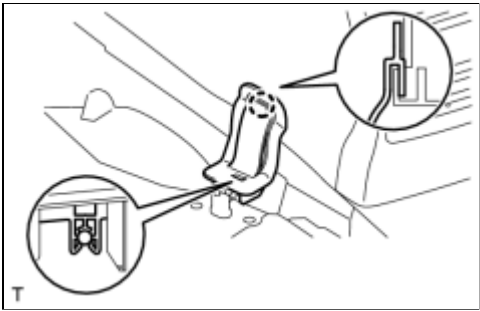

(a) Detach the clamp on the lower part of the cooler cover, and then pull the cooler cover upward to remove it.

17. REMOVE REAR CONSOLE END PANEL SUB-ASSEMBLY

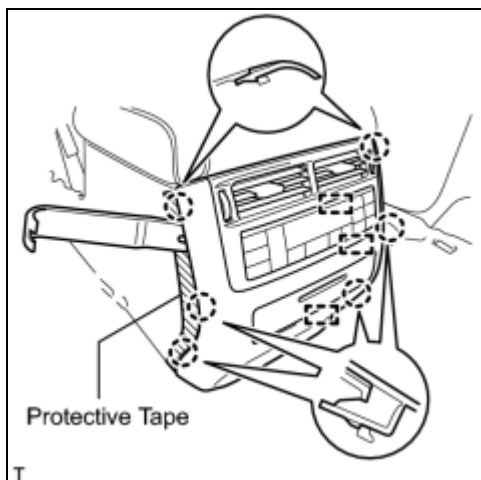

(a) Place protective tape as shown in the illustration.


(b) Using a moulding remover, detach the 6 claws.

(c) Remove the end panel and disconnect the connectors and 3 clamps.

18. REMOVE TELEPHONE ECU ASSEMBLY WITH BRACKET (w/ LEXUS Link System)

INFO

19. REMOVE COOLING BOX ASSEMBLY

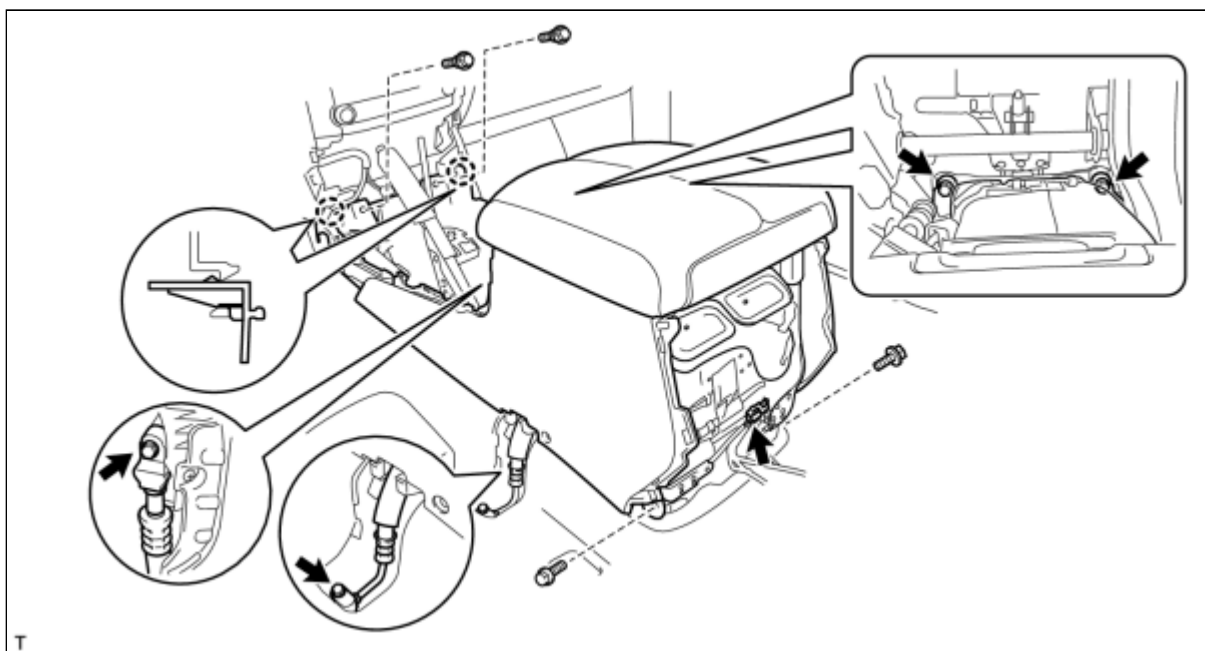

(a) Remove the 4 bolts and 2 screws.

(b) Remove the 2 bolts and disconnect the 2 cooler pipes.

(c) Remove the 2 O-rings from the cooler pipes.

(d) Disconnect the connector.

(e) Detach the 2 claws and remove the cooling box.

