


Last Modified: 2-7-2018	6.8:8.0.48	Doc ID: RM0000038K7004X
Model Year Start: 2009	Model: LX570	Prod Date Range: [08/2008 -]
Title: EXTERIOR PANELS / TRIM: RADIATOR GRILLE: REMOVAL; 2009 MY LX570 [08/2008 -]		

REMOVAL


1. REMOVE ENGINE ROOM SIDE COVER LH

- (a) Remove the 7 clips and engine room side cover.

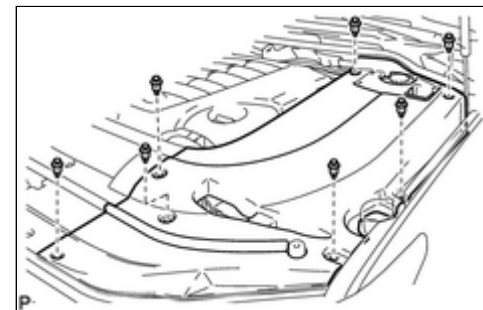


2. REMOVE ENGINE ROOM SIDE COVER RH

- (a) Remove the 7 clips and engine room side cover.

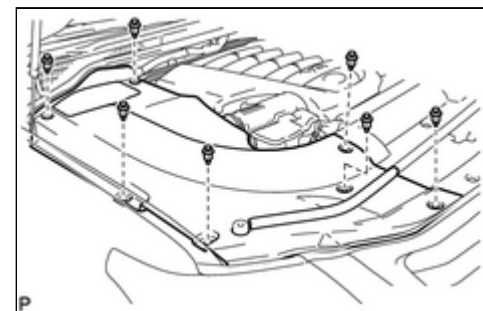

3. REMOVE UPPER RADIATOR SUPPORT SEAL

- (a) Remove the 3 clips and upper radiator support seal.

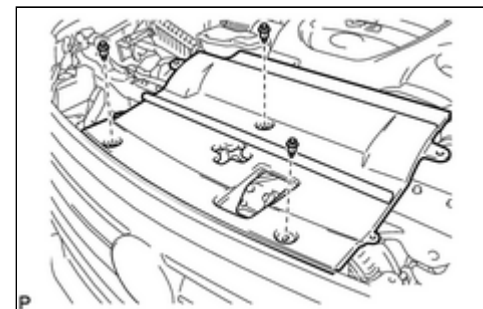

4. REMOVE RADIATOR GRILLE ASSEMBLY

- (a) Put protective tape around the radiator grille.
- (b) Remove the screw and 2 clips.
- (c) Detach the 5 clips and partially remove the upper radiator seal.
- (d) w/o Wide View Front Monitor System:
Detach the 12 claws and remove the radiator grille.
- (e) w/ Wide View Front Monitor System:
Detach the 12 claws, disconnect the connector and remove the radiator grille.

