



| PNC | Description | Part Number | Qty | Usage | FDate | TDate | FRev | TRev | |
|--------|---------------------------------------------------|-------------|-----|--------------------------------------------------|---------|---------|------|------|--|
| 36103A | BOLT (FOR TRANSFER CASE) | 91651-61030 | 03 | BJ60,FJ60,HJ60 : *10-1.25PX30-30,*10-1.25PX30-30 | 1980-08 | 1987-08 | 0455 | 0700 | |
| 36103A | BOLT (FOR TRANSFER CASE) | 91651-61040 | 08 | BJ60,FJ60,HJ60 : *10-1.25PX40-30,*10-1.25PX40-30 | 1980-08 | 1987-08 | 0455 | 0700 | |
| 36104 | FLANGE, COMPANION (FOR TRANSFER OUTPUT SHAFT) | 33309-60010 | 01 | BJ60,FJ60 : FR DRIVE | 1980-08 | 1984-11 | 0455 | 0514 | |
| 36104 | FLANGE, COMPANION (FOR TRANSFER OUTPUT SHAFT) | 33309-60020 | 01 | BJ60,FJ60 : RR DRIVE | 1980-08 | 1984-08 | 0455 | | |
| 36104B | DEFLECTOR, DUST (FOR TRANSFER OUTPUT SHAFT) | 33325-60010 | 01 | BJ60,FJ60,HJ60 : FR DRIVE | 1980-08 | 1987-08 | 0455 | 0700 | |
| 36104B | DEFLECTOR, DUST (FOR TRANSFER OUTPUT SHAFT) | 33325-60020 | 01 | BJ60,FJ60,HJ60 : RR DRIVE | 1980-08 | 1987-08 | 0455 | 0700 | |
| 36104D | NUT (FOR TRANSFER OUTPUT SHAFT) | 90179-22005 | 02 | BJ60,FJ60,HJ60 | 1980-08 | 1987-08 | 0455 | 0700 | |
| 36104E | WASHER, PLATE (FOR TRANSFER OUTPUT SHAFT) | 90201-22005 | 02 | BJ60,FJ60,HJ60 | 1980-08 | 1987-08 | 0455 | 0700 | |
| 36104F | BOLT (FOR TRANSFER OUTPUT SHAFT COMPANION FLANGE) | 90114-11124 | 08 | BJ60,FJ60,HJ60 | 1980-08 | 1987-08 | 0455 | 0700 | |
| 36111 | CASE, TRANSFER | 36103-60011 | 01 | BJ60,FJ60 | 1982-10 | 1984-11 | 0467 | 0514 | |
| 36111B | SEAL, OIL (FOR TRANSFER CASE) | 90311-48007 | 01 | BJ60,FJ60 | 1982-10 | 1984-11 | 0467 | 0514 | |
| 36111C | PLUG (FOR TRANSFER CASE) | 90331-16050 | 02 | BJ60,FJ60,HJ60 | 1980-08 | 1986-09 | 0455 | | |
| 36111E | GASKET (FOR TRANSFER CASE) | 90430-18007 | 02 | BJ60,FJ60 | 1981-09 | 1984-08 | | | |
| 36111F | PLUG (FOR TRANSFER CASE) | 90341-18006 | 01 | BJ60,FJ60,HJ60 : FILLER PLUG | 1983-04 | 1987-08 | | 0700 | |
| 36111F | PLUG (FOR TRANSFER CASE) | 90341-18057 | 01 | BJ60,FJ60,HJ60 : DRAIN PLUG | 1980-08 | 1987-08 | 0455 | 0700 | |
| 36111G | PIN, STRAIGHT (FOR TRANSFER CASE) | 90250-10006 | 02 | BJ60,FJ60,HJ60 : L=24,0D=10 | 1980-08 | 1987-08 | 0455 | 0700 | |
| 36111H | PLUG, BREATHER (FOR TRANSFER CASE) | 90930-03075 | 01 | BJ60,FJ60,HJ60 | 1980-08 | 1987-08 | 0455 | 0700 | |
| 36111Q | PIPE, OIL RECEIVER | 33124-36010 | 01 | BJ60,HJ60..5F | 1982-10 | 1987-08 | 0467 | 0700 | |
| 36119 | RECEIVER, TRANSFER OIL, NO.1 | 36119-60010 | 01 | BJ60,FJ60,HJ60 | 1980-08 | 1987-08 | 0455 | 0700 | |
| 36122 | COVER, TRANSFER CASE, NO.2 | 36122-60040 | 01 | BJ60,FJ60,HJ60 | 1980-08 | 1987-08 | 0455 | 0700 | |
| 36124 | COVER, TRANSFER POWER TAKE-OFF | 36124-60020 | 01 | BJ60,FJ60,HJ60 | 1980-08 | 1987-08 | 0455 | 0700 | |
| 36128 | DEFLECTOR, BREATHER OIL | 36128-60021 | 01 | BJ60,FJ60,HJ60 | 1982-10 | 1987-08 | 0467 | 0700 | |
| 36132 | RETAINER, OUTPUT SHAFT BEARING, REAR NO.1 | 36132-60020 | 01 | BJ60,FJ60,HJ60 | 1980-08 | 1987-08 | 0455 | 0700 | |
| 36132A | SEAL, OIL (FOR OUTPUT SHAFT RETAINER) | 90311-48003 | 01 | BJ60,FJ60 | 1980-08 | 1984-11 | 0455 | 0514 | |
| 36134 | RETAINER, OUTPUT SHAFT BEARING, FRONT | 36134-60020 | 01 | BJ60,FJ60,HJ60 | 1980-08 | 1987-08 | 0455 | 0700 | |

| PNC | Description | Part Number | Qty | Usage | FDate | TDate | FRev | TRev | |
|--------|-----------------------------------------------------|-------------|-----|----------------|---------|---------|------|------|--|
| 36134A | SEAL, OIL (FOR OUTPUT SHAFT BEARING FRONT RETAINER) | 90311-48002 | 01 | BJ60,FJ60 | 1980-08 | 1984-11 | 0455 | 0514 | |
| 36142 | GASKET, TRANSFER COVER | 36142-60030 | 01 | BJ60,FJ60,HJ60 | 1980-08 | 1987-08 | 0455 | 0700 | |
| 36143 | GASKET, TRANSFER CASE, FRONT | 33142-60020 | 01 | BJ60,FJ60..4F | 1980-08 | 1985-04 | 0455 | 0554 | |
| 36143 | GASKET, TRANSFER CASE, FRONT | 33142-60030 | 01 | BJ60,HJ60..5F | 1982-10 | 1987-08 | 0467 | 0700 | |
| 36144 | GASKET, TRANSFER POWER TAKE-OFF COVER | 36144-60020 | 01 | BJ60,FJ60,HJ60 | 1980-08 | 1987-08 | 0455 | 0700 | |
| 36147A | GASKET, TRANSFER CASE | 36143-60020 | 01 | BJ60,FJ60,HJ60 | 1980-08 | 1987-08 | 0455 | 0700 | |
| 36152 | GASKET, OUTPUT SHAFT BEARING RETAINER | 36152-60030 | 01 | BJ60,FJ60,HJ60 | 1980-08 | 1987-08 | 0455 | 0700 | |
| | BOLT | 90119-08353 | | | | | | | |
| | BOLT, W/WASHER | 90119-10262 | | | | | | | |
| | BOLT, W/WASHER | 90119-12046 | | | | | | | |
| | BOLT, W/WASHER | 90119-12047 | | | | | | | |
| | BOLT, W/WASHER | 90119-12048 | | | | | | | |
| | BOLT, W/WASHER | 91611-60610 | | | | | | | |
| | BOLT, W/WASHER | 91651-60830 | | | | | | | |
| | BOLT,W/WASHER | 91611-41020 | | | | | | | |
| | OBS | 91659-61240 | | | | | | | |
| | RPL 9011912047 | 90119-12045 | | | | | | | |
| | STANDARD PART | 90119-08268 | | | | | | | |
| | STANDARD PART | 90119-10197 | | | | | | | |
| | STANDARD PART | 90119-12022 | | | | | | | |
| | STANDARD PART | 90119-12023 | | | | | | | |
| | STANDARD PART | 91659-61285 | | | | | | | |