


STARTING AND IGNITION

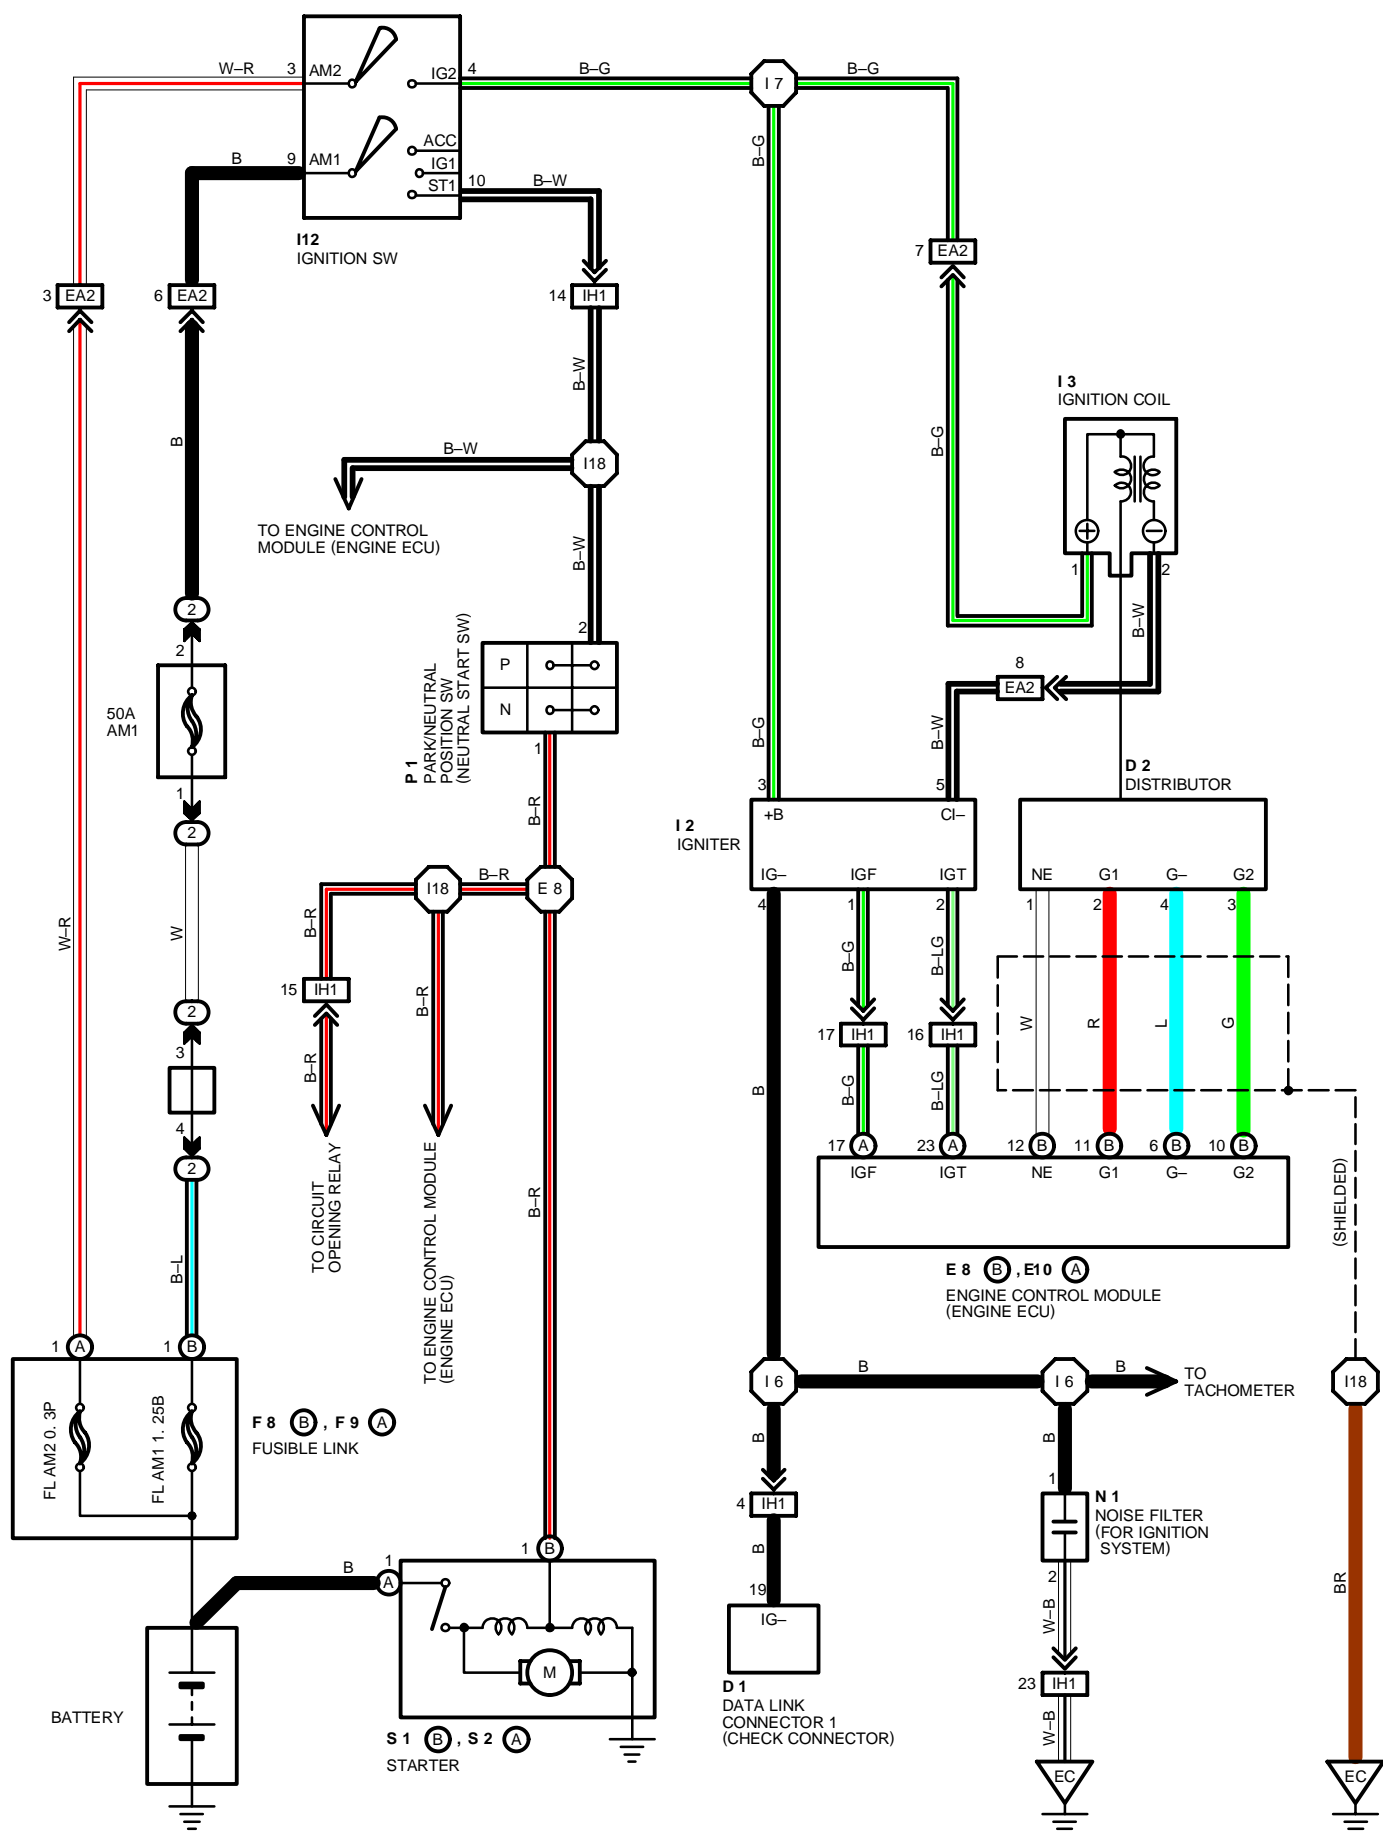

SERVICE HINTS

I12 IGNITION SW

- 9-10 : CLOSED WITH IGNITION SW AT **ST** POSITION
 3-4 : CLOSED WITH IGNITION SW AT **ON** OR **ST** POSITION

S 1(B), S 2(A) STARTER

POINTS CLOSED WITH PARK/NEUTRAL POSITION SW (NEUTRAL START SW) AT **P** OR **N** POSITION AND IGNITION SW AT **ST** POSITION

P 1 PARK/NEUTRAL POSITION SW (NEUTRAL START SW)

- 1-2 : CLOSED WITH A/T SHIFT LEVER IN **P** OR **N** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
D 1	22	F 9	A	P 1	22
D 2	22	I 2	22	S 1	B
E 8	B	I 3	22	S 2	A
E10	A	I12	23		
F 8	B	N 1	22		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA2	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
IH1	28	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EC	26	AIR INTAKE CHAMBER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 8	26	ENGINE WIRE	I 7	28	COWL WIRE
I 6	28	COWL WIRE	I18	28	ENGINE WIRE

