


STARTER > INSTALLATION

for Preparation [Click here](#)

1. INSTALL STARTER ASSEMBLY


- a. Install the flywheel housing side cover.

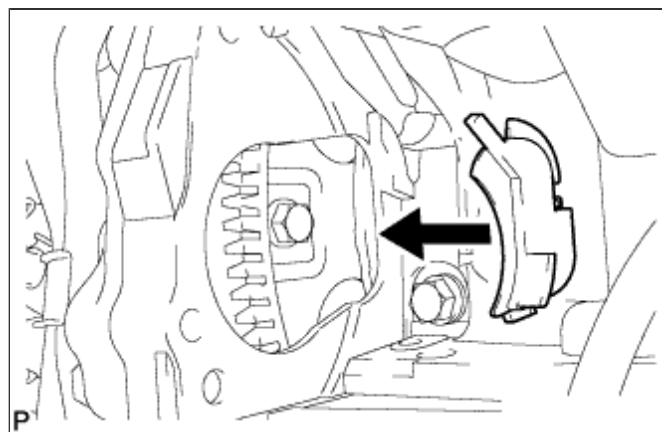

- b. Install the starter with the 2 bolts.

Torque:

37 N*m{ 377 kgf*cm , 27 ft.*lbf }

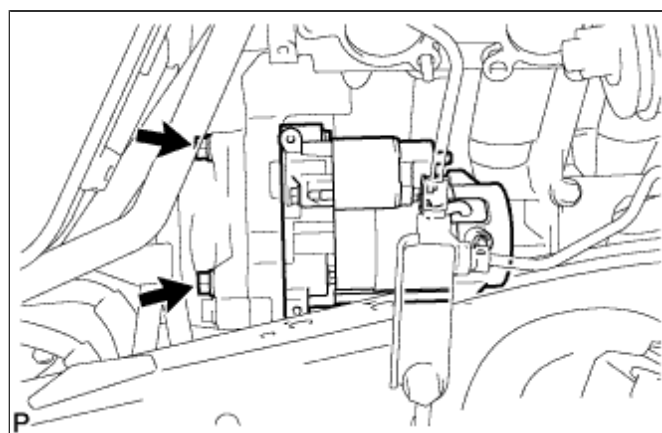


- c. Install the starter wire with the nut.

Torque:

9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

- d. Connect the starter connector.

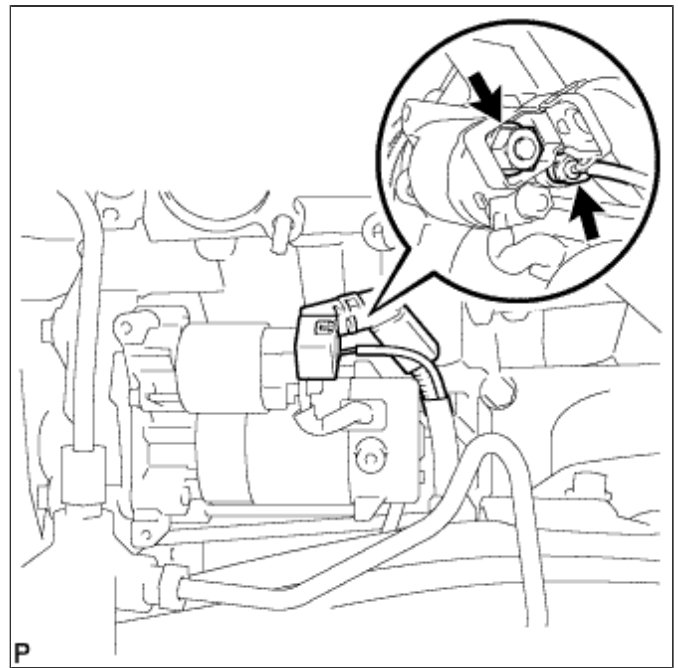


2. INSTALL STARTER COVER

- a. Install the starter cover with the 3 bolts.

Torque:

12 N*m{ 122 kgf*cm , 9 ft.*lbf }

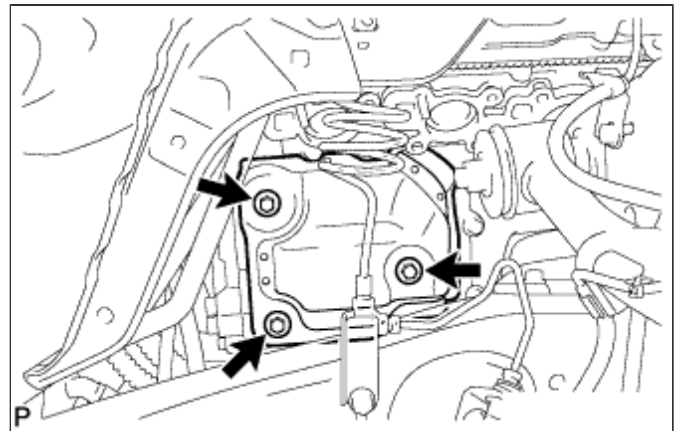

3. INSTALL EXHAUST MANIFOLD SUB-ASSEMBLY RH

- a. Install the exhaust manifold RH ([Click here](#)).

4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected ([Click here](#)).

