
## Position of Parts in Engine Compartment

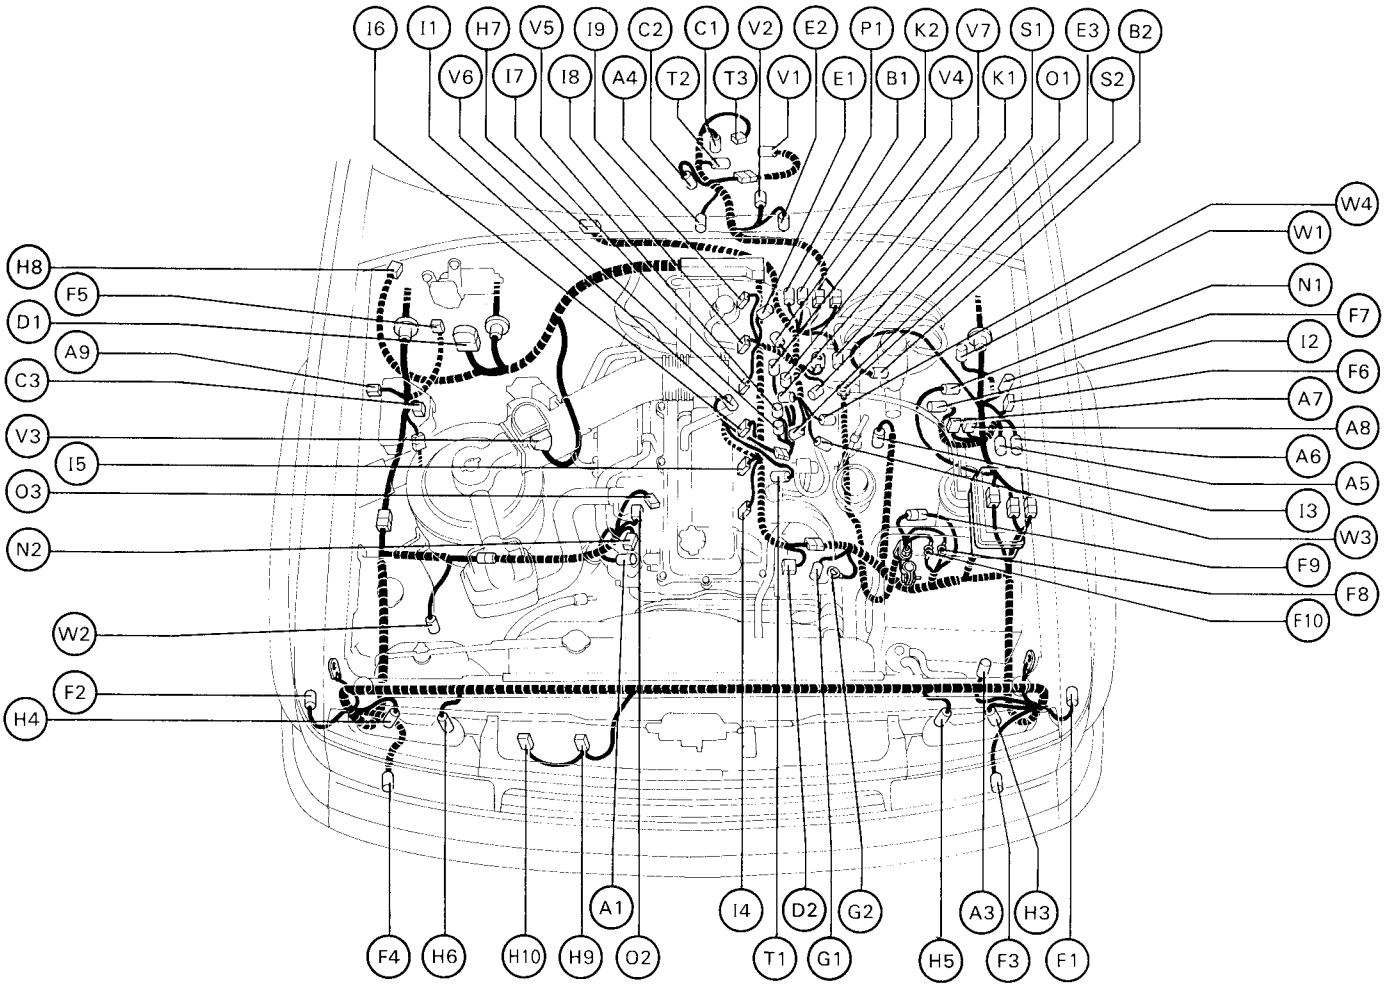


A 1 A/C Magnetic Clutch
A 3 A/C Pressure SW
A 4 A/T Fluid Temp. Sensor
A 5 ABS Actuator
A 6 ABS Actuator
A 7 ABS Relay
A 8 ABS Relay
A 9 Auto Antenna Control Motor

B 1 Back–Up Light and A/T Indicator SW
B 2 Brake Fluid Level SW

C 1 Center Diff. Lock Control Motor
C 2 Center Diff. Lock Indicator SW
C 3 Cruise Control Actuator

D 1 Data Link Connector 1 (Check Connector)
D 2 Distributor

E 1 EGR Gas Temp. Sensor (for California) or Short Pin (Ex. California)
E 2 Electronic Controlled Transmission Solenoid
E 3 Engine Coolant Temp. Sensor (EFI Water Temp. Sensor)

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Turn Signal Light LH
F 4 Front Turn Signal Light RH
F 5 Front Wiper Control Motor
F 6 Fuel Pump Relay
F 7 Fuel Pump Resistor
F 8 Fusible Link (AM1)
F 9 Fusible Link (AM2)
F 10 Fusible Link (Main)

G 1 Generator (Alternator)
G 2 Generator (Alternator)

H 3 Headlight No. 1 LH
H 4 Headlight No. 1 RH
H 5 Headlight No. 2 LH
H 6 Headlight No. 2 RH
H 7 Heated Oxygen Sensor Left (Oxygen Sensor Left)
H 8 Heated Oxygen Sensor Right (Oxygen Sensor Right)
H 9 Horn LH
H 10 Horn RH

I 1 Idle Air Control Valve (ISC Valve)
I 2 Igniter
I 3 Ignition Coil
I 4 Injector No. 1
I 5 Injector No. 2
I 6 Injector No. 3
I 7 Injector No. 4
I 8 Injector No. 5
I 9 Injector No. 6

K 1 Knock Sensor Front
K 2 Knock Sensor Rear

N 1 Noise Filter (for Ignition System)
N 2 Noise Filter (for Oil Pressure Sender Gauge)

O 1 Oil Level Sensor
O 2 Oil Pressure Sender Gauge
O 3 Oil Pressure Sender Gauge

P 1 Park/Neutral Position SW (Neutral Start SW)


S 1 Starter
S 2 Starter

T 1 Throttle Position Sensor
T 2 Transfer L4 Position SW
T 3 Transfer Neutral Position SW

V 1 Vehicle Speed Sensor (for Combination Meter) (Speed Sensor (for Combination Meter))
V 2 Vehicle Speed Sensor (for Electronic Controlled Transmission) (Speed Sensor (for Electronic Controlled Transmission))
V 3 Volume Air Flow (Air Flow Meter)
V 4 VSV (for EGR)
V 5 VSV (for EVAP)
V 6 VSV (for Fuel Pressure Control)
V 7 VSV (for PAIR)


W 1 Washer Change Valve
W 2 Washer Motor
W 3 Water Temp. Sender
W 4 Water Temp. SW (for A/C)

# Position of Parts in Instrument Panel

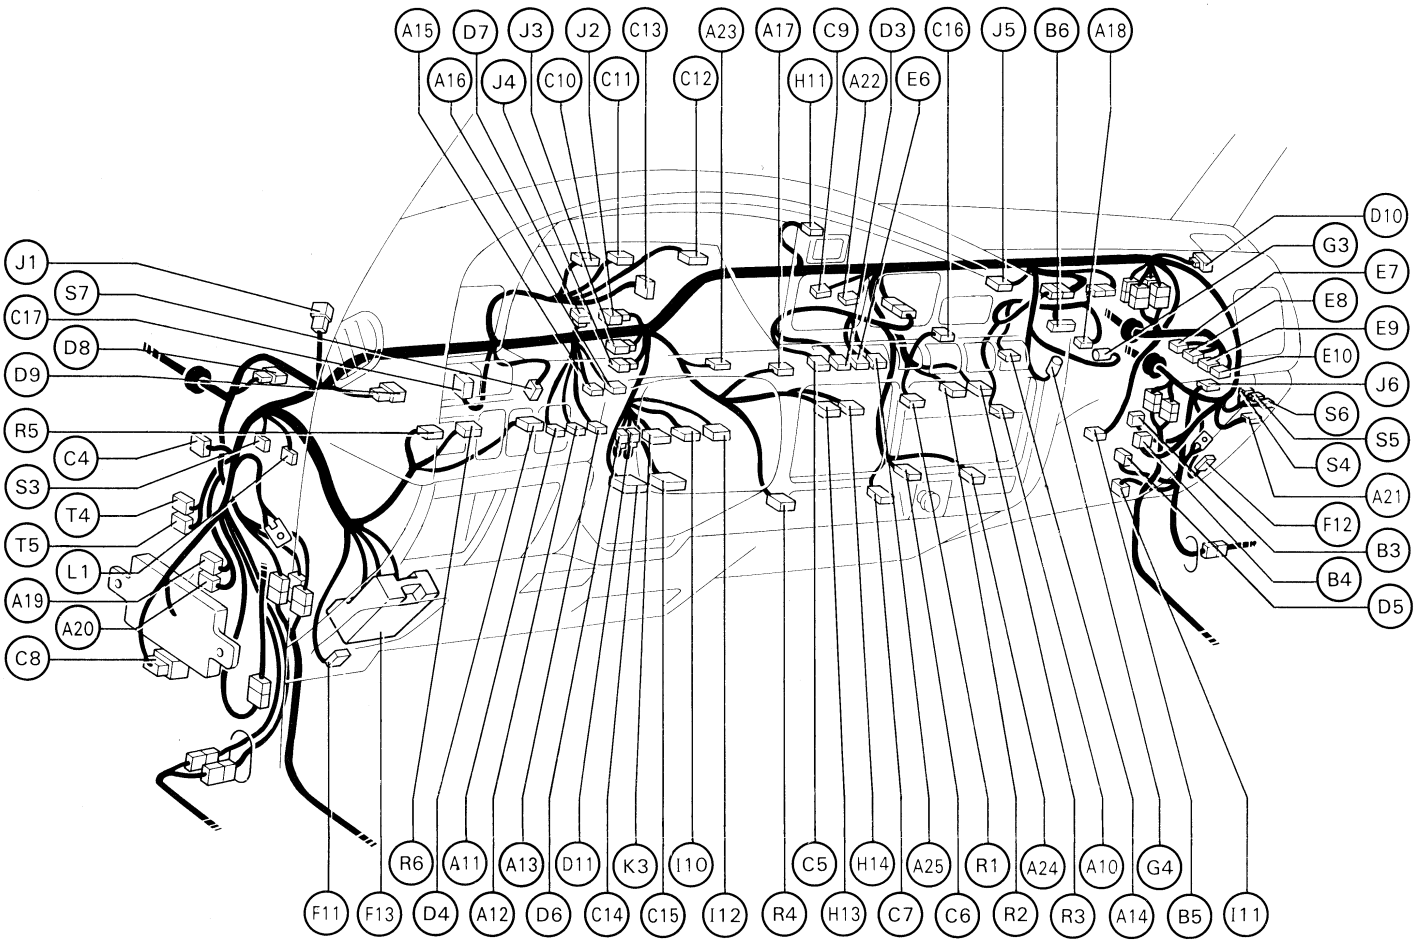


| | | |
|---|---|---|
| A | 10 | A/C Amplifier |
| A | 11 | A/C Connector (Not for Use in North America) |
| A | 12 | A/C Connector (Not for Use in North America) |
| A | 13 | A/C Connector (Not for Use in North America) |
| A | 14 | A/C Cut Relay (for Water Temp.) |
| A | 15 | A/C Short Connector |
| A | 16 | A/C Short Connector |
| A | 17 | A/C System Amplifier |
| A | 18 | A/C Thermistor |
| A | 19 | ABS ECU |
| A | 20 | ABS ECU |
| A | 21 | Air Inlet Servo Motor |
| A | 22 | Air Mix Control Servo Motor |
| A | 23 | Air Vent Mode Control Servo Motor |
| A | 24 | Ashtray Illumination |
| A | 25 | Auto Antenna Control SW |
| B | 3 | Blower Motor (for A/C) |
| B | 4 | Blower Motor (for Heater) |
| B | 5 | Blower Resistor |
| B | 6 | Blower Speed Control Relay |
| C | 4 | Center Diff. Lock Control Relay |
| C | 5 | Center Diff. Lock Control SW (w/o ABS) or Short Pin (w/ABS) |
| C | 6 | Cigarette Lighter |
| C | 7 | Cigarette Lighter Illumination |
| C | 8 | Circuit Opening Relay |
| C | 9 | Clock |
| C | 10 | Combination Meter |
| C | 11 | Combination Meter |
| C | 12 | Combination Meter |
| C | 13 | Combination Meter (for A/T Indicator) |
| C | 14 | Combination SW |
| C | 15 | Combination SW |
| C | 16 | Cooling Fan (for Radio and Tape Player) |
| C | 17 | Cruise Control ECU |
| D | 3 | Defogger SW |
| D | 4 | Diff. Lock Control SW |
| D | 5 | Diff. Lock ECU |
| D | 6 | Diode (for Front Washer) |
| D | 7 | Diode (for Headlight) |
| D | 8 | Diode (for Interior Light) |
| D | 9 | Diode (for Interior Light) |
| D | 10 | Diode (for Neutral Indicator) |
| D | 11 | Diode (for Rear Washer) |
| E | 6 | Electronic Controlled Transmission Pattern Select SW |
| E | 7 | Engine Control Module (Engine ECU) |
| E | 8 | Engine Control Module (Engine ECU) |
| E | 9 | Engine Control Module (Engine ECU) |
| E | 10 | Engine Control Module (Engine ECU) |
| F | 11 | Front Speaker LH |
| F | 12 | Front Speaker RH |
| F | 13 | Fuse Block |
| G | 3 | Glove Box Light |
| G | 4 | Glove Box Light SW |
| H | 11 | Hazard SW |
| H | 13 | Heater Control SW and A/C SW |
| H | 14 | Heater Control SW and A/C SW |
| I | 10 | Ignition Key Cylinder Light |
| I | 11 | Ignition Key Cylinder Light Relay |
| I | 12 | Ignition SW and Unlock Warning SW |
| J | 1 | Junction Connector |
| J | 2 | Junction Connector |
| J | 3 | Junction Connector |
| J | 4 | Junction Connector |
| J | 5 | Junction Connector |
| J | 6 | Junction Connector |
| K | 3 | Key Interlock Solenoid |
| L | 1 | Light Retainer Relay |
| R | 1 | Radio and Player |
| R | 2 | Radio and Player |
| R | 3 | Radio and Player |
| R | 4 | Rear Heater SW |
| R | 5 | Remote Control Mirror SW |
| R | 6 | Rheostat |
| S | 3 | Seat Belt Warning Relay |
| S | 4 | Stereo Component Amplifier |
| S | 5 | Stereo Component Amplifier |
| S | 6 | Stereo Component Amplifier |
| S | 7 | Stop Light SW |
| T | 4 | Transmission Control Module (Electronic Controlled Transmission ECU) |
| T | 5 | Transmission Control Module (Electronic Controlled Transmission ECU) |

## Position of Parts in Body

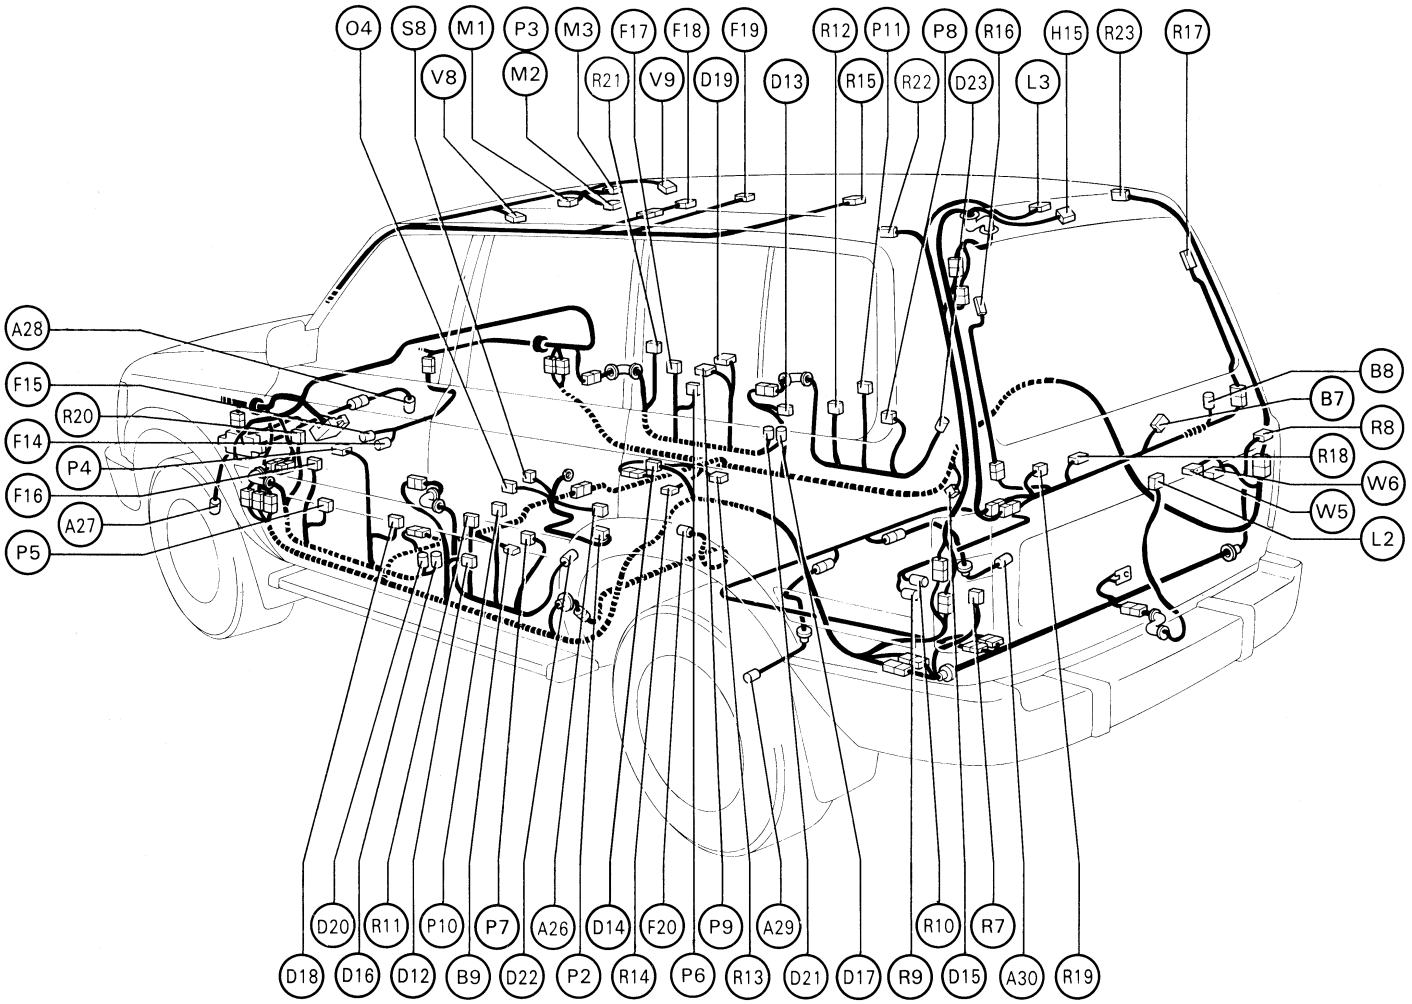


A 26 ABS Deceleration Sensor
A 27 ABS Speed Sensor Front LH
A 28 ABS Speed Sensor Front RH
A 29 ABS Speed Sensor Rear LH
A 30 ABS Speed Sensor Rear RH

B 7 Back Door Courtesy SW
B 8 Back Door Lock Control Motor
B 9 Buckle SW (w/o Power Seat)

D 12 Door Courtesy SW Front LH
D 13 Door Courtesy SW Front RH
D 14 Door Courtesy SW Rear LH
D 15 Door Courtesy SW Rear RH
D 16 Door Key Lock and Unlock SW LH
D 17 Door Key Lock and Unlock SW RH
D 18 Door Lock Control Relay
D 19 Door Lock Control SW RH
D 20 Door Lock Motor Front LH
D 21 Door Lock Motor Front RH
D 22 Door Lock Motor Rear LH
D 23 Door Lock Motor Rear RH

F 14 Front Diff. Lock Control Motor
F 15 Front Diff. Lock Position SW
F 16 Front Door Speaker LH
F 17 Front Door Speaker RH
F 18 Front Interior Light (w/ Moon Roof)
F 19 Front Interior Light (w/o Moon Roof)
F 20 Fuel Sender and Pump

H 15 High Mount Stop

L 2 License Plate Light
L 3 Luggage Compartment Light

M 1 Moon Roof Control Relay
M 2 Moon Roof Control SW and Personal Light
M 3 Moon Roof Limit SW and Motor

O 4 O/D Main SW

P 2 Parking Brake SW
P 3 Personal Light (w/o Moon Roof)
P 4 Power Window Master SW
P 5 Power Window Motor Front LH
P 6 Power Window Motor Front RH
P 7 Power Window Motor Rear LH
P 8 Power Window Motor Rear RH
P 9 Power Window SW Front RH
P 10 Power Window SW Rear LH
P 11 Power Window SW Rear RH


R 7 Rear Combination Light LH
R 8 Rear Combination Light RH
R 9 Rear Diff. Lock Control Motor
R 10 Rear Diff. Lock Position SW
R 11 Rear Door Speakers LH
R 12 Rear Door Speakers RH
R 13 Rear Heater
R 14 Rear Heater Relay
R 15 Rear Interior Light
R 16 Rear Window Defogger (+)
R 17 Rear Window Defogger (–)
R 18 Rear Wiper Control Motor
R 19 Rear Wiper Control Relay
R 20 Remote Control Mirror LH
R 21 Remote Control Mirror RH
R 22 Roof Speaker LH
R 23 Roof Speaker RH

S 8 Shift Lock ECU

V 8 Vanity Light LH
V 9 Vanity Light RH

W 5 Woofer Speaker
W 6 Woofer Speaker Amplifier

## Position of Parts in Seat

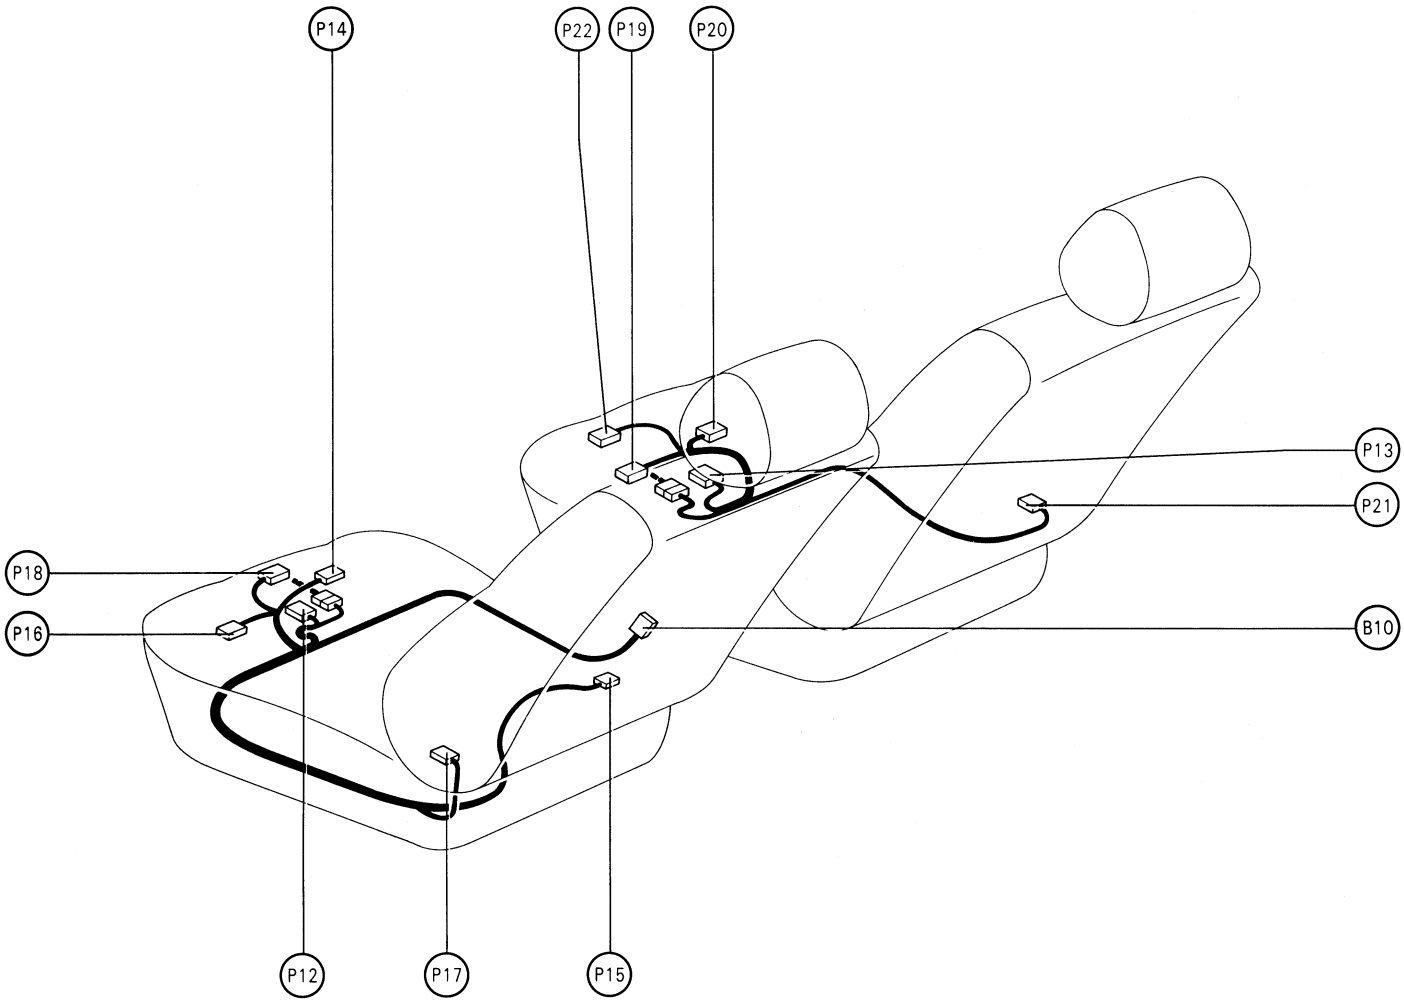


B 10 Buckle SW LH (w/ Power Seat)

P 12 Power Seat Control SW (for Driver's Seat)
P 13 Power Seat Control SW (for Passenger's Seat)
P 14 Power Seat Motor (for Driver's Seat Front Vertical Control)
P 15 Power Seat Motor (for Driver's Seat Lumbar Support Control)
P 16 Power Seat Motor (for Driver's Seat Rear Vertical Control)
P 17 Power Seat Motor (for Driver's Seat Reclining Control)
P 18 Power Seat Motor (for Driver's Seat Slide Control)
P 19 Power Seat Motor (for Passenger's Seat Front Vertical Control)
P 20 Power Seat Motor (for Passenger's Seat Rear Vertical Control)
P 21 Power Seat Motor (for Passenger's Seat Reclining Control)
P 22 Power Seat Motor (for Passenger's Seat Slide Control)