
Position of Parts in Engine Compartment

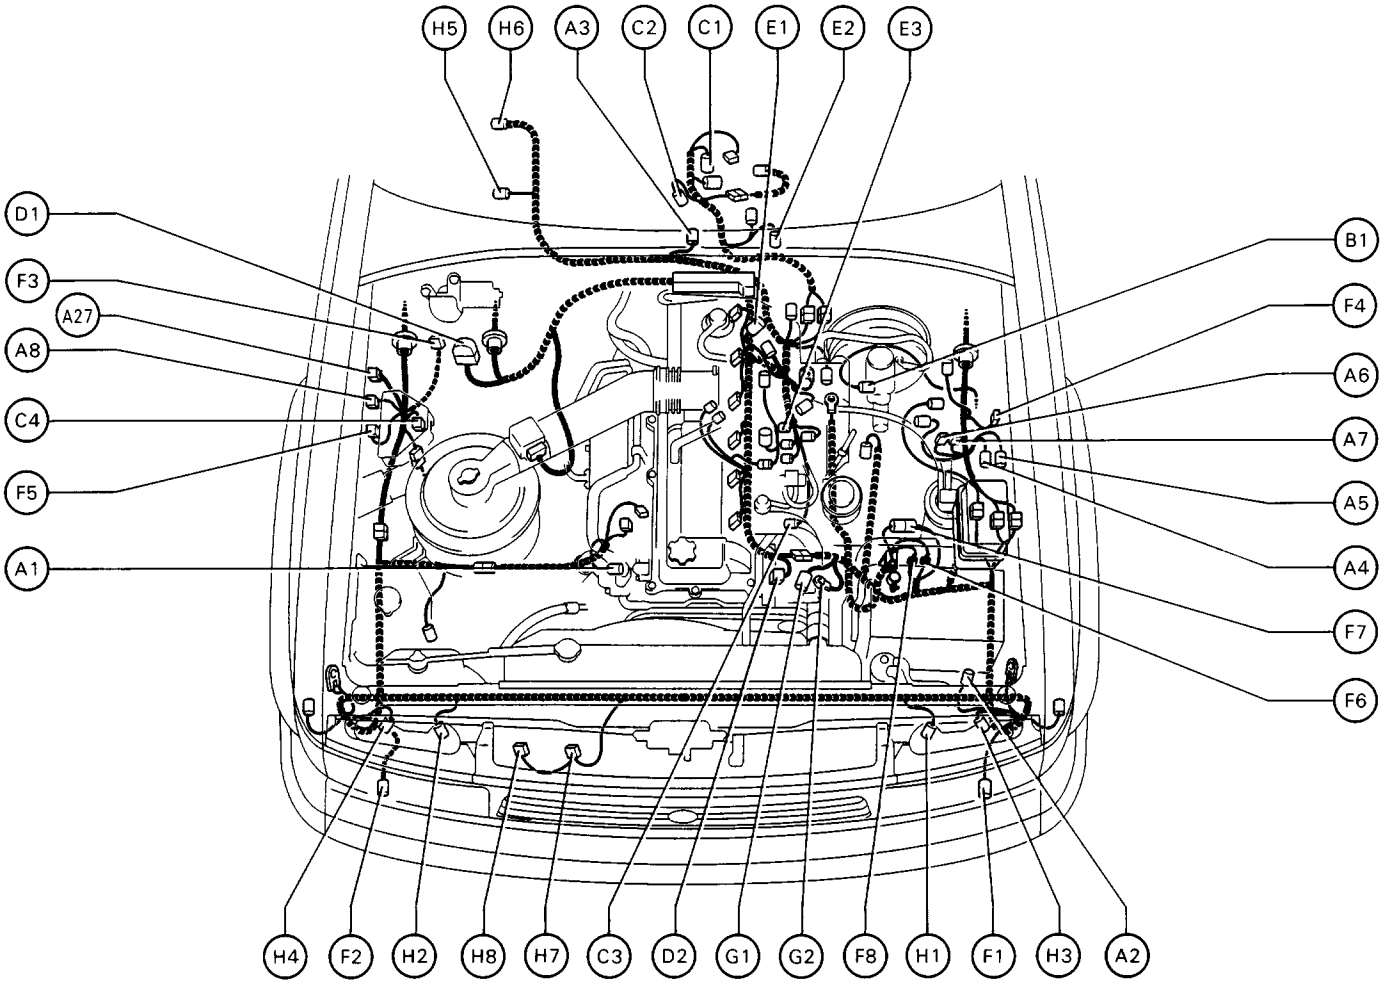

A1 A/C Magnetic Clutch
A2 A/C Dual Pressure SW
A3 A/T Fluid Temp. Sensor
A4 ABS Actuator
A5 ABS Actuator
A6 ABS Relay
A7 ABS Relay
A8 Auto Antenna Motor
A27 Auto Antenna Relay

B1 Brake Fluid Level Warning SW

C1 Center Diff. Lock Control Motor
C2 Center Diff. Lock Indicator SW
C3 Crankshaft Position Sensor
C4 Cruise Control Actuator

D1 Data Link Connector 1
D2 Distributor


E1 EGR Gas Temp. Sensor
E2 Electronically Controlled Transmission Solenoid
E3 Engine Coolant Temp. Sensor

F1 Front Turn Signal Light RH
F2 Front Turn Signal Light RH
F3 Front Wiper Motor
F4 Fuel Pump Relay
F5 Fuel Pump Resistor
F6 Fusible Link (AM1)
F7 Fusible Link (AM2)
F8 Fusible Link (Main)

G1 Generator
G2 Generator

H1 Headlight Hi LH
H2 Headlight Hi RH
H3 Headlight Lo LH
H4 Headlight Lo RH
H5 Heated Oxygen Sensor (Bank 1 Sensor 1)
H6 Heated Oxygen Sensor (Bank 1 Sensor 2)
H7 Horn LH (High)
H8 Horn RH (Low)

Position of Parts in Engine Compartment

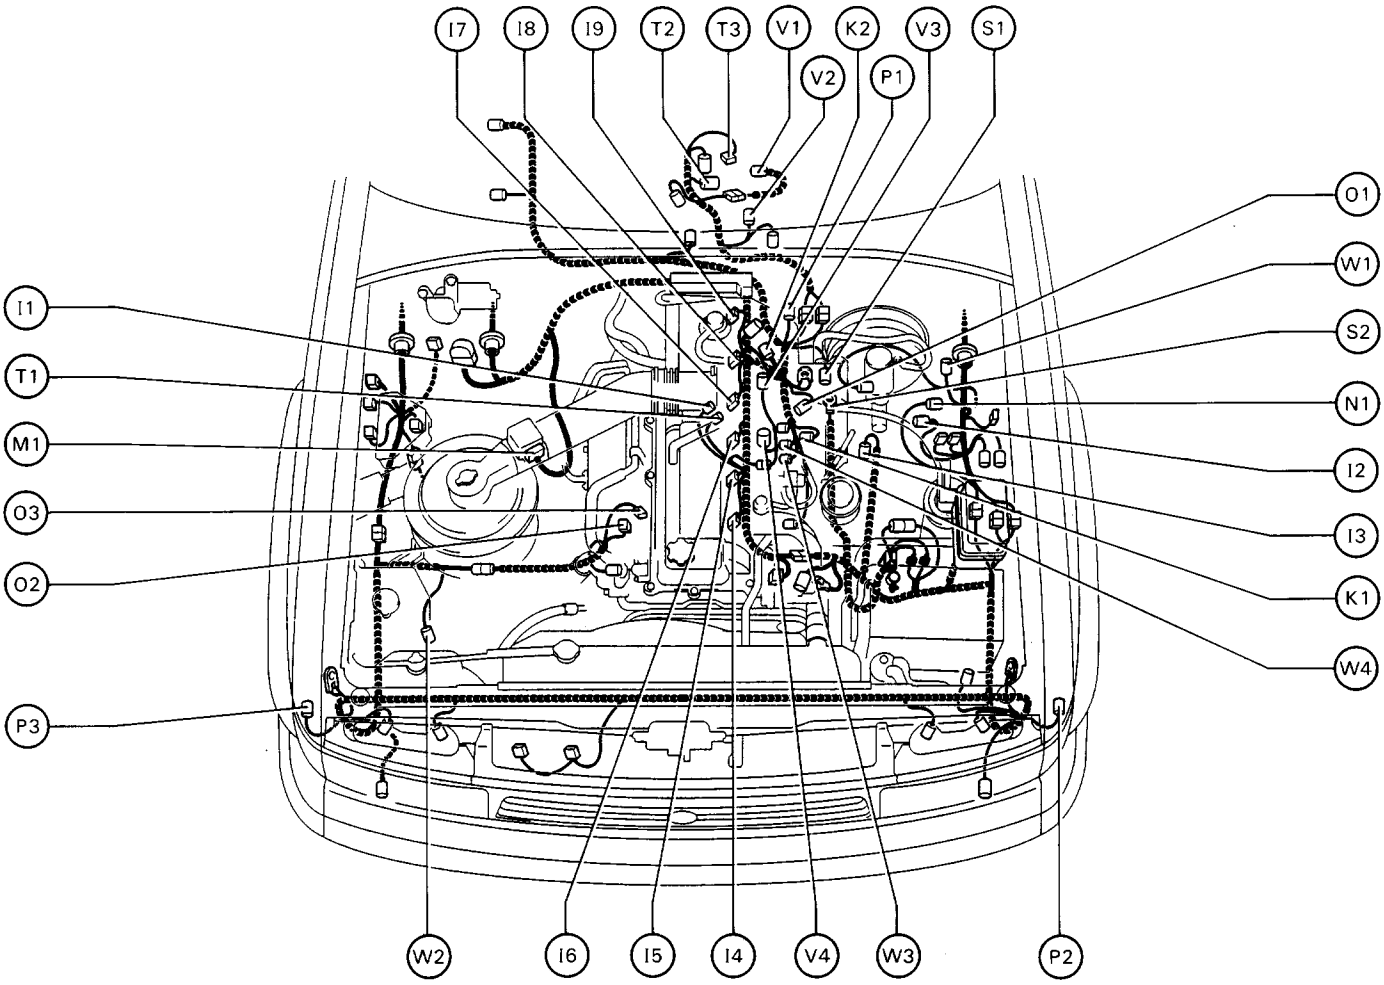

I1 Idle Air Control Valve
I2 Igniter
I3 Ignition Coil
I4 Injector No. 1
I5 Injector No. 2
I6 Injector No. 3
I7 Injector No. 4
I8 Injector No. 5
I9 Injector No. 6

K1 Knock Sensor 1
K2 Knock Sensor 2

M1 Mass Air Flow Meter

N1 Noise Filter (Ignition System)

O1 Oil Level Warning SW
O2 Oil Pressure Sender
O3 Oil Pressure Sender

P1 Park/Neutral Position SW
P2 Parking Light LH
P3 Parking Light RH


S1 Starter
S2 Starter

T1 Throttle Position Sensor
T2 Transfer L4 Position SW
T3 Transfer Neutral Position SW

V1 Vehicle Speed Sensor (Combination Meter)
V2 Vehicle Speed Sensor (Electronically Controlled Transmission)
V3 VSV (EGR)
V4 VSV (Fuel Pressure Control)

W1 Washer Change Valve
W2 Washer Motor
W3 Water Temp. Sender
W4 Water Temp. SW (A/C)

Position of Parts in Instrument Panel

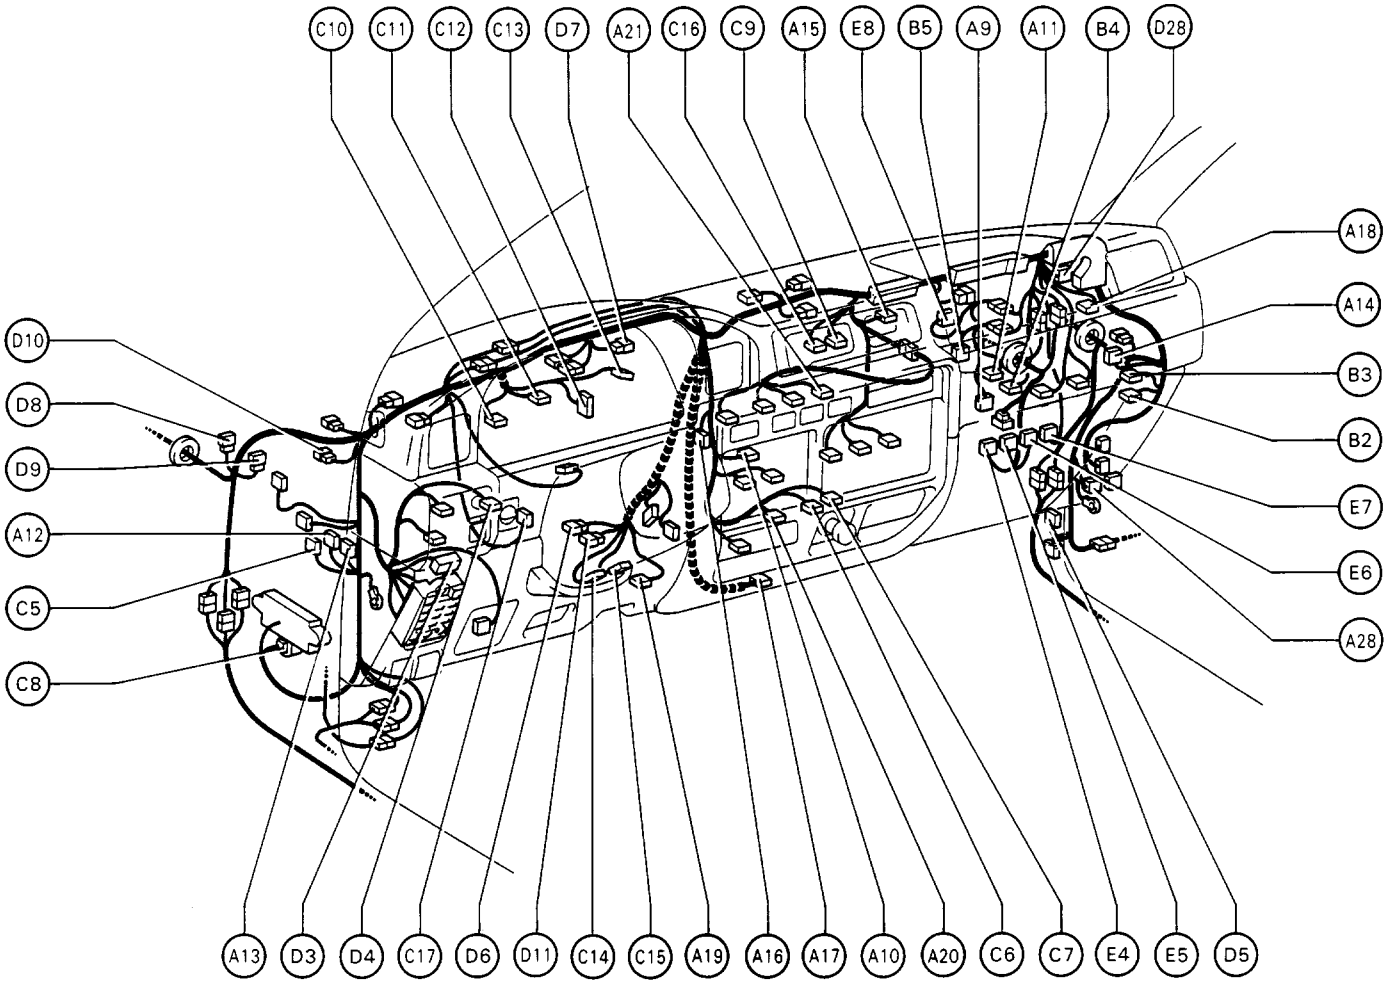

A9 A/C Amplifier
A10 A/C System Amplifier
A11 A/C Thermistor
A12 ABS ECU
A13 ABS ECU
A14 Air Inlet Control Servo Motor
A15 Air Mix Control Servo Motor
A16 Air Vent Mode Control Servo Motor
A17 Airbag Sensor Assembly
A18 Airbag Squib (Front Passenger's Airbag Assembly)
A19 Airbag Squib (Steering Wheel Pad)
A20 Ashtray Illumination
A21 Auto Antenna Control SW
A28 Auto Antenna ECU


B2 Blower Motor (A/C)
B3 Blower Motor (Heater)
B4 Blower Resistor
B5 Blower Speed Control Relay

C5 Center Diff. Lock Control Relay
C6 Cigarette Lighter
C7 Cigaretter Lighter Illumination
C8 Circuit Opening Relay
C9 Clock
C10 Combination Meter
C11 Combination Meter
C12 Combination Meter
C13 Combination Meter
C14 Combination SW
C15 Combination SW
C16 Cooling Fan (Radio and Player)
C17 Cruise Control ECU

D3 Data Link Connector 3
D4 Diff. Lock Control SW
D5 Diff. Lock ECU
D6 Diode (Front Washer)
D7 Diode (Headlight)
D8 Diode (Interior Light)
D9 Diode (Interior Light)
D10 Diode (Interior Light)
D11 Diode (Rear Washer)
D28 Diode (Neutral Detection)

E4 Engine Control Module
E5 Engine Control Module
E6 Engine Control Module
E7 Engine Control Module
E8 Engine Coolant Temp. Cut Relay

Position of Parts in Instrument Panel

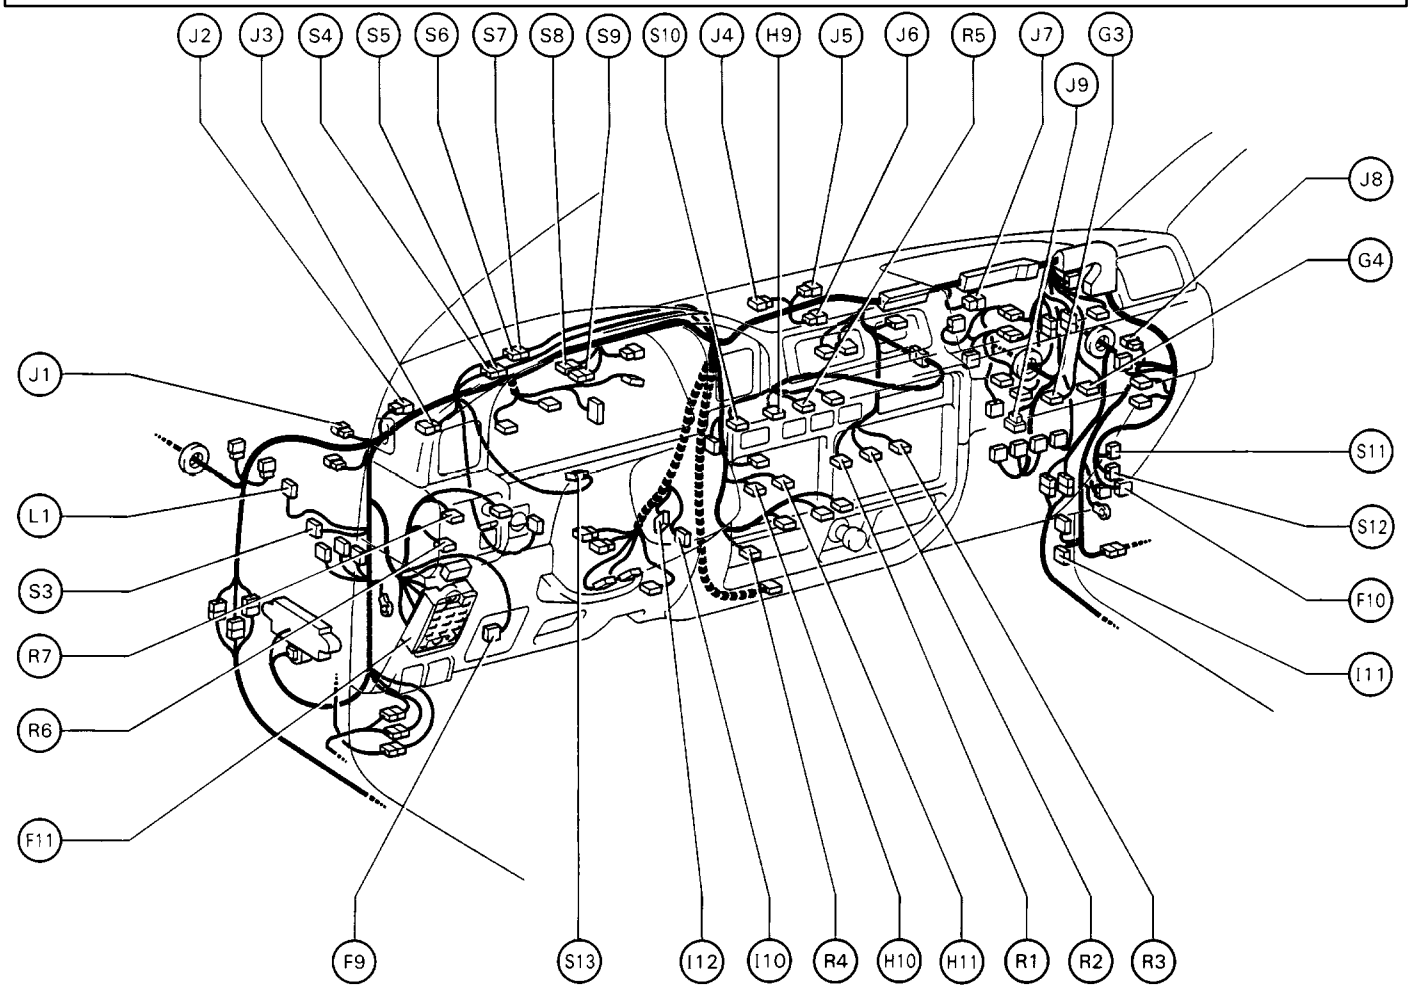

F9 Front Speaker LH
F10 Front Speaker RH
F11 Fuse Block

G3 Glove Box Light
G4 Glove Box Light SW

H9 Hazard SW
H10 Heater Control SW and A/C SW
H11 Heater Control SW and A/C SW

I10 Ignition Key Cylinder Light
I11 Ignition Key Cylinder Light Relay
I12 Ignition SW, Unlock Warning SW and Key Interlock Solenoid


J1 Junction Connector
J2 Junction Connector
J3 Junction Connector
J4 Junction Connector
J5 Junction Connector
J6 Junction Connector
J7 Junction Connector
J8 Junction Connector
J9 Junction Connector

L1 Light Retainer Relay

R1 Radio and Player
R2 Radio and Player
R3 Radio and Player
R4 Rear Heater SW
R5 Rear Window Defogger SW
R6 Remote Control Mirror SW
R7 Rheostat

S3 Seat Belt Warning Relay
S4 Short Connector (SRS)
S5 Short Connector (SRS)
S6 Short Connector (SRS)
S7 Short Connector (SRS)
S8 Short Connector (A/C)
S9 Short Connector (A/C)
S10 Short Pin (Center Diff. Lock)
S11 Stereo Component Amplifier
S12 Stereo Component Amplifier
S13 Stop Light SW

Position of Parts in Body

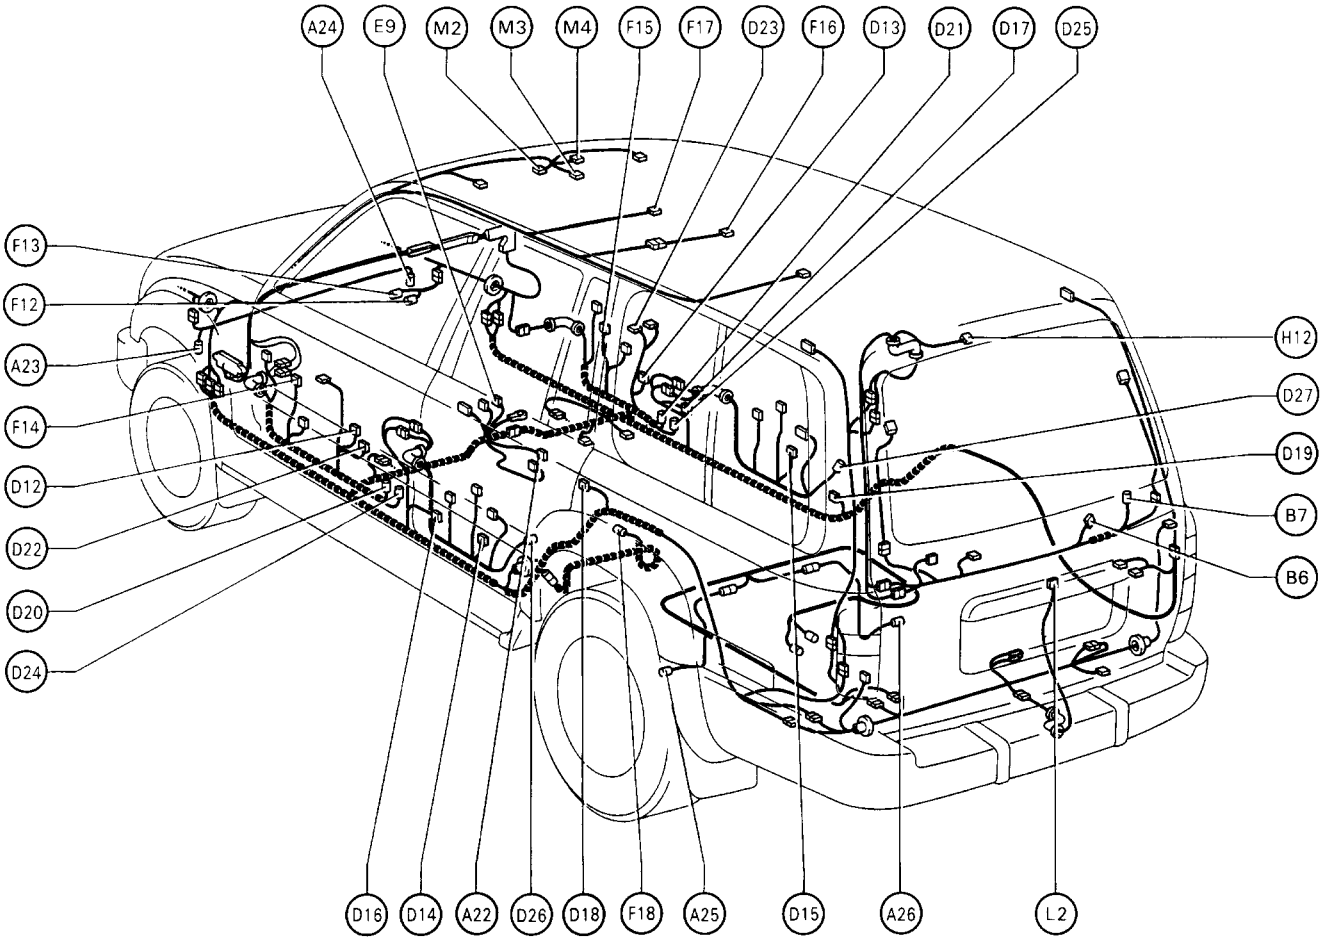

A22 ABS Deceleration Sensor
A23 ABS Speed Sensor Front LH
A24 ABS Speed Sensor Front RH
A25 ABS Speed Sensor Rear LH
A26 ABS Speed Sensor Rear RH

B6 Back Door Courtesy SW
B7 Back Door Lock Motor

D12 Door Courtesy Light Front LH
D13 Door Courtesy Light Front RH
D14 Door Courtesy Light Rear LH
D15 Door Courtesy Light Rear RH
D16 Door Courtesy SW Front LH
D17 Door Courtesy SW Front RH
D18 Door Courtesy SW Rear LH
D19 Door Courtesy SW Rear RH
D20 Door Key Lock and Unlock SW LH
D21 Door Key Lock and Unlock SW RH
D22 Door Lock Control Relay
D23 Door Lock Control SW RH
D24 Door Lock Motor and Door Unlock Detection SW Front LH
D25 Door Lock Motor and Door Unlock Detection SW Front RH
D26 Door Lock Motor Rear LH
D27 Door Lock Motor Rear RH

E9 Electronically Controlled Transmission Pattern Select SW


F12 Front Diff. Lock Control Motor
F13 Front Diff. Lock Position SW
F14 Front Door Speaker LH
F15 Front Door Speaker RH
F16 Front Interior Light (w/Moon Roof)
F17 Front Interior Light (w/o Moon Roof)
F18 Fuel Sender and Pump

H12 High Mounted Stop Light

L2 License Plate Light

M2 Moon Roof Control Relay
M3 Moon Roof Control SW and Personal Light
M4 Moon Roof Limit SW and Motor

Position of Parts in Body

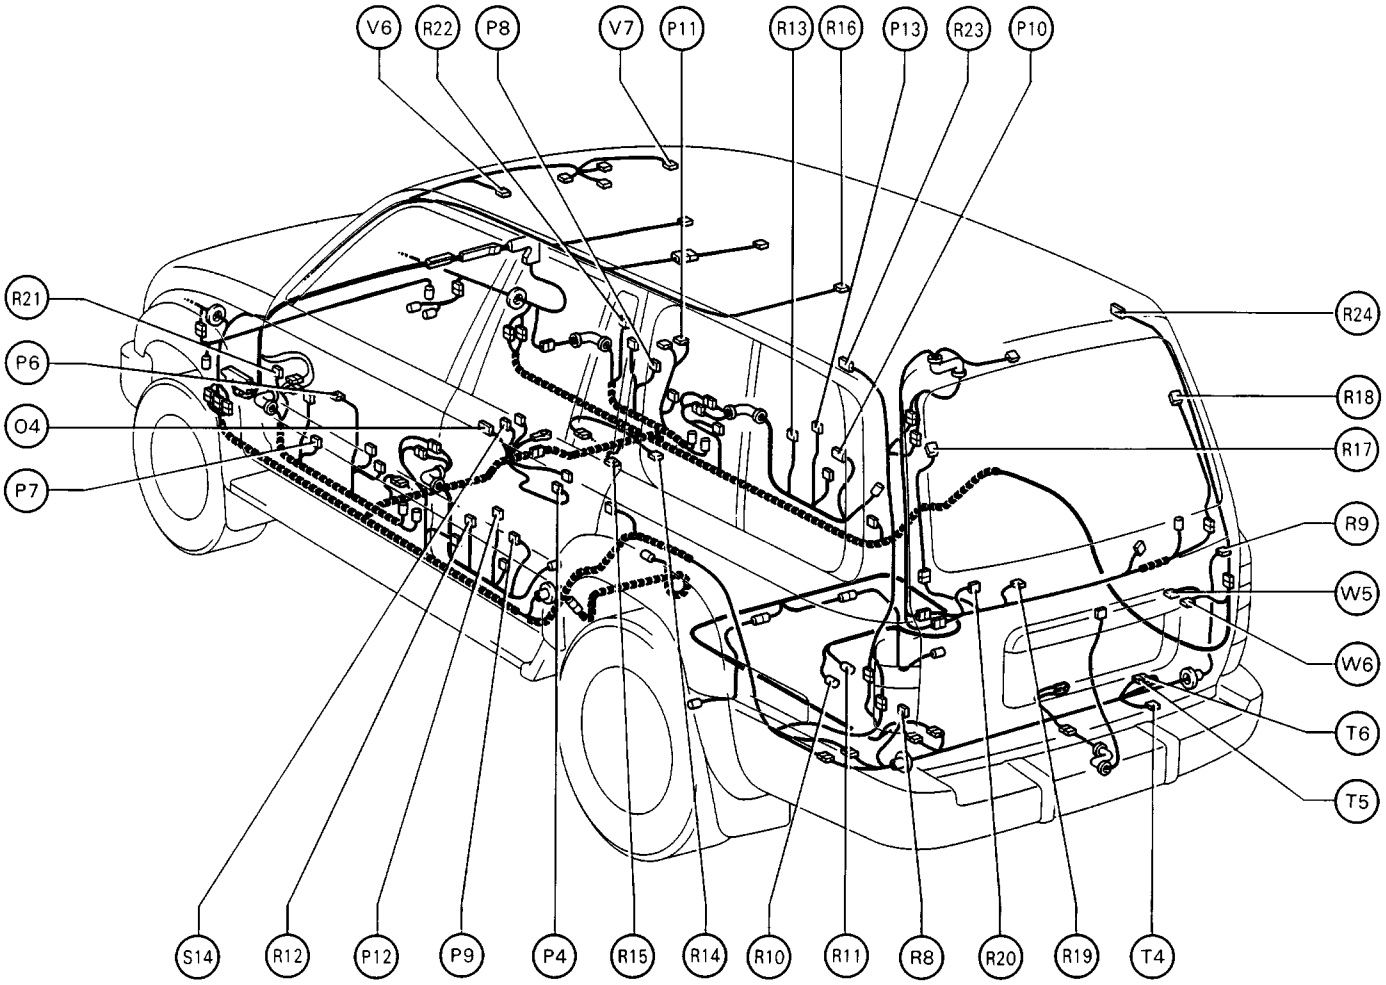

O4 O/D Main SW

P4 Parking Brake SW
P6 Power Window Master SW
P7 Power Window Motor Front LH
P8 Power Window Motor Front RH
P9 Power Window Motor Rear LH
P10 Power Window Motor Rear RH
P11 Power Window SW Front RH
P12 Power WIndow SW Rear LH
P13 Power Window SW Rear RH

R8 Rear Combination Light LH
R9 Rear Combination Light RH
R10 Rear Diff. Lock Control Motor
R11 Rear Diff. Lock Position SW
R12 Rear Door Speaker LH
R13 Rear Door Speaker RH
R14 Rear Heater
R15 Rear Heater Relay
R16 Rear Interior Light
R17 Rear Window Defogger (+)
R18 Rear Window Defogger (-)
R19 Rear Wiper Motor
R20 Rear Wiper Relay
R21 Remote Control Mirror LH
R22 Remote Control Mirror RH
R23 Roof Speaker LH
R24 Roof Speaker RH


S14 Shift Lock ECU

T4 Trailer Socket (Tail and Stop Light)
T5 Trailer Socket (Turn Signal Light)
T6 Trailer Socket (Turn Signal Light)

V6 Vanity Light LH
V7 Vanity Light RH

W5 Woofer (Speaker)
W6 Woofer Amplifier

Position of Parts in Seat

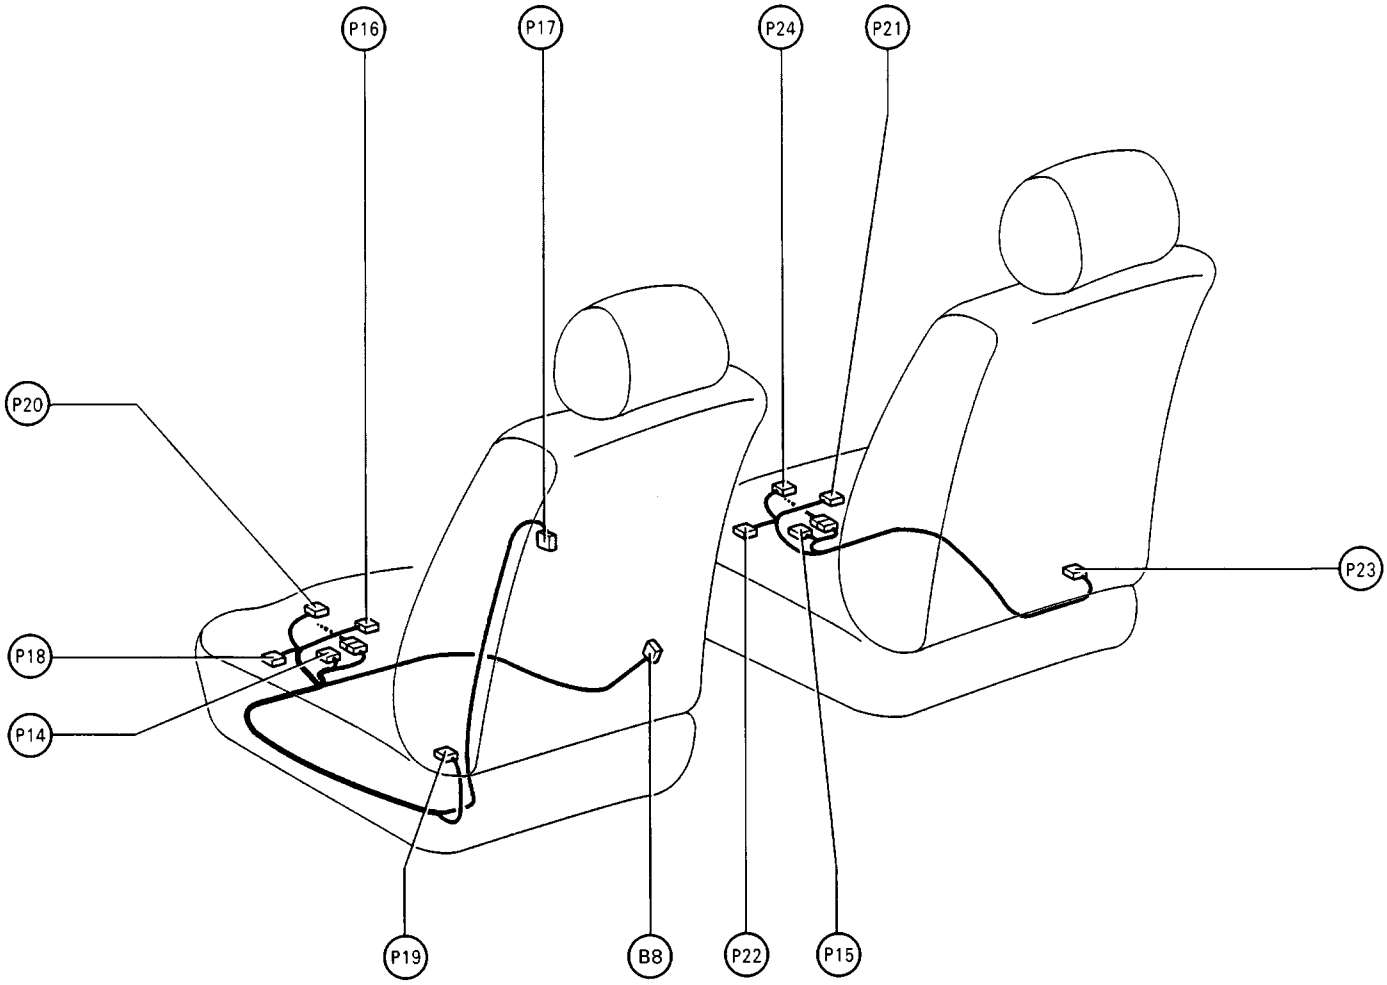

B8 Buckle SW LH

P14 Power Seat Control SW (Driver's Seat)
P15 Power Seat Control SW (Passenger's Seat)
P16 Power Seat Motor (Driver's Seat Front Vertical Control)
P17 Power Seat Motor (Driver's Seat Lumbar Support Control)
P18 Power Seat Motor (Driver's Seat Rear Vertical Control)
P19 Power Seat Motor (Driver's Seat Reclining Control)
P20 Power Seat Motor (Driver's Seat Slide Control)
P21 Power Seat Motor (Passenger's Seat Front Vertical Control)
P22 Power Seat Motor (Passenger's Seat Rear Vertical Control)
P23 Power Seat Motor (Passenger's Seat Reclining Control)
P24 Power Seat Motor (Passenger's Seat Slide Control)