

Connector Joining Wire Harness and Wire Harness


EA1 GRAY

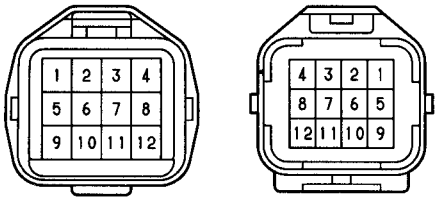


EA2 GRAY

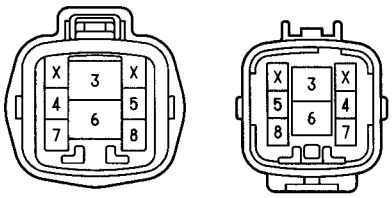


EA3 GRAY

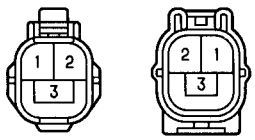


EA4 GRAY

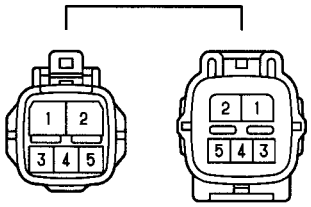


EB1 GRAY

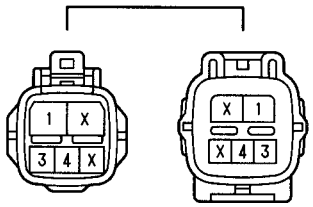


EC1 GRAY

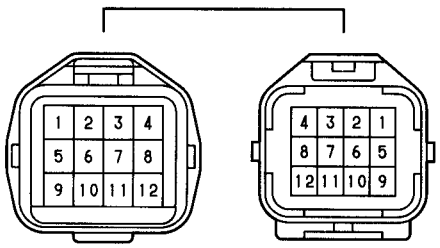


EC2 GRAY

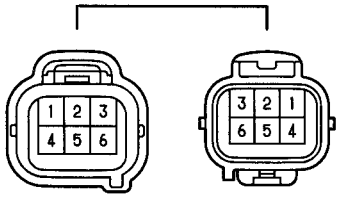


EY1 GRAY

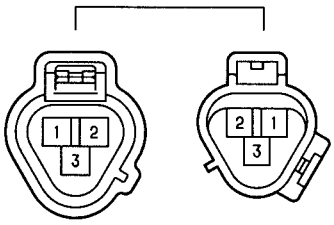

EZ1 GRAY

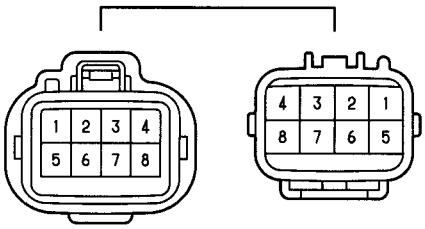

Ea1 GRAY

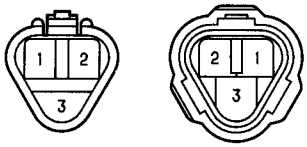

CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA2	
EA3	
EA4	COWL WIRE AND ENGINE ROOM MAIN WIRE (RIGHT FENDER)
EB1	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE DISTRIBUTOR)
EC1	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)
EC2	
EY1	OIL PRESSURE SWITCH WIRE AND ENGINE ROOM MAIN WIRE (NEAR THE AIR CLEANER)
EZ1	ENGINE WIRE AND VSV SUB WIRE (NEAR THE THROTTLE POSITION SENSOR)
Ea1	TRANSMISSION WIRE AND SPEED SENSOR WIRE (NEAR THE TRANSMISSION)