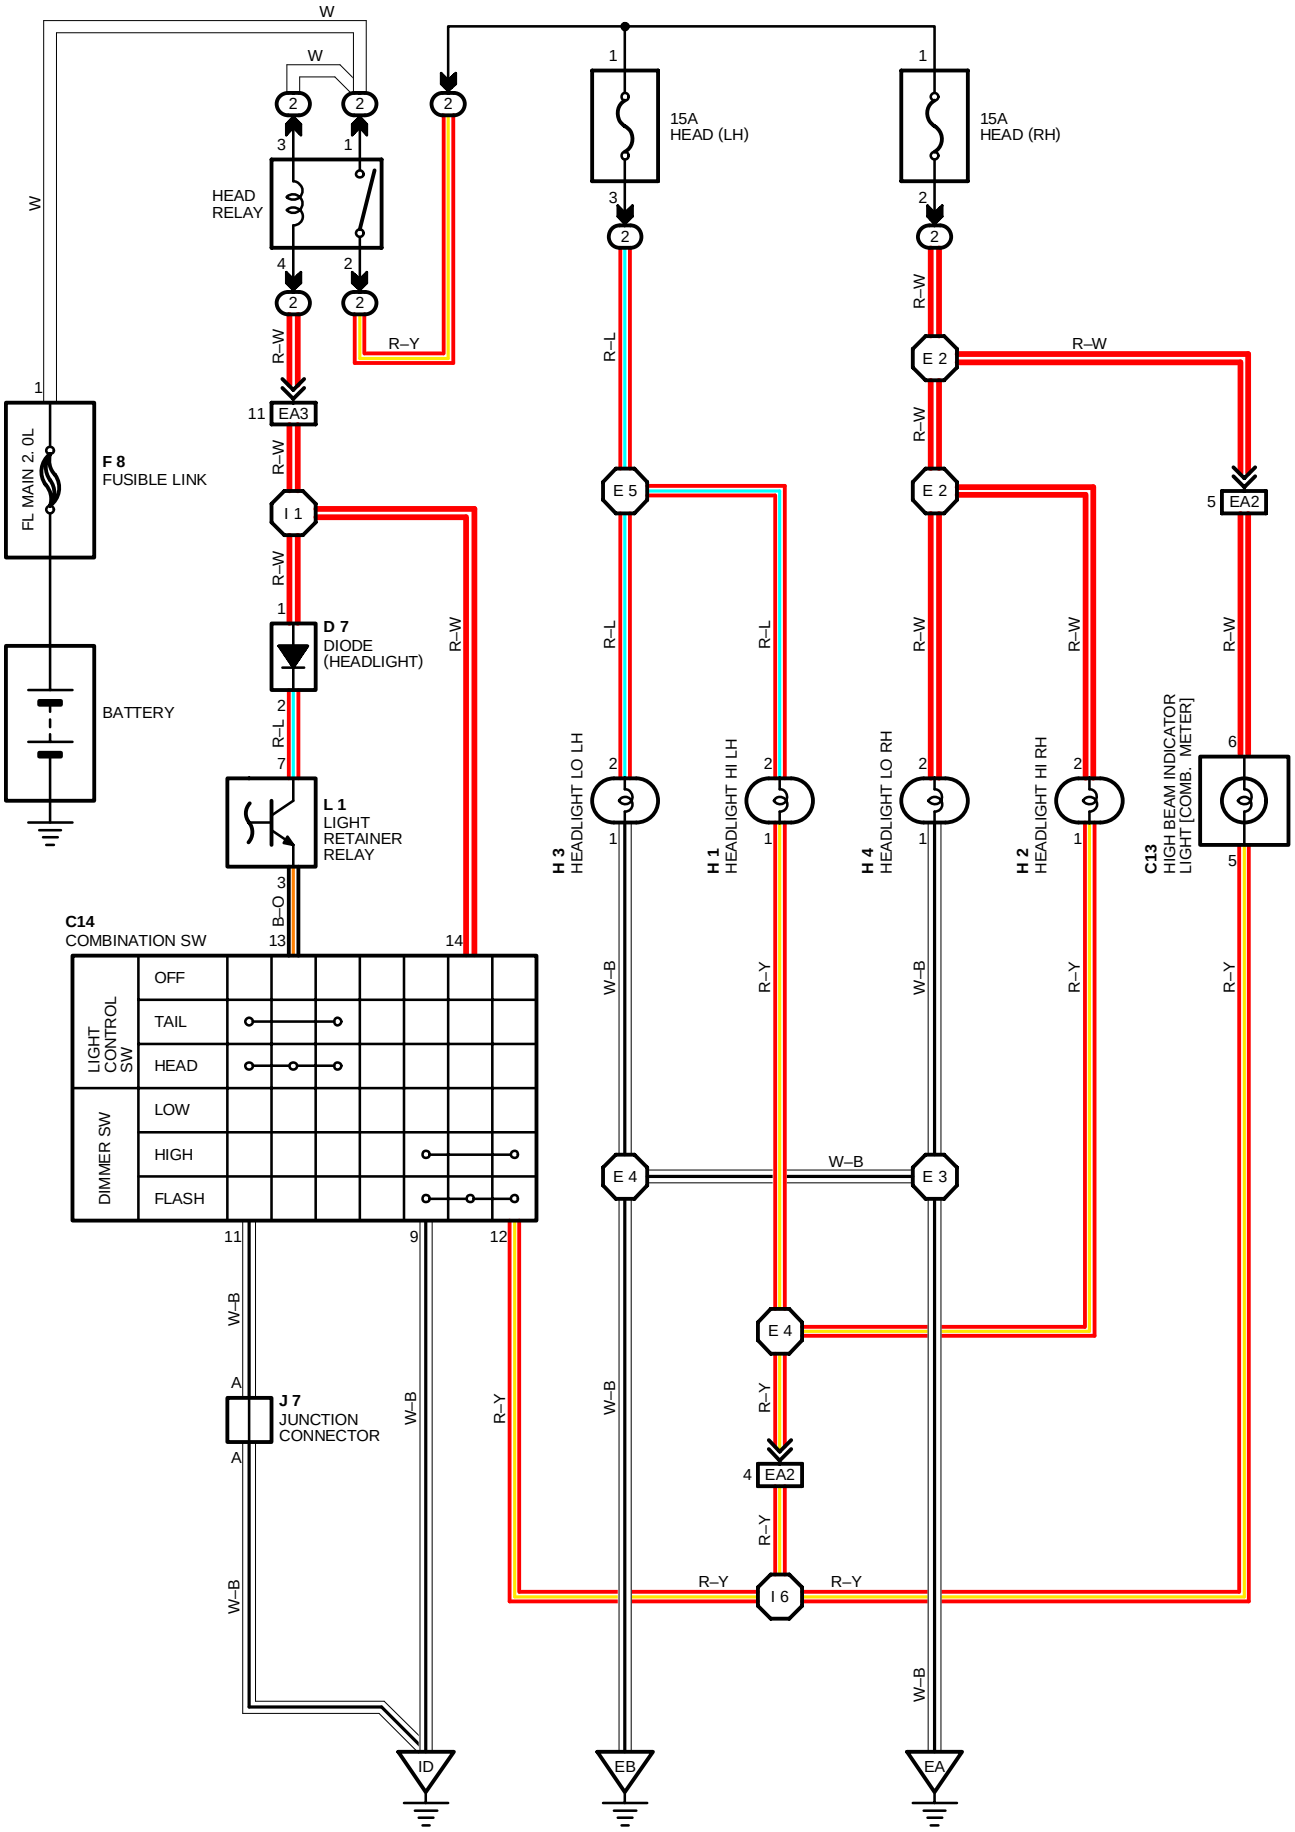

W
W
HEAD RELAY
15A HEAD (LH)
15A HEAD (RH)
R–W
R–Y
R–L
W
F 8 FUSIBLE LINK
FL MAIN 2. 0L
BATTERY
D 7 DIODE (HEADLIGHT)
L 1 LIGHT RETAINER RELAY
B–O
C14 COMBINATION SW
LIGHT CONTROL SW
DIMMER SW
OFF
TAIL
HEAD
LOW
HIGH
FLASH
J 7 JUNCTION CONNECTOR
W–B
H 3 HEADLIGHT LO LH
H 1 HEADLIGHT HI LH
H 4 HEADLIGHT LO RH
H 2 HEADLIGHT HI RH
C13 HIGH BEAM INDICATOR LIGHT [COMB. METER]
EA3
EA2
E 5
E 2
E 4
E 3
I 1
I 6
ID
EB
EA

SERVICE HINTS

HEAD RELAY

(2) 1– **(2)** 2: CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

C14 LIGHT CONTROL SW [COMB. SW]

13–11 : CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION

C14 DIMMER SW [COMB. SW]

14–9 : CLOSED WITH THE DIMMER SW AT **FLASH** POSITION

12–9 : CLOSED WITH THE DIMMER SW AT **HIGH** OR **FLASH** POSITION

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C13	24	**H 1**	22	**J 7**	25
C14	24	**H 2**	22	**L 1**	25
D 7	24	**H 3**	22		
F 8	22	**H 4**	22		

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA2	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA3		


: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	30	FRONT SIDE OF RIGHT FENDER
EB	30	FRONT SIDE OF LEFT FENDER
ID	32	LEFT KICK PANEL


: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 2	30	ENGINE ROOM MAIN WIRE	**E 5**	30	ENGINE ROOM MAIN WIRE
E 3			**I 1**	32	COWL WIRE
E 4			**I 6**		


C13

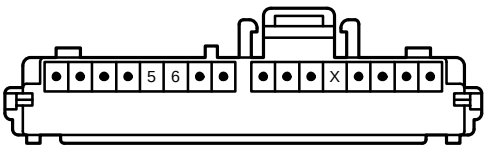


C14 BLACK

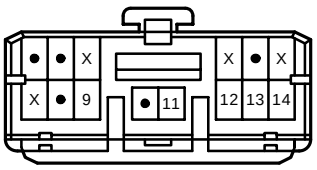

D 7 ORANGE



F 8




H 1, H 2 BLACK



H 3, H 4 BROWN



J 7 BLUE



(HINT : SEE PAGE 7)

L 1

