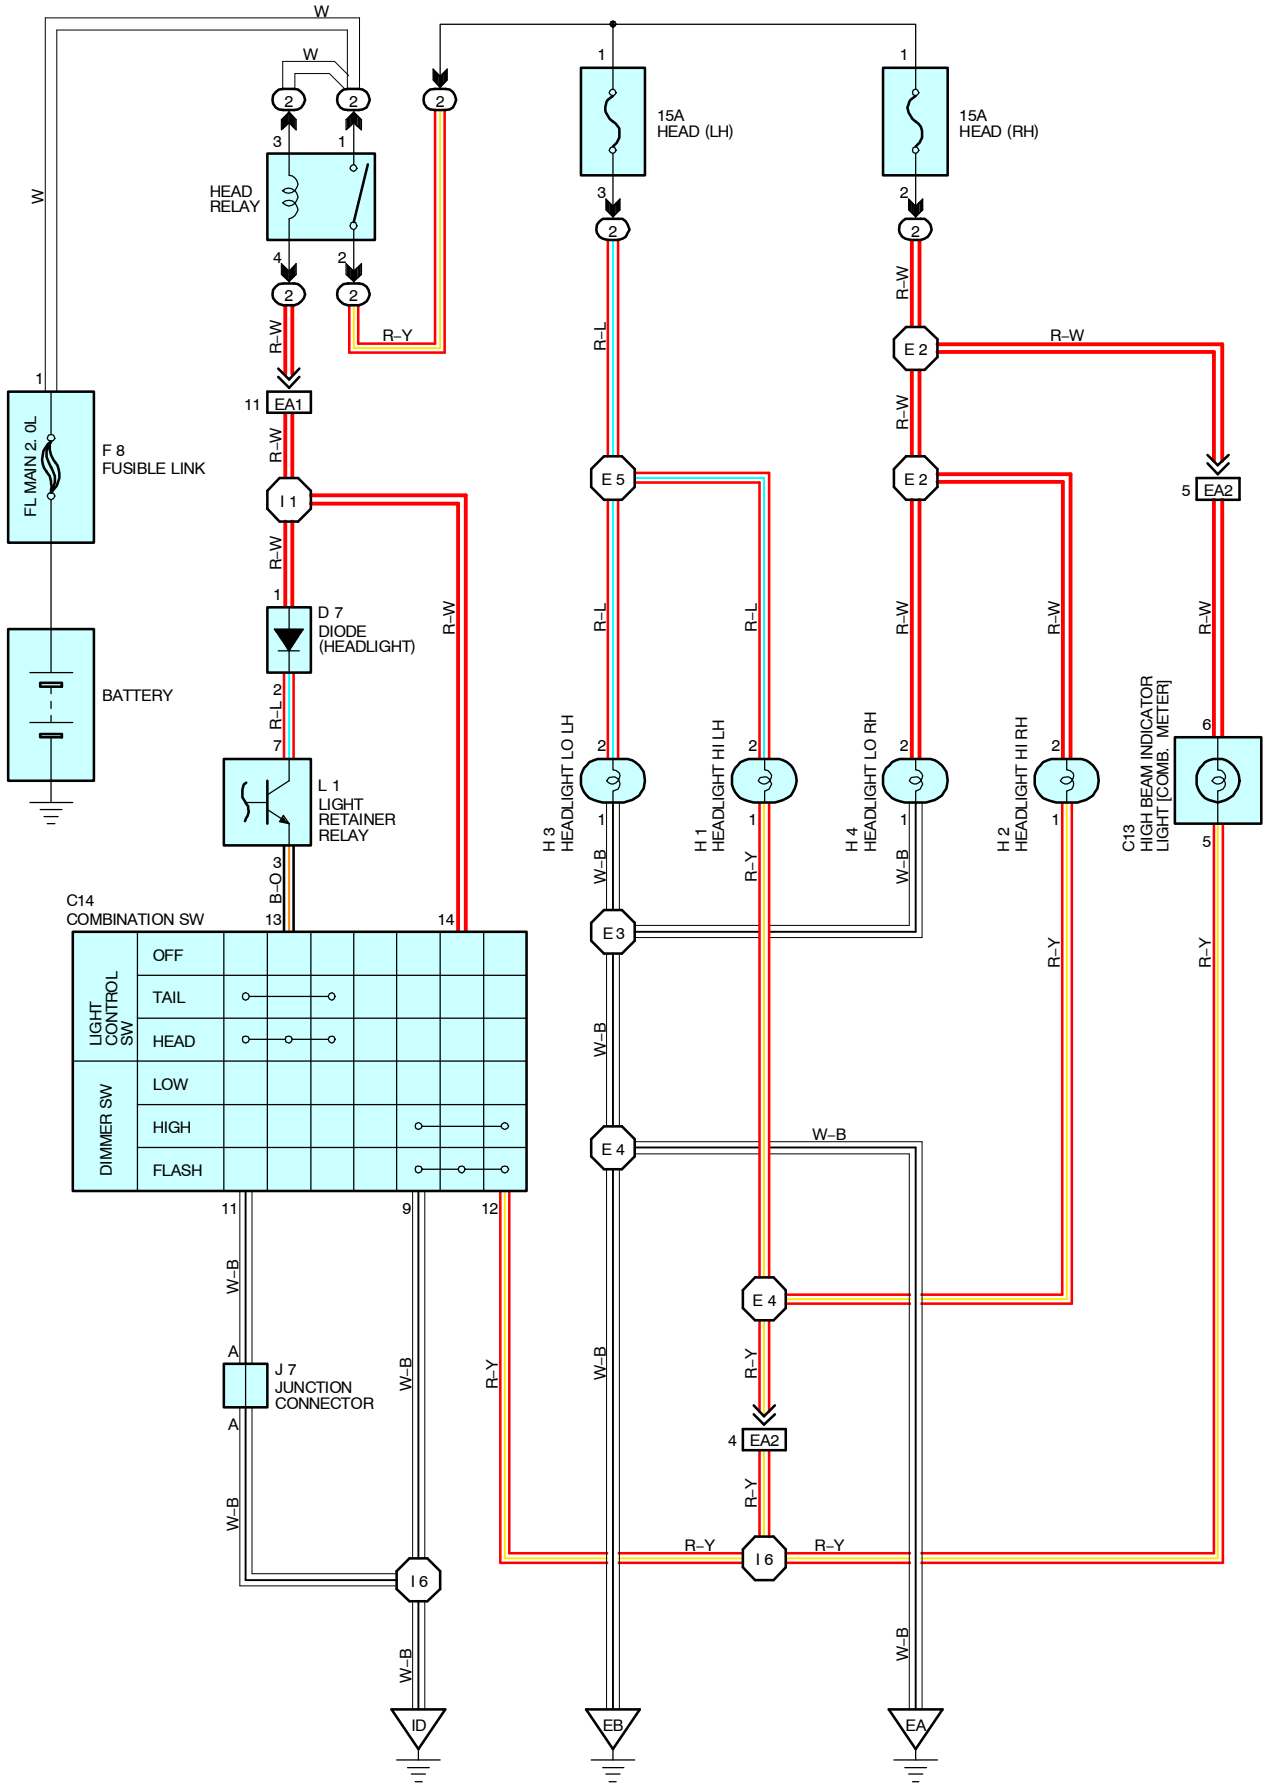
HEADLIGHT


W
W
HEAD RELAY
15A HEAD (LH)
15A HEAD (RH)
R-W
R-Y
R-L
W-B
B-O
F 8 FUSIBLE LINK
FL MAIN 2.0L
BATTERY
D 7 DIODE (HEADLIGHT)
L 1 LIGHT RETAINER RELAY
C14 COMBINATION SW
LIGHT CONTROL SW
DIMMER SW
OFF
TAIL
HEAD
LOW
HIGH
FLASH
J 7 JUNCTION CONNECTOR
H 3 HEADLIGHT LO LH
H 1 HEADLIGHT HI LH
H 4 HEADLIGHT LO RH
H 2 HEADLIGHT HI RH
C13 HIGH BEAM INDICATOR LIGHT [COMB. METER]
E 2
E 3
E 4
E 5
EA1
EA2
I 1
I 6
ID
EB
EA

SERVICE HINTS

HEAD LIGHT

(2) 1– **(2)** 2:CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION OR THE DIMMER SW AT **FLASH** POSITION (WHEN THE LIGHT AUTO TURN OFF SYSTEM DOES NOT OPERATE)

C14 LIGHT CONTROL SW (COMB. SW)

13–11:CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION

C14 DIMMER SW (COMB. SW)

14–9:CLOSED WITH THE DIMMER SW AT **FLASH** POSITION

12–9:CLOSED WITH THE DIMMER SW AT **HIGH** OR **FLASH** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C13	24	**H 1**	22	**J 7**	25
C14	24	**H 2**	22	**L 1**	25
D 7	24	**H 3**	22		
F 8	22	**H 4**	22		

⬭ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

▭ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA2		


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	30	FRONT SIDE OF THE RIGHT FENDER
EB	30	FRONT SIDE OF THE LEFT FENDER
ID	32	LEFT KICK PANEL


⬡ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 2	30	ENGINE ROOM MAIN WIRE	**E 5**	30	ENGINE ROOM MAIN WIRE
E 3			**I 1**	32	COWL WIRE
E 4			**I 6**		


C13

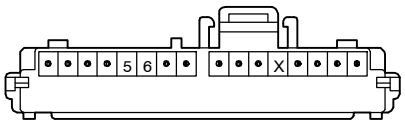


C14 BLACK

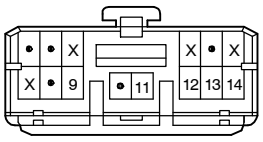

D 7 ORANGE



F 8




H 1, H 2 BLACK




H 3, H 4 BROWN



J 7 BLUE



L 1



(HINT : SEE PAGE 7)