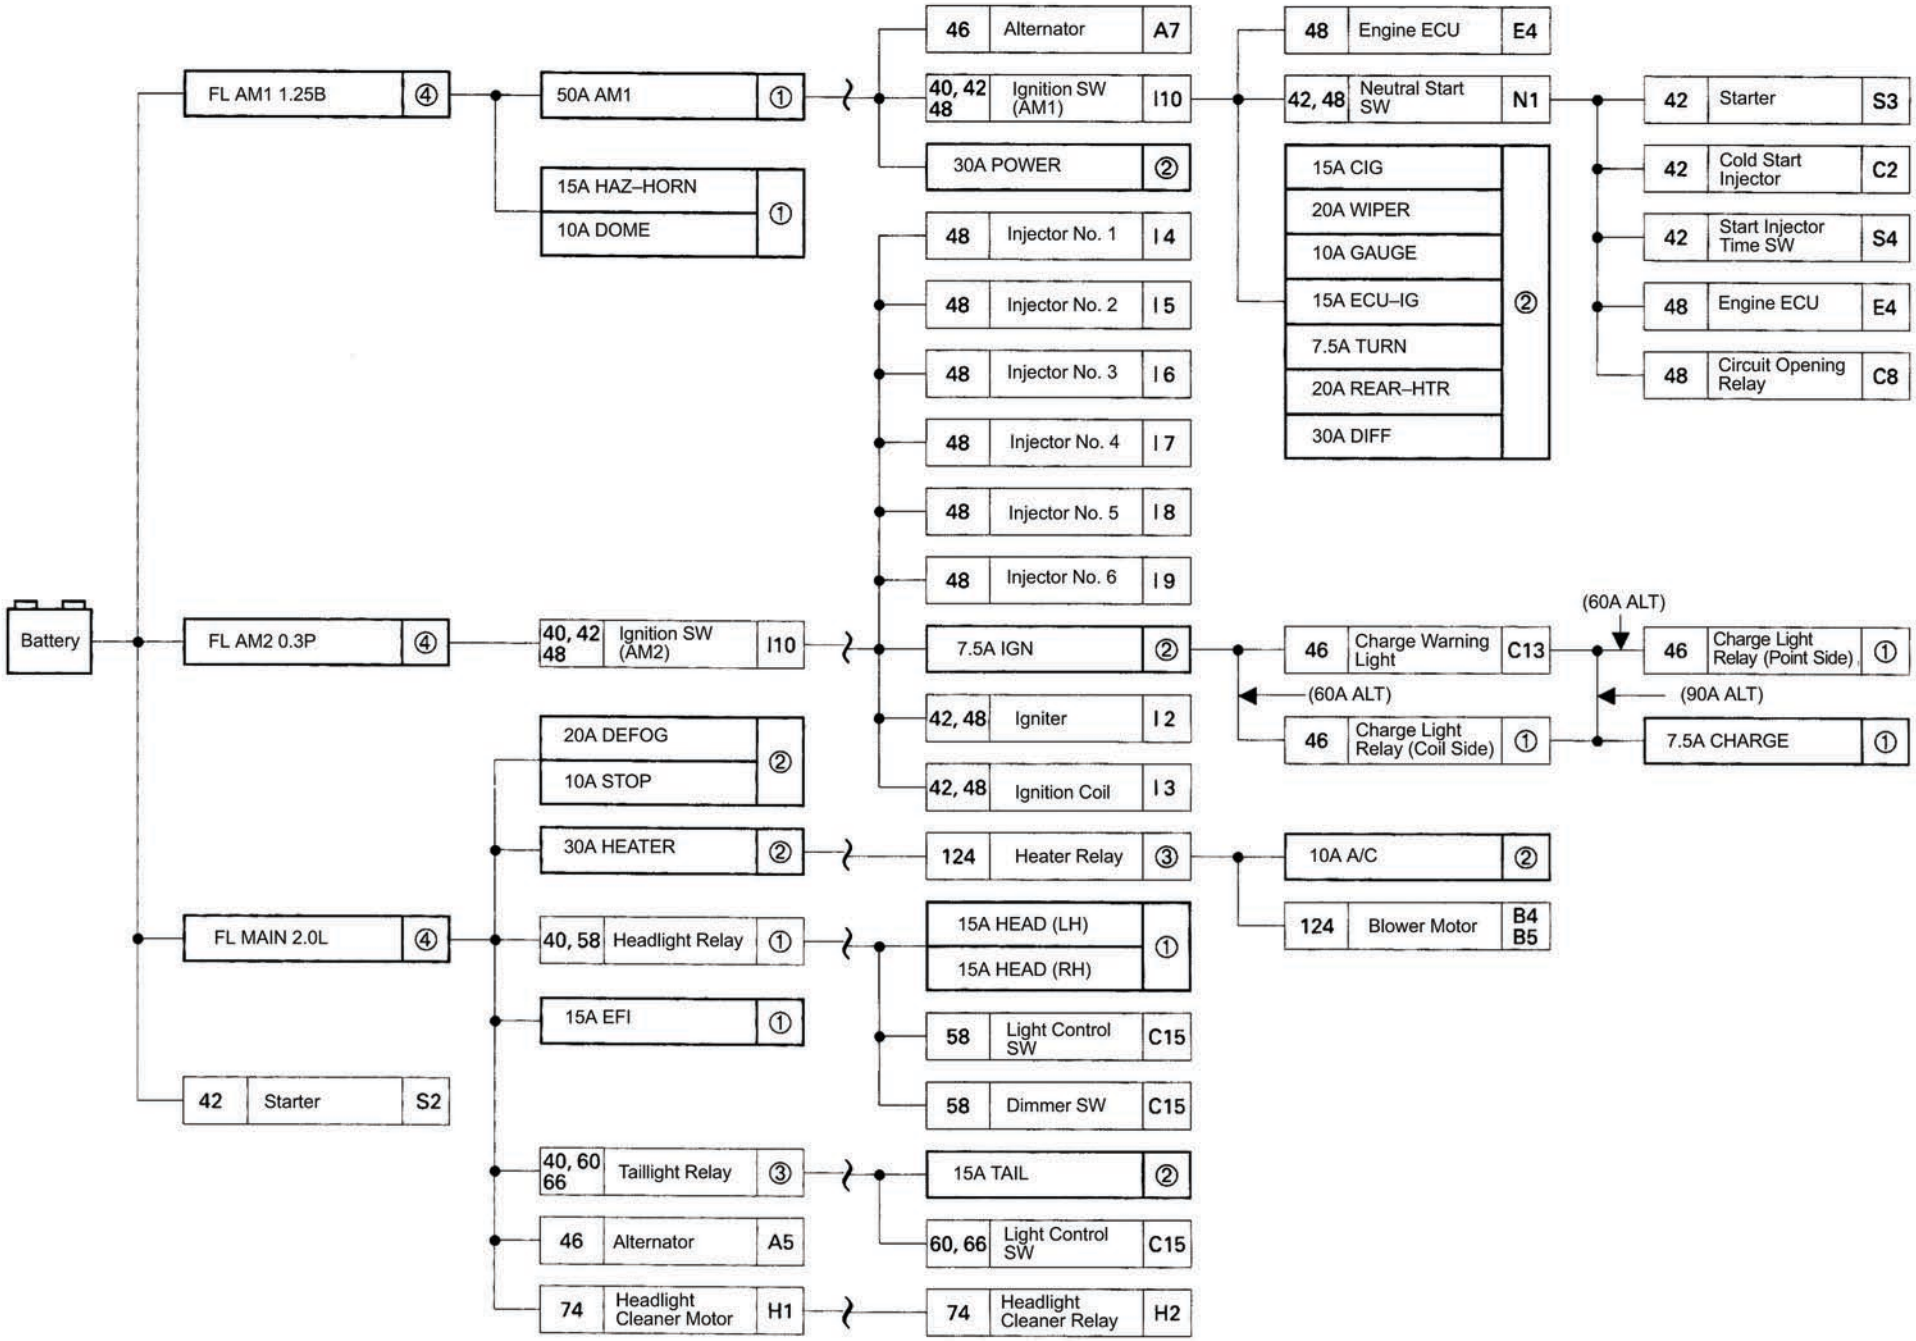

Battery
FL AM1 1.25B ④
50A AM1 ①
15A HAZ–HORN
10A DOME ①
FL AM2 0.3P ④
40, 42 48 Ignition SW (AM2) I10
FL MAIN 2.0L ④
42 Starter S2
20A DEFOG
10A STOP ②
30A HEATER ②
40, 58 Headlight Relay ①
15A EFI ①
40, 60 66 Taillight Relay ③
46 Alternator A5
74 Headlight Cleaner Motor H1
46 Alternator A7
40, 42 48 Ignition SW (AM1) I10
30A POWER ②
48 Injector No. 1 I4
48 Injector No. 2 I5
48 Injector No. 3 I6
48 Injector No. 4 I7
48 Injector No. 5 I8
48 Injector No. 6 I9
7.5A IGN ②
42, 48 Igniter I2
42, 48 Ignition Coil I3
124 Heater Relay ③
15A HEAD (LH)
15A HEAD (RH) ①
58 Light Control SW C15
58 Dimmer SW C15
15A TAIL ②
60, 66 Light Control SW C15
74 Headlight Cleaner Relay H2
48 Engine ECU E4
42, 48 Neutral Start SW N1
15A CIG
20A WIPER
10A GAUGE
15A ECU–IG
7.5A TURN
20A REAR–HTR
30A DIFF ②
46 Charge Warning Light C13
(60A ALT)
46 Charge Light Relay (Coil Side) ①
10A A/C ②
124 Blower Motor B4 B5
42 Starter S3
42 Cold Start Injector C2
42 Start Injector Time SW S4
48 Engine ECU E4
48 Circuit Opening Relay C8
(60A ALT)
46 Charge Light Relay (Point Side) ①
(90A ALT)
7.5A CHARGE ①