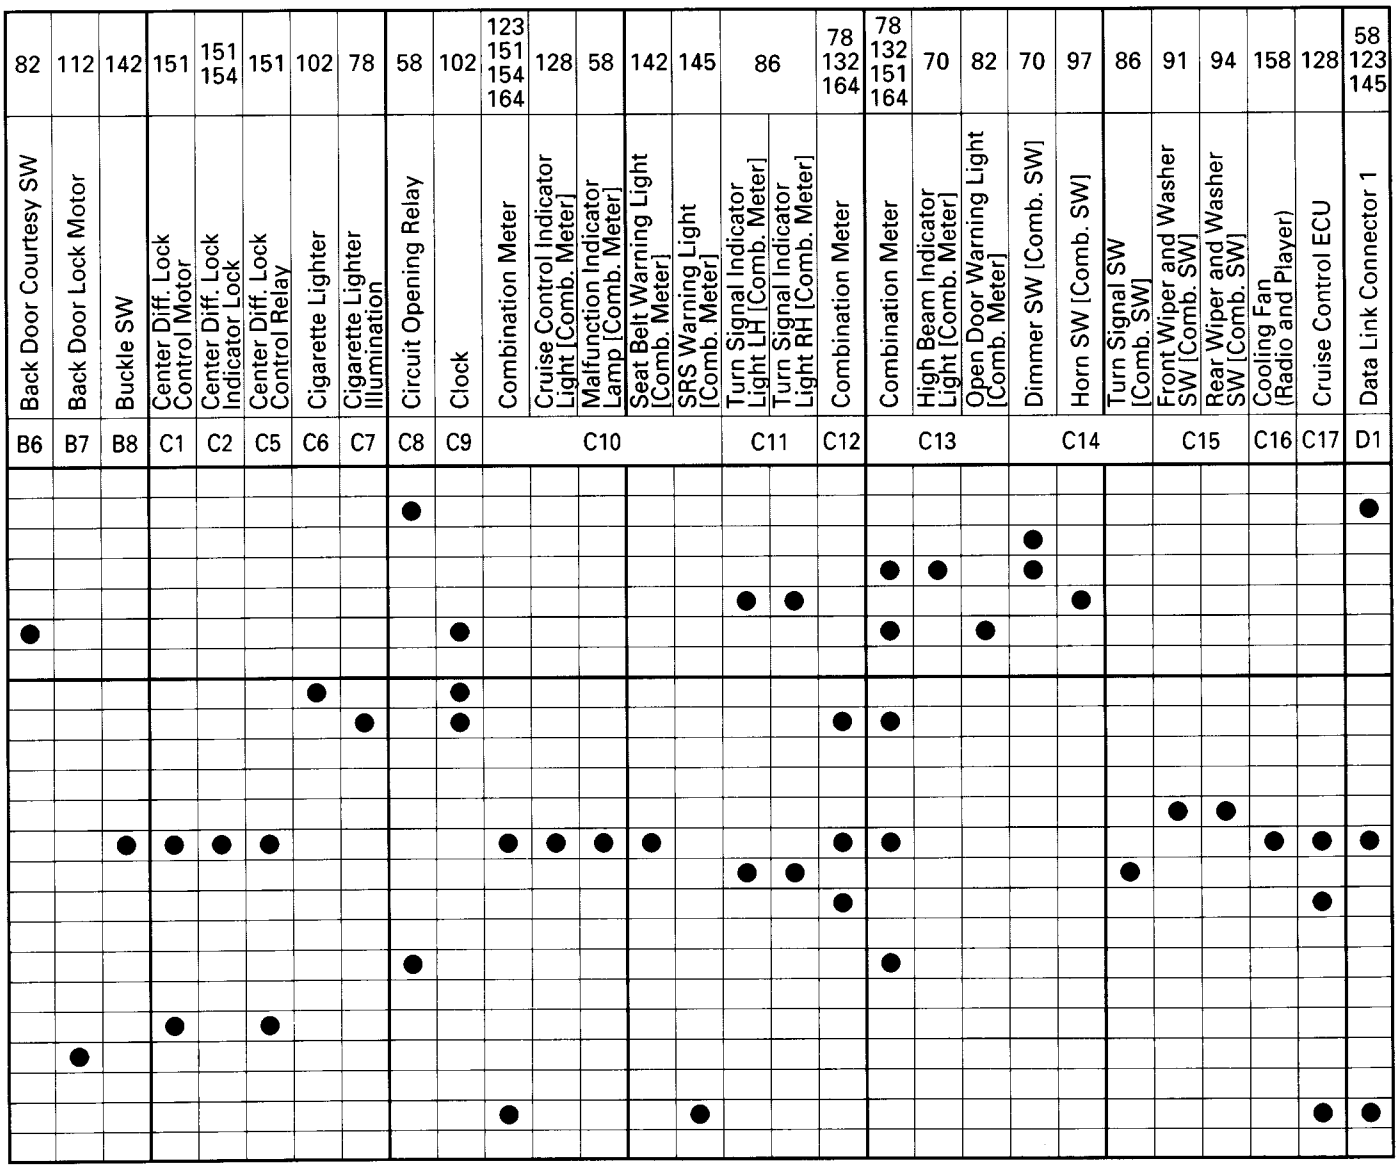
# H POWER SOURCE (Current Flow Chart)

| Location | CB or Fuse | | *Page Nos. of Related Systems | 170 | 123 | | 118 | 170 | | 123 | | 170 | 145 | 78 | 78 118 | 123 | 118 | | 164 | 170 | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | Parts | A/C Pressure SW | ABS Actuator | ABS Relay | Auto Antenna Motor | A/C Amplifier | A/C System Amplifier | ABS ECU | Air Inlet Control Servo Motor | Air Vent Mode Control Servo Motor | Airbag Sensor Assembly | Ashtray Illumination | Auto Antenna Control SW | ABS Deceleration Sensor | Auto Antenna Relay | Auto Antenna ECU | Brake Fluid Level Warning SW | Blower Motor (A/C) | Blower Motor (Heater) | Blower Resistor | Blower Speed Control Relay |
| | | | Code or Location | A2 | A4 | A6 | A7 | A8 | A9 | A10 | A12 | A13 | A14 | A16 | A17 | A20 | A21 | A22 | A27 | A28 | B1 | B2 | B3 | B4 | B5 |
| ① | 7.5A | CHARGE | | | | | | | | | | | | | | | | | | | | | | |
| | 15A | EFI | | | | | | | | | | | | | | | | | | | | | | |
| | 15A | HEAD (LH) | | | | | | | | | | | | | | | | | | | | | | |
| | 15A | HEAD (RH) | | | | | | | | | | | | | | | | | | | | | | |
| | 15A | HAZ-HORN | | | | | | | | | | | | | | | | | | | | | | |
| | 10A | DOME | | | | | | | | | | | | | | ● | | | ● | | | | | |
| | 60A | ABS | | | ● | ● | ● | | | | | ● | | | | | | | | | | | | |
| ② | 15A | CIG | | | | | | | | | | | | ● | | | ● | | | ● | | | | |
| | 15A | TAIL | | | | | | | | | | | | | | ● | ● | | | | | | | |
| | 10A | STOP | | | | | | | | | ● | | | | | | | | | | | | | |
| | 20A | DEFOG | | | | | | | | | | | | | | | | | | | | | | |
| | 20A | WIPER | | | | | | | | | | | | | | | | | | | | | | |
| | 10A | GAUGE | | ● | ● | | ● | | ● | ● | ● | ● | ● | ● | | | | | | | ● | | | | ● |
| | 7.5A | TURN | | | | | | | | | | | | | | | | | | | | | | |
| | 15A | ECU-IG | | | | | | ● | | | | ● | | | | | ● | ● | ● | ● | | | | |
| | 20A | REAR-HTR | | | | | | | | | | | | | | | | | | | | | | |
| | 7.5A | IGN | | | | | | | | | | | | ● | | | | | | | | | | |
| | 10A | A.C | | | | | | | | | | | | | | | | | | | | | | |
| | 30A | DIFF | | | | | | | | | | | | | | | | | | | | | | |
| | 30A | FL POWER | | | | | | | | | | | | | | | | | | | | | | |
| | 40A | FL HEATER | | | | | | | | | | | | | | | | | | | ● | ● | ● | ● |
| | 10A | ECU-B | | | | | | | | | | ● | | ● | | | | | | | | | | |
| | 15A | OBD | | | | | | | | | | | | | | | | | | | | | | |

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ①:R/B No. 2 (See page 18) ②:Fuse Block (F11 See page 20)
⑤: R/B No. 1 (See page 20)

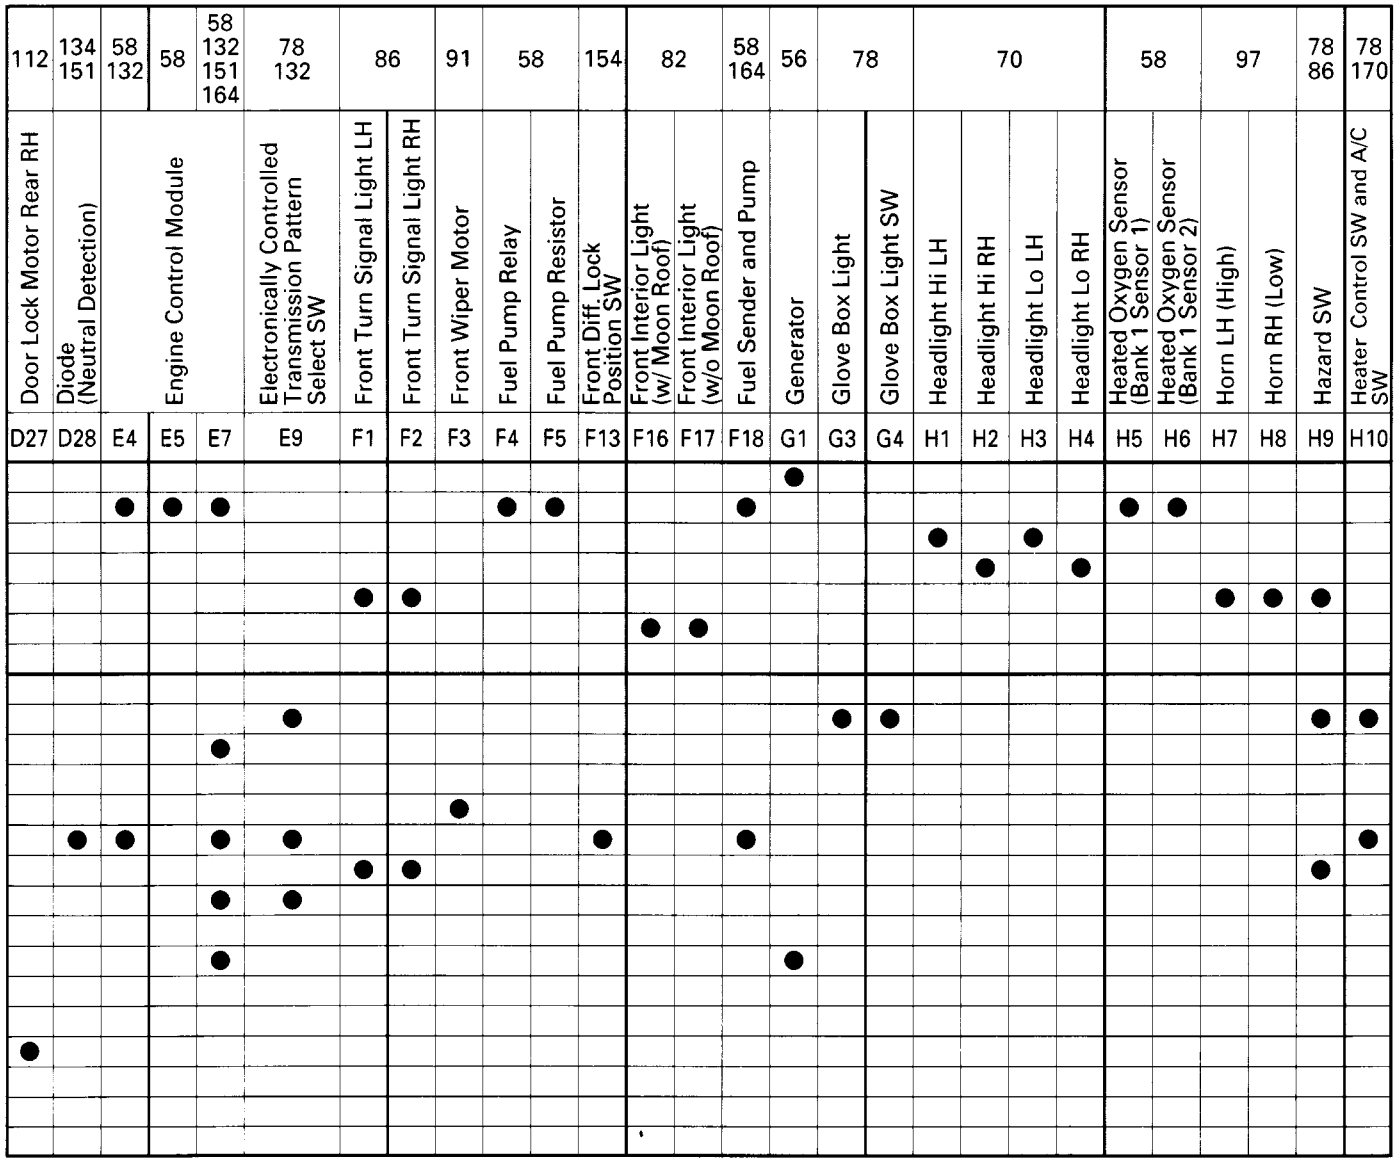

82 Back Door Courtesy SW B6
112 Back Door Lock Motor B7
142 Buckle SW B8
151 Center Diff. Lock Control Motor C1
151 154 Center Diff. Lock Indicator Lock C2
151 Center Diff. Lock Control Relay C5
102 Cigarette Lighter C6
78 Cigarette Lighter Illumination C7
58 Circuit Opening Relay C8
102 Clock C9
123 151 154 164 Combination Meter C10
128 Cruise Control Indicator Light [Comb. Meter] C10
58 Malfunction Indicator Lamp [Comb. Meter] C10
142 Seat Belt Warning Light [Comb. Meter] C10
145 SRS Warning Light [Comb. Meter] C10
86 Turn Signal Indicator Light LH [Comb. Meter] C11
Turn Signal Indicator Light RH [Comb. Meter] C11
78 132 164 Combination Meter C12
78 132 151 164 Combination Meter C13
70 High Beam Indicator Light [Comb. Meter] C13
82 Open Door Warning Light [Comb. Meter] C13
70 Dimmer SW [Comb. SW] C14
97 Horn SW [Comb. SW] C14
86 Turn Signal SW [Comb. SW] C15
91 Front Wiper and Washer SW [Comb. SW] C15
94 Rear Wiper and Washer SW [Comb. SW] C15
158 Cooling Fan (Radio and Player) C16
128 Cruise Control ECU C17
58 123 145 Data Link Connector 1 D1

# H POWER SOURCE (Current Flow Chart)

| Location | CB or Fuse | | *Page Nos. of Related Systems | 58 | 154 | 154 | 91 | 82 | | 94 | 82 | | | | | | 98 108 112 | 112 | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | Parts | Data Link Connector 3 | Diff. Lock Control SW | Diff. Lock ECU | Diode (Front Washer) | Diode (Interior Light) | | Diode (Rear Washer) | Door Courtesy Light Front LH | Door Courtesy Light Front RH | Door Courtesy Light Rear LH | Door courtesy Light Rear RH | Door Courtesy SW Front LH | Door Courtesy SW Front RH | Door Courtesy SW Rear LH | Door Courtesy SW Rear RH | Door Lock Control Relay | Door Lock Motor and Door Unlock Detection SW Front LH | Door Lock Motor and Door Unlock Detection SW Front RH | Door Lock Motor Rear LH |
| | | | Code or Location | D3 | D4 | D5 | D6 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | D16 | D17 | D18 | D19 | D22 | D24 | D25 | D26 |
| ① | 7.5A | CHARGE | | | | | | | | | | | | | | | | | | | | | |
| | 15A | EFI | | | | | | | | | | | | | | | | | | | | | |
| | 15A | HEAD (LH) | | | | | | | | | | | | | | | | | | | | | |
| | 15A | HEAD (RH) | | | | | | | | | | | | | | | | | | | | | |
| | 15A | HAZ-HORN | | | | | | | | | | | | | | | | | | | | | |
| | 10A | DOME | | | | | | ● | ● | ● | | ● | ● | ● | ● | ● | ● | ● | ● | | | | |
| | 60A | ABS | | | | | | | | | | | | | | | | | | | | | |
| ② | 15A | CIG | | | | | | | | | | | | | | | | | | | | | |
| | 15A | TAIL | | | | | | | | | | | | | | | | | | | | | |
| | 10A | STOP | | | | | | | | | | | | | | | | | | | | | |
| | 20A | DEFOG | | | | | | | | | | | | | | | | | | | | | |
| | 20A | WIPER | | | | | ● | | | | ● | | | | | | | | | | | | |
| | 10A | GAUGE | | | | ● | | | | | | | | | | | | | | ● | | | |
| | 7.5A | TURN | | | | | | | | | | | | | | | | | | | | | |
| | 15A | ECU-IG | | | | | | | | | | | | | | | | | | | | | |
| | 20A | REAR-HTR | | | | | | | | | | | | | | | | | | | | | |
| | 7.5A | IGN | | | | | | | | | | | | | | | | | | | | | |
| | 10A | A.C | | | | | | | | | | | | | | | | | | | | | |
| | 30A | DIFF | | | ● | ● | | | | | | | | | | | | | | | | | |
| | 30A | FL POWER | | | | | | | | | | | | | | | | | | ● | ● | ● | ● |
| | 40A | FL HEATER | | | | | | | | | | | | | | | | | | | | | |
| | 10A | ECU-B | | | | | | | | | | | | | | | | | | | | | |
| | 15A | OBD | | ● | | | | | | | | | | | | | | | | | | | |

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ①:R/B No. 2 (See page 18) ②: Fuse Block (F11 See page 20)
③: R/B No.1 (See page 20)

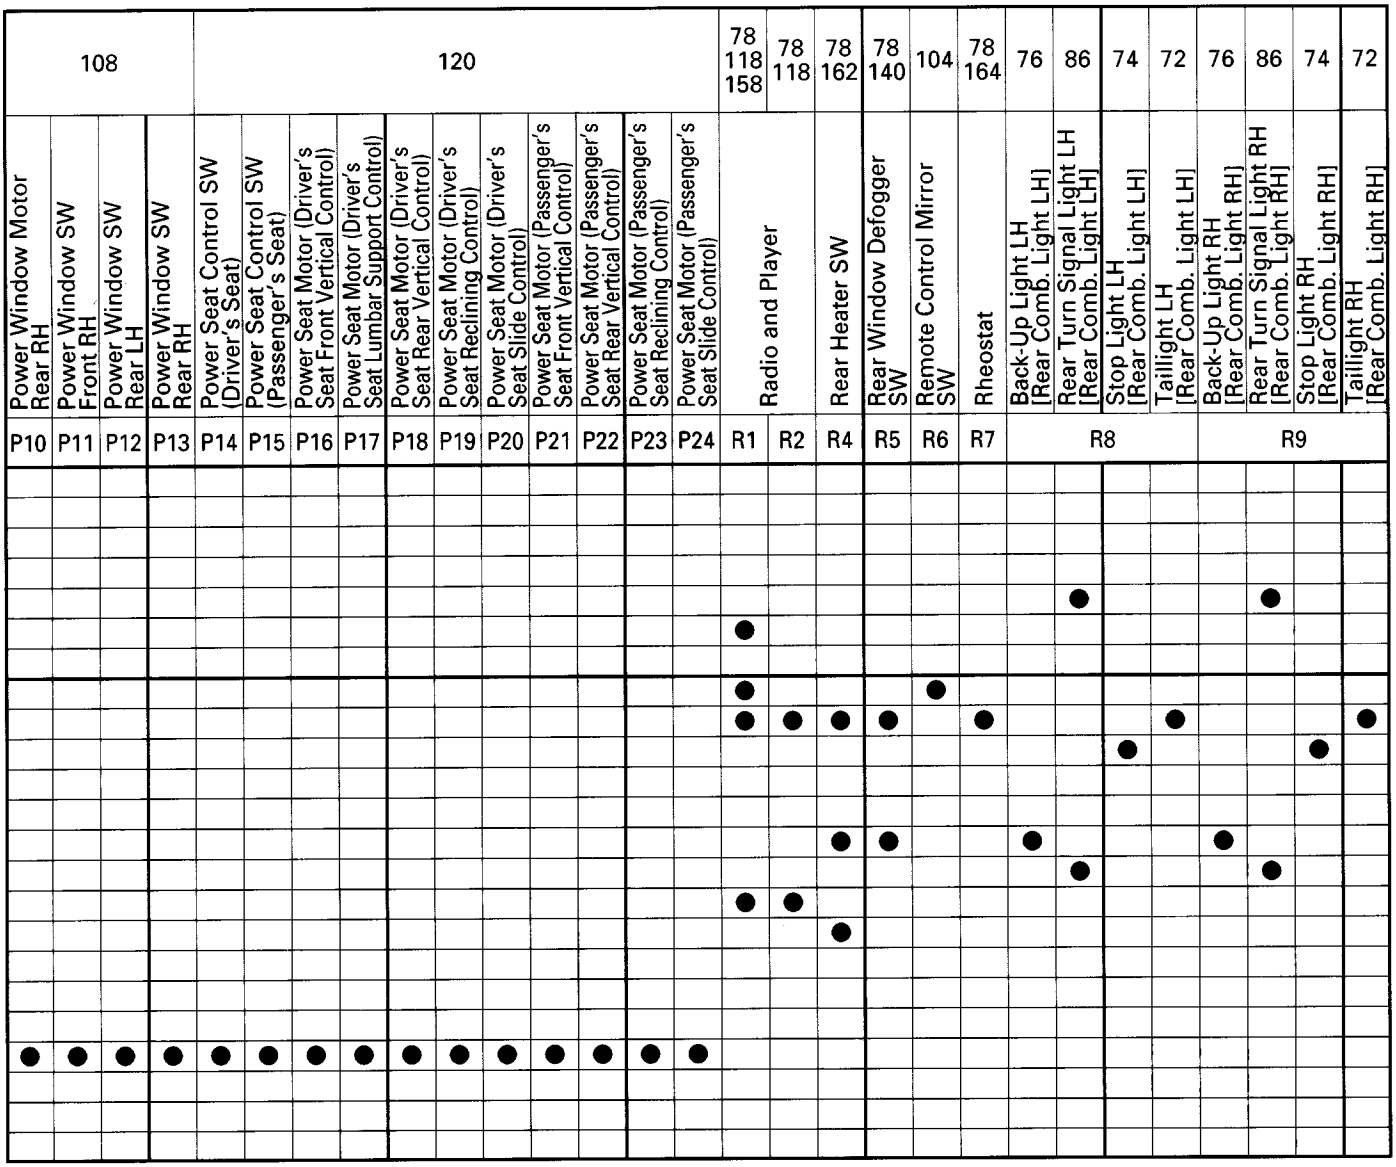

112
134 151
58 132
58
58 132 151 164
78 132
86
91
58
154
82
58 164
56
78
70
58
97
78 86
78 170
Door Lock Motor Rear RH
Diode (Neutral Detection)
Engine Control Module
Electronically Controlled Transmission Pattern Select SW
Front Turn Signal Light LH
Front Turn Signal Light RH
Front Wiper Motor
Fuel Pump Relay
Fuel Pump Resistor
Front Diff. Lock Position SW
Front Interior Light (w/ Moon Roof)
Front Interior Light (w/o Moon Roof)
Fuel Sender and Pump
Generator
Glove Box Light
Glove Box Light SW
Headlight Hi LH
Headlight Hi RH
Headlight Lo LH
Headlight Lo RH
Heated Oxygen Sensor (Bank 1 Sensor 1)
Heated Oxygen Sensor (Bank 1 Sensor 2)
Horn LH (High)
Horn RH (Low)
Hazard SW
Heater Control SW and A/C SW
D27
D28
E4
E5
E7
E9
F1
F2
F3
F4
F5
F13
F16
F17
F18
G1
G3
G4
H1
H2
H3
H4
H5
H6
H7
H8
H9
H10

# H POWER SOURCE (Current Flow Chart)

| Location | CB or Fuse | | *Page Nos. of Related Systems | 170 | 74 | 58 | 82 | | 88 | 72 | 58 | 98 | 82 98 | 98 | 164 | | 78 132 | 76 132 151 | 72 | | 164 | 108 | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | Parts | Heater Control SW and A/C SW | High Mounted Stop Light | Idle Air Control Valve | Ignition Key Cylinder Light | Ignition Key Cylinder Light Relay | Light Retainer Relay | License Plate Light | Mass Air Flow Meter | Moon Roof Control Relay | Moon Roof Control SW and Personal Light | Moon Roof Limit SW and Motor | Oil Level Warning SW | Oil Pressure Sender | O/D Main SW | Park/Neutral Position SW | Parking Light LH | Parking Light RH | Parking Brake SW | Power Window Master SW | Power Window Motor Front LH | Power Window Motor Front RH | Power Window Motor Rear LH |
| | | | Code or Location | H11 | H12 | I1 | I10 | I11 | L1 | L2 | M1 | M2 | M3 | M4 | O1 | O2 | O4 | P1 | P2 | P3 | P4 | P6 | P7 | P8 | P9 |
| ① | 7.5A | CHARGE | | | | | | | | | | | | | | | | | | | | | | | |
| | 15A | EFI | | | | ● | | | | | ● | | | | | | | | | | | | | | |
| | 15A | HEAD (LH) | | | | | | | | | | | | | | | | | | | | | | | |
| | 15A | HEAD (RH) | | | | | | | | | | | | | | | | | | | | | | | |
| | 15A | HAZ-HORN | | | | | | | | | | | | | | | | | | | | | | | |
| | 10A | DOME | | | | | ● | ● | | | | | ● | | | | | | | | | | | | |
| | 60A | ABS | | | | | | | | | | | | | | | | | | | | | | | |
| ② | 15A | CIG | | | | | | | | | | | | | | | | | | | | | | | |
| | 15A | TAIL | | | | | | | | ● | | | | | | | ● | | ● | ● | | | | | |
| | 10A | STOP | | | ● | | | | | | | | | | | | | | | | | | | | |
| | 20A | DEFOG | | | | | | | | | | | | | | | | | | | | | | | |
| | 20A | WIPER | | | | | | | | | | | | | | | | | | | | | | | |
| | 10A | GAUGE | | ● | | | | | | | | | | | ● | ● | ● | ● | | | ● | | | | |
| | 7.5A | TURN | | | | | | | | | | | | | | | | | | | | | | | |
| | 15A | ECU-IG | | | | | | | ● | | | | | | | | | | | | | | | | |
| | 20A | REAR-HTR | | | | | | | | | | | | | | | | | | | | | | | |
| | 7.5A | IGN | | | | | | | | | | | | | | | | | | | | | | | |
| | 10A | A.C | | ● | | | | | | | | | | | | | | | | | | | | | |
| | 30A | DIFF | | | | | | | | | | | | | | | | | | | | | | | |
| | 30A | FL POWER | | | | | | | | | | ● | ● | ● | | | | | | | | ● | ● | ● | ● |
| | 40A | FL HEATER | | | | | | | | | | | | | | | | | | | | | | | |
| | 10A | ECU-B | | | | | | | ● | | | | | | | | | | | | | | | | |
| | 15A | OBD | | | | | | | | | | | | | | | | | | | | | | | |

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ①: R/B No. 2 (See page 18) ②: Fuse Block (F11 See page 20)
③: R/B No. 1 (See page 20)

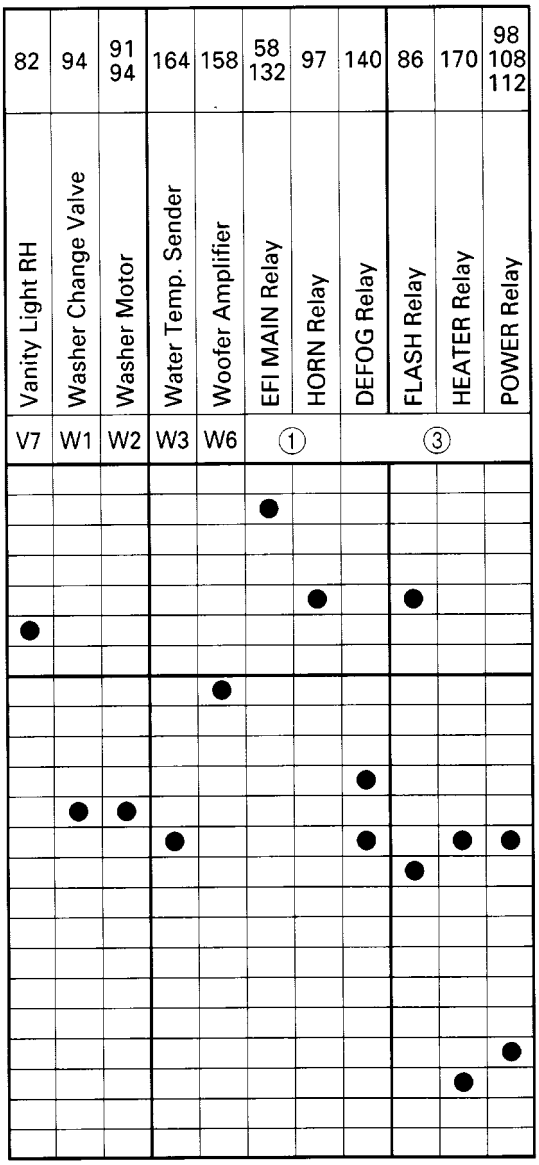

108
120
78 118 158
78 118
78 162
78 140
104
78 164
76
86
74
72
76
86
74
72
Power Window Motor Rear RH
Power Window SW Front RH
Power Window SW Rear LH
Power Window SW Rear RH
Power Seat Control SW (Driver's Seat)
Power Seat Control SW (Passenger's Seat)
Power Seat Motor (Driver's Seat Front Vertical Control)
Power Seat Motor (Driver's Seat Lumbar Support Control)
Power Seat Motor (Driver's Seat Rear Vertical Control)
Power Seat Motor (Driver's Seat Reclining Control)
Power Seat Motor (Driver's Seat Slide Control)
Power Seat Motor (Passenger's Seat Front Vertical Control)
Power Seat Motor (Passenger's Seat Rear Vertical Control)
Power Seat Motor (Passenger's Seat Reclining Control)
Power Seat Motor (Passenger's Seat Slide Control)
Radio and Player
Rear Heater SW
Rear Window Defogger SW
Remote Control Mirror SW
Rheostat
Back-Up Light LH [Rear Comb. Light LH]
Rear Turn Signal Light LH [Rear Comb. Light LH]
Stop Light LH [Rear Comb. Light LH]
Taillight LH [Rear Comb. Light LH]
Back-Up Light RH [Rear Comb. Light RH]
Rear Turn Signal Light RH [Rear Comb. Light RH]
Stop Light RH [Rear Comb. Light RH]
Taillight RH [Rear Comb. Light RH]
P10
P11
P12
P13
P14
P15
P16
P17
P18
P19
P20
P21
P22
P23
P24
R1
R2
R4
R5
R6
R7
R8
R9

# H POWER SOURCE (Current Flow Chart)

| Location | CB or Fuse | | *Page Nos. of Related Systems | 154 | 162 | | 82 | 140 | 94 | | 104 | | 142 | 78 158 | 58, 74 106, 123 128, 132 | 106 | 132 151 | 151 | 72 74 76 | 86 | 164 | 58 | | 82 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | Parts | Rear Diff. Lock Position SW | Rear Heater | Rear Heater Relay | Rear Interior Light | Rear Window Defogger | Rear Wiper Motor | Rear Wiper Relay | Remote Control Mirror LH | Remote Control Mirror RH | Seat Belt Warning Relay | Stereo Component Amplifier | Stop Light SW | Shift Lock ECU | Transfer L4 Position SW | Transfer Neutral Position SW | Trailer Socket (Tail and Stop Light) | Trailer Socket (Turn Signal Light) | Vehicle Speed Sensor (Combination Meter) | VSV (EGR) | VSV (Fuel Pressure Control) | Vanity Light LH |
| | | | Code or Location | R11 | R14 | R15 | R16 | R17 | R19 | R20 | R21 | R22 | S3 | S11 | S13 | S14 | T2 | T3 | T4 | T5 | V1 | V3 | V4 | V6 |
| ① | 7.5A | CHARGE | | | | | | | | | | | | | | | | | | | | | | |
| | 15A | EFI | | | | | | | | | | | | | | | | | | | | ● | ● | |
| | 15A | HEAD (LH) | | | | | | | | | | | | | | | | | | | | | | |
| | 15A | HEAD (RH) | | | | | | | | | | | | | | | | | | | | | | |
| | 15A | HAZ-HORN | | | | | | | | | | | | | | | | | | ● | | | | |
| | 10A | DOME | | | | | ● | | | | | | ● | ● | | | | | | | | | | ● |
| | 60A | ABS | | | | | | | | | | | | | | | | | | | | | | |
| ② | 15A | CIG | | | | | | | | | ● | ● | | ● | | ● | | | | | | | | |
| | 15A | TAIL | | | | | | | | | | | | ● | | | | | ● | | | | | |
| | 10A | STOP | | | | | | | | | | | | | ● | ● | | | ● | | | | | |
| | 20A | DEFOG | | | | | | ● | | | | | | | | | | | | | | | | |
| | 20A | WIPER | | | | | | | ● | ● | | | | | | | | | | | | | | |
| | 10A | GAUGE | ● | | | | | | | | | | ● | | | | ● | ● | ● | | ● | | | |
| | 7.5A | TURN | | | | | | | | | | | | | | | | | | ● | | | | |
| | 15A | ECU-IG | | | | | | | | | | | | | | ● | | | | | | | | |
| | 20A | REAR-HTR | | ● | ● | | | | | | | | | | | | | | | | | | | |
| | 7.5A | IGN | | | | | | | | | | | | | | | | | | | | | | |
| | 10A | A.C | | | | | | | | | | | | | | | | | | | | | | |
| | 30A | DIFF | | | | | | | | | | | | | | | | | | | | | | |
| | 30A | FL POWER | | | | | | | | | | | | | | | | | | | | | | |
| | 40A | FL HEATER | | | | | | | | | | | | | | | | | | | | | | |
| | 10A | ECU-B | | | | | | | | | | | | | | | | | | | | | | |
| | 15A | OBD | | | | | | | | | | | | | | | | | | | | | | |

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ①: R/B No. 2 (See page 18) ②: Fuse Block (F11 See page 20)
③: R/B No. 1 (See page 20)


82
94
91
94
164
158
58
132
97
140
86
170
98
108
112
Vanity Light RH
Washer Change Valve
Washer Motor
Water Temp. Sender
Woofer Amplifier
EFI MAIN Relay
HORN Relay
DEFOG Relay
FLASH Relay
HEATER Relay
POWER Relay
V7
W1
W2
W3
W6
①
③