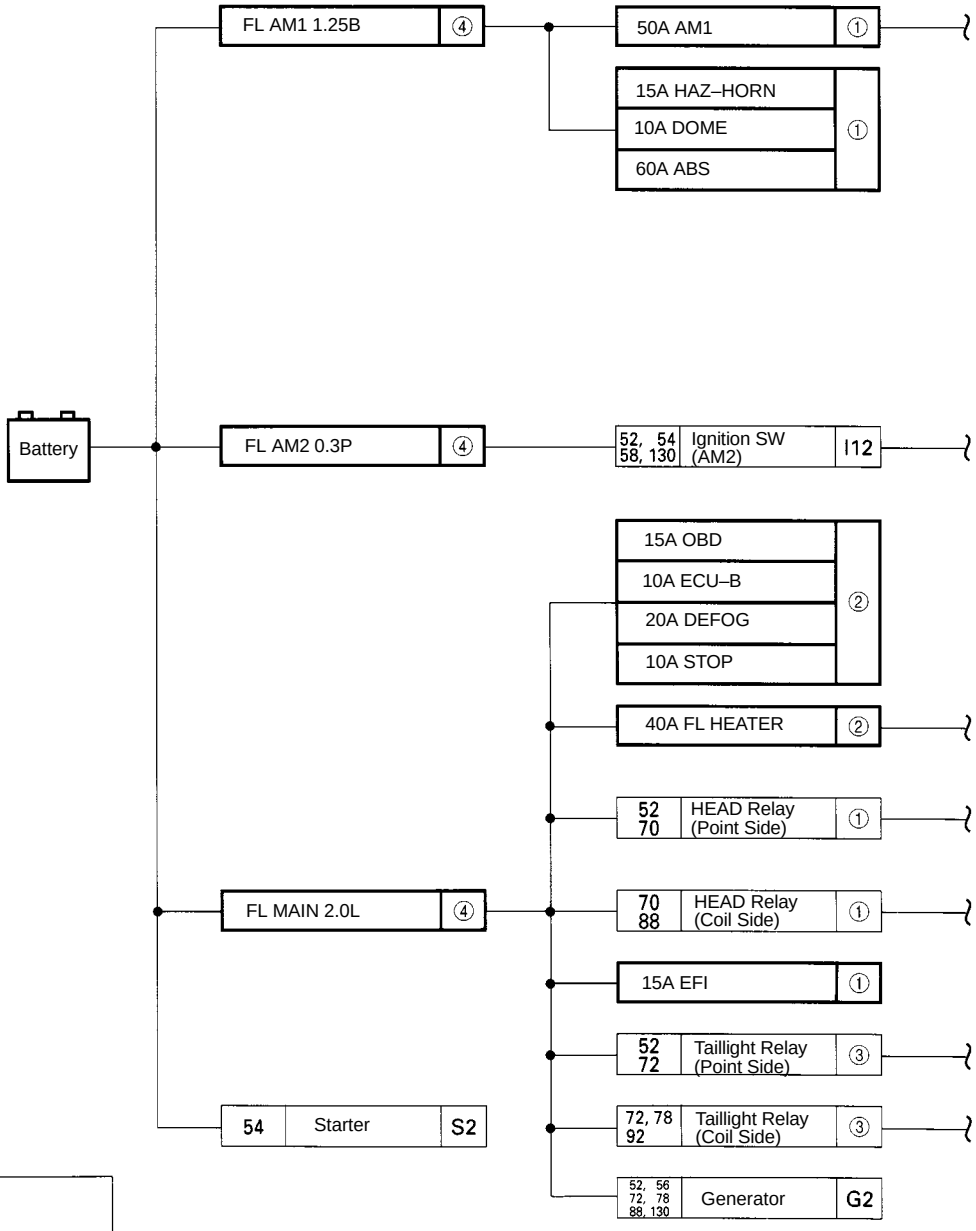
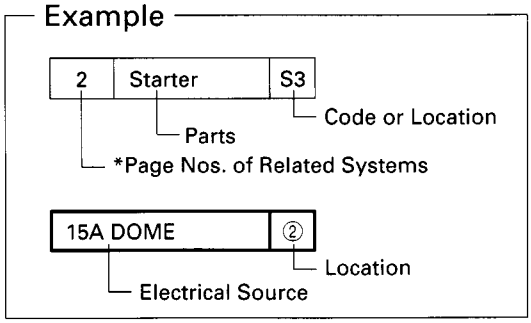
POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.



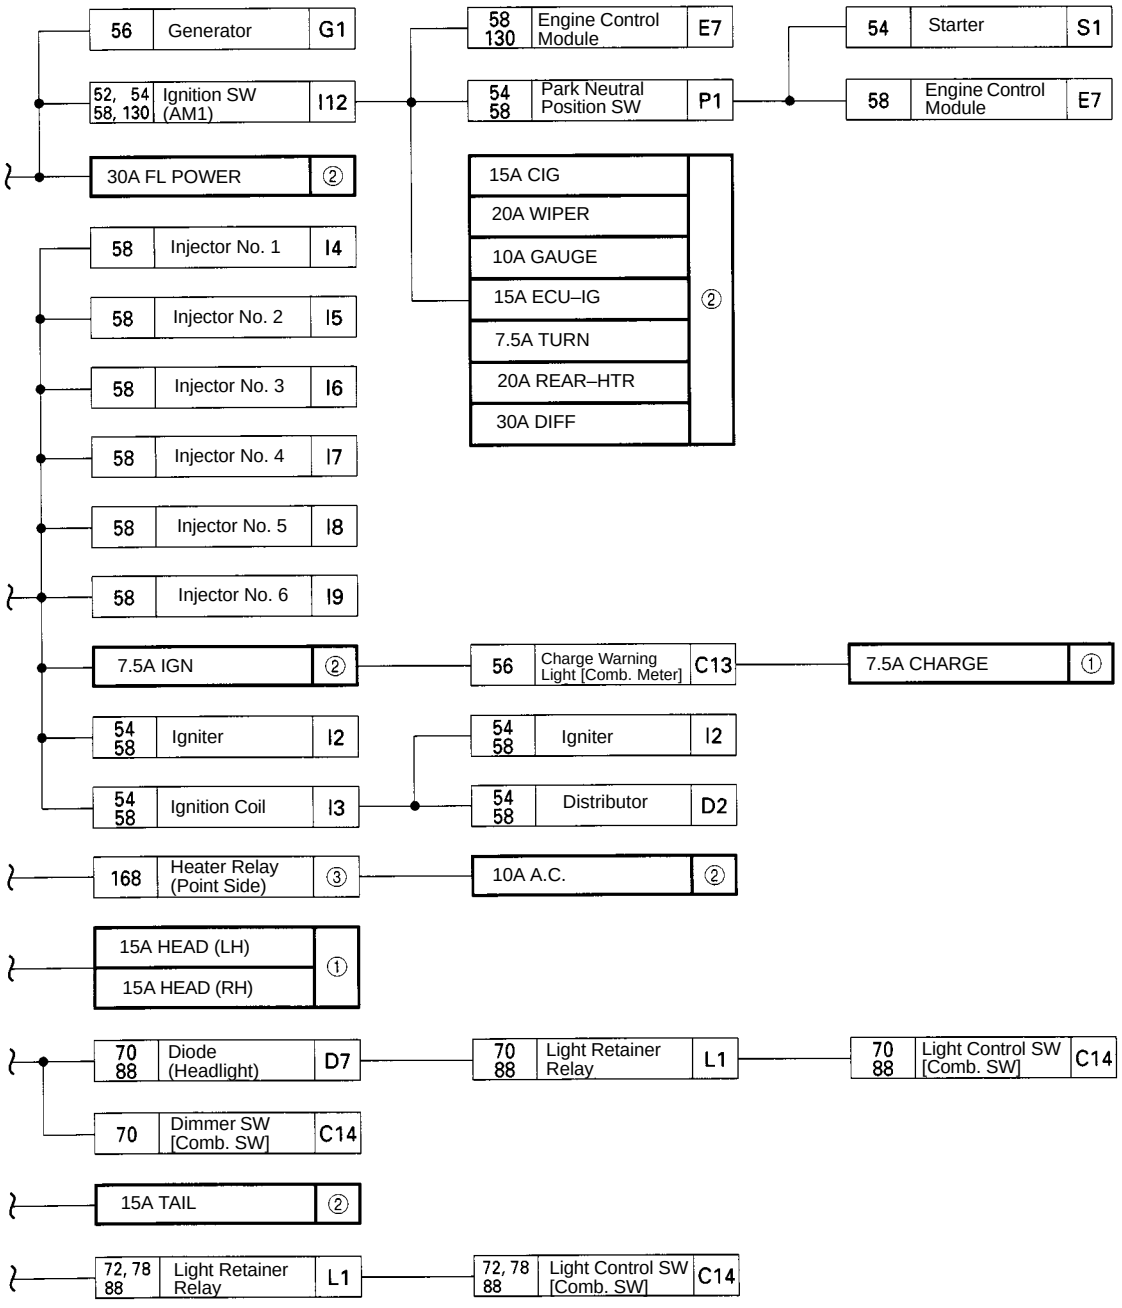
Example



* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 18)

(2) : Fuse Block (F11 See page 20)



(3) : R/B No. 1
(See page 20)

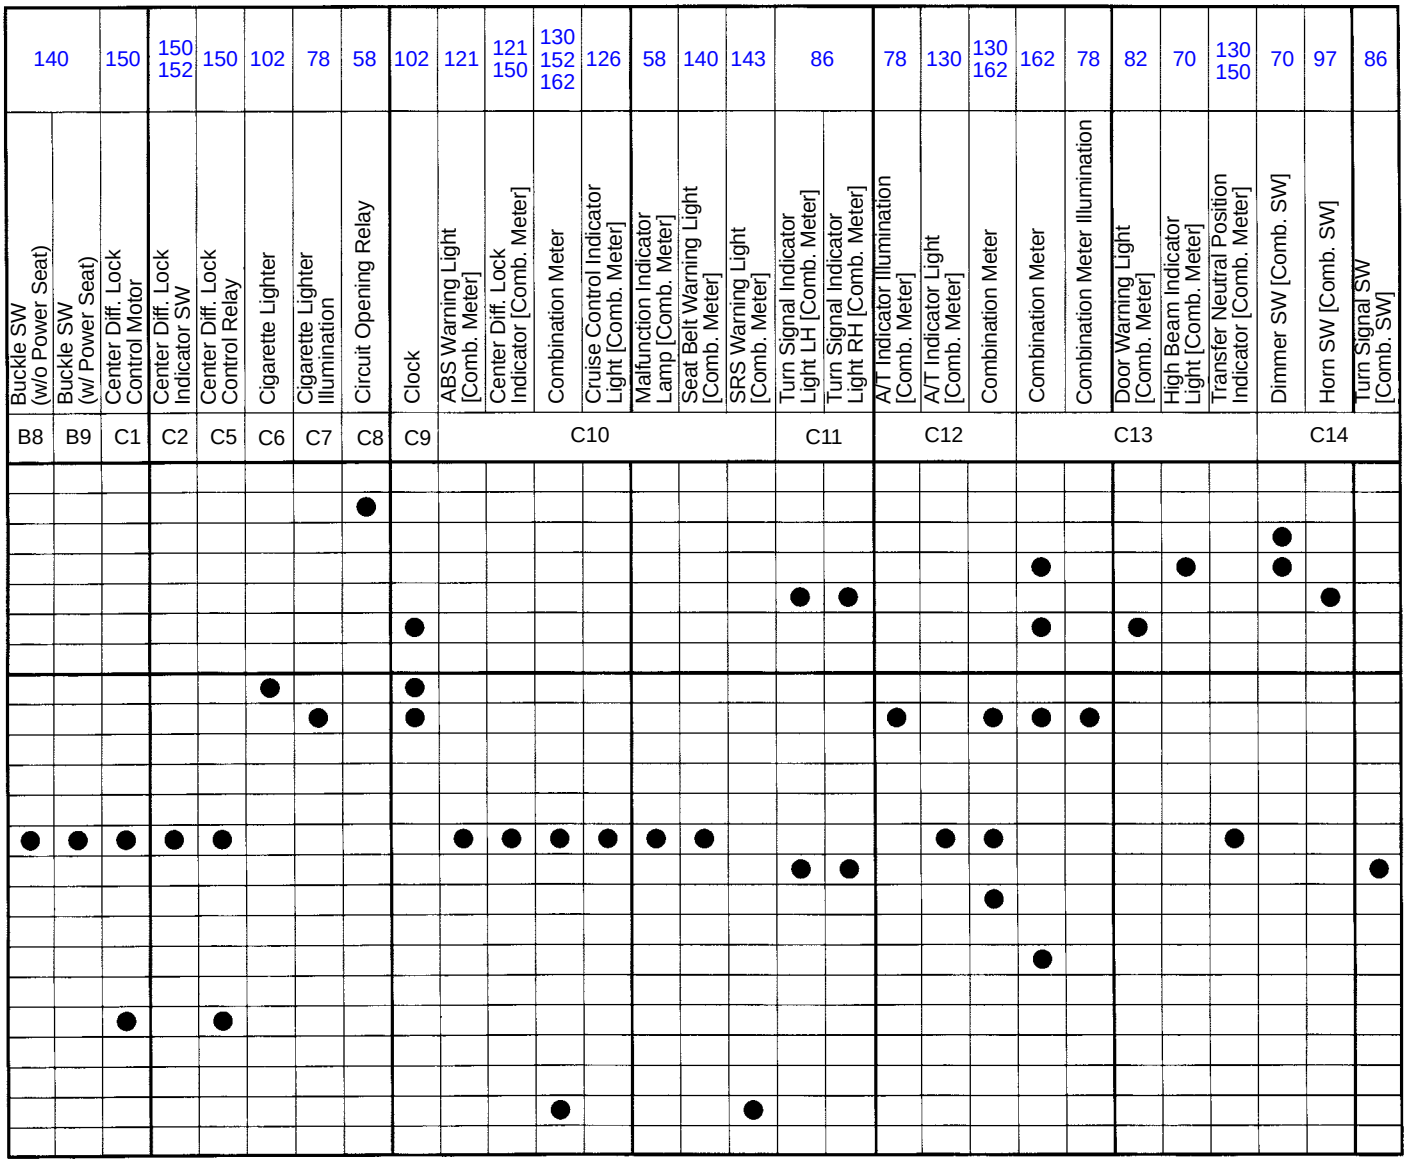
(4) : Fusible Link (F6, F7, F8
See page 22)

POWER SOURCE (Current Flow Chart)

Location	CB or Fuse		A/C Pressure SW	ABS Actuator	ABS Relay		Auto Antenna Motor	A/C Amplifier	A/C System Amplifier	ABS ECU		Air Inlet Control Servo Motor	Air Vent Mode Control Servo Motor	Airbag Sensor Assembly	Ashtray Illumination	Auto Antenna Control SW	ABS Deceleration Sensor	Brake Fluid Level Warning SW	Blower Motor (A/C)	Blower Motor (Heater)	Blower Resistor	Blower Speed Control Relay	Back Door Courtesy SW	Back Door Lock Motor
*Page Nos. of Related Systems			168		121		117	168		121		168		143	78	78 117	121	162	168				82	112
Parts / Code or Location			A/C Pressure SW	ABS Actuator	ABS Relay		Auto Antenna Motor	A/C Amplifier	A/C System Amplifier	ABS ECU		Air Inlet Control Servo Motor	Air Vent Mode Control Servo Motor	Airbag Sensor Assembly	Ashtray Illumination	Auto Antenna Control SW	ABS Deceleration Sensor	Brake Fluid Level Warning SW	Blower Motor (A/C)	Blower Motor (Heater)	Blower Resistor	Blower Speed Control Relay	Back Door Courtesy SW	Back Door Lock Motor
			A2	A4	A6	A7	A8	A9	A10	A12	A13	A14	A16	A17	A20	A21	A22	B1	B2	B3	B4	B5	B6	B7
①	7.5A	CHARGE																						
	15A	EFI																						
	15A	HEAD (LH)																						
	15A	HEAD (RH)																						
	15A	HAZ–HORN																						
	10A	DOME																					●	
	60A	ABS		●	●	●					●													
②	15A	CIG					●							●		●								
	15A	TAIL													●	●								
	10A	STOP								●														
	20A	DEFOG																						
	20A	WIPER																						
	10A	GAUGE	●	●		●		●	●	●	●	●	●					●				●		
	7.5A	TURN																						
	15A	ECU–IG									●			●			●							
	20A	REAR–HTR																						
	7.5A	IGN																						
	10A	A.C.																						
	30A	DIFF																						
	30A	FL POWER																						●
	40A	FL HEATER																	●	●	●	●		
	10A	ECU–B									●			●										
	15A	OBD																						

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 18) (2) : Fuse Block (F11 See page 20) (3) : R/B No. 1 (See page 20)

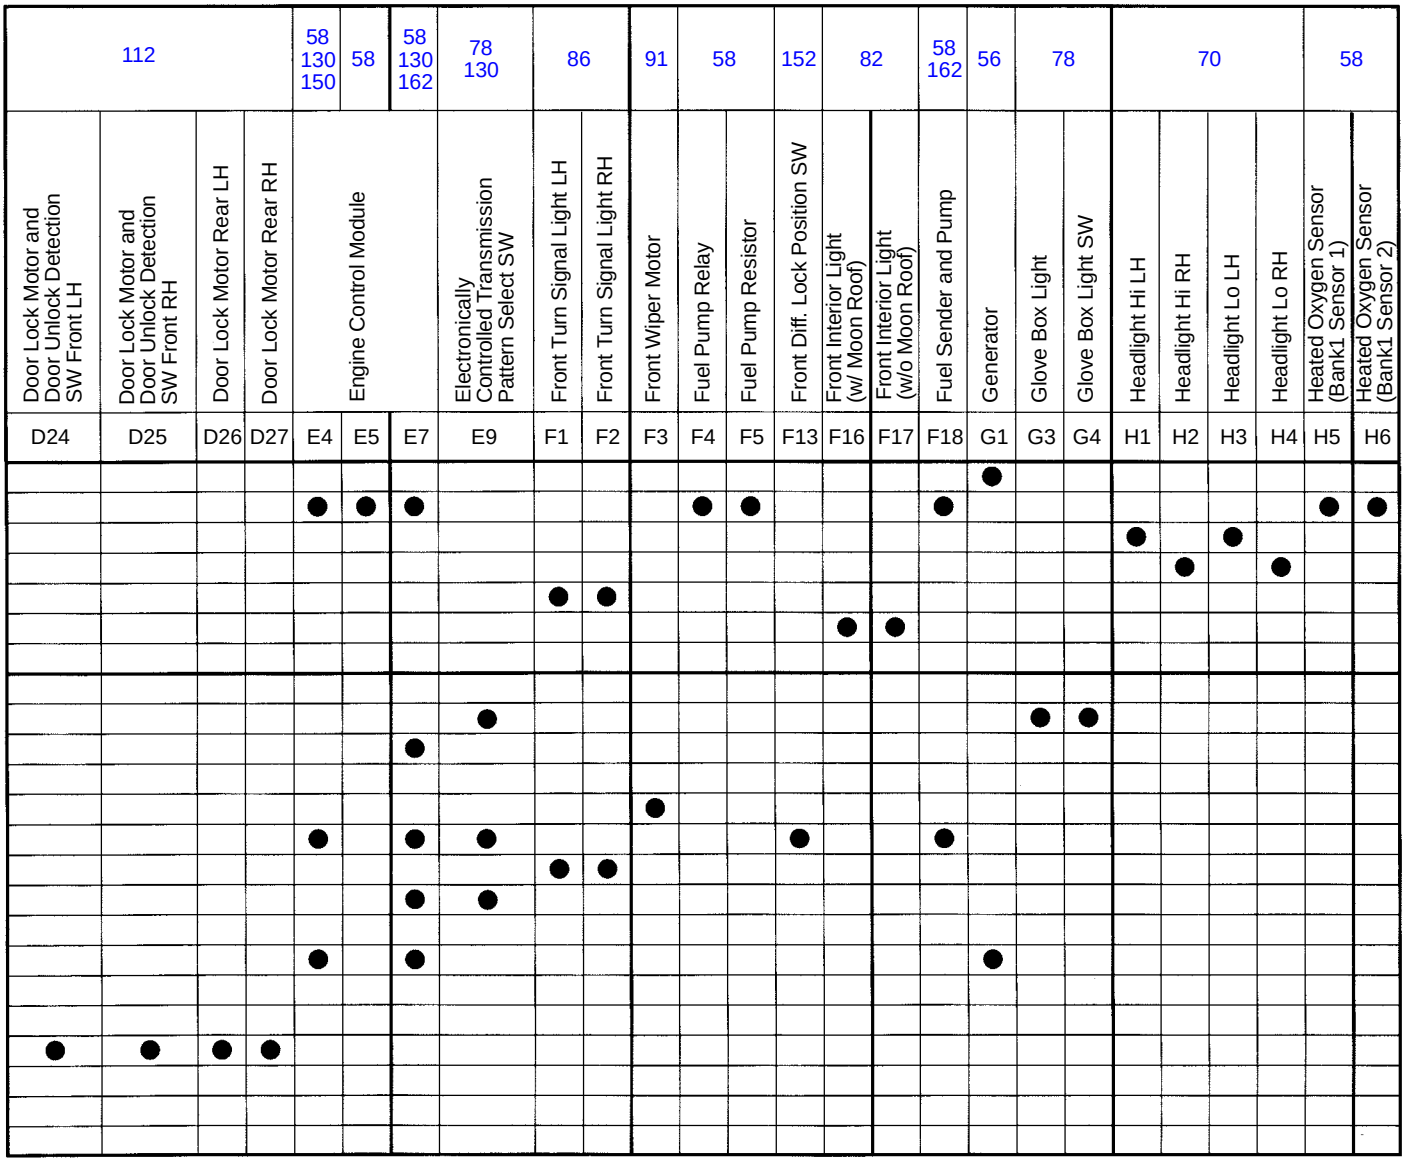

140
150
150 152
150
102
78
58
102
121
121 150
130 152 162
126
58
140
143
86
78
130
130 162
162
78
82
70
130 150
70
97
86
Buckle SW (w/o Power Seat)
Buckle SW (w/ Power Seat)
Center Diff. Lock Control Motor
Center Diff. Lock Indicator SW
Center Diff. Lock Control Relay
Cigarette Lighter
Cigarette Lighter Illumination
Circuit Opening Relay
Clock
ABS Warning Light [Comb. Meter]
Center Diff. Lock Indicator [Comb. Meter]
Combination Meter
Cruise Control Indicator Light [Comb. Meter]
Malfunction Indicator Lamp [Comb. Meter]
Seat Belt Warning Light [Comb. Meter]
SRS Warning Light [Comb. Meter]
Turn Signal Indicator Light LH [Comb. Meter]
Turn Signal Indicator Light RH [Comb. Meter]
A/T Indicator Illumination [Comb. Meter]
A/T Indicator Light [Comb. Meter]
Combination Meter
Combination Meter
Combination Meter Illumination
Door Warning Light [Comb. Meter]
High Beam Indicator Light [Comb. Meter]
Transfer Neutral Position Indicator [Comb. Meter]
Dimmer SW [Comb. SW]
Horn SW [Comb. SW]
Turn Signal SW [Comb. SW]
B8
B9
C1
C2
C5
C6
C7
C8
C9
C10
C11
C12
C13
C14

POWER SOURCE (Current Flow Chart)

Location	CB or Fuse		*Page Nos. of Related Systems	91	94	156	126	58 121 143	58	152		91	82		94	82									98 108 112
			Parts	Front Wiper and Washer SW [Comb. SW]	Rear Wiper and Washer SW [Comb. SW]	Cooling Fan (Radio and Player)	Cruise Control ECU	Data Link Connector 1	Data Link Connector 3	Diff. Lock Control SW	Diff. Lock ECU	Diode (Front Washer)	Diode (Interior Light)		Diode (Rear Washer)	Door Courtesy Light Front LH	Door Courtesy Light Front RH	Door Courtesy Light Rear LH	Door Courtesy Light Rear RH	Door Courtesy SW Front LH	Door Courtesy SW Front RH	Door Courtesy SW Rear LH	Door Courtesy SW Rear RH	Door Lock Control Relay
			Code or Location	C15		C16	C17	D1	D3	D4	D5	D6	D8	D9	D10	D11	D12	D13	D14	D15	D16	D17	D18	D19	D22
①	7.5A	CHARGE																							
	15A	EFI						●																	
	15A	HEAD (LH)																							
	15A	HEAD (RH)																							
	15A	HAZ–HORN																							
	10A	DOME											●	●	●		●	●	●	●	●	●	●	●	
	60A	ABS																							
②	15A	CIG																							
	15A	TAIL																							
	10A	STOP					●																		
	20A	DEFOG																							
	20A	WIPER	●	●				●				●				●									
	10A	GAUGE				●	●	●			●														●
	7.5A	TURN																							
	15A	ECU–IG					●																		
	20A	REAR–HTR																							
	7.5A	IGN																							
	10A	A.C.																							
	30A	DIFF								●	●														
	30A	FL POWER																							●
	40A	FL HEATER																							
	10A	ECU–B					●	●																	
	15A	OBD							●																

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 18) (2) : Fuse Block (F11 See page 20) (3) : R/B No. 1 (See page 20)


112
58 130 150
58
58 130 162
78 130
86
91
58
152
82
58 162
56
78
70
58
Door Lock Motor and Door Unlock Detection SW Front LH
Door Lock Motor and Door Unlock Detection SW Front RH
Door Lock Motor Rear LH
Door Lock Motor Rear RH
Engine Control Module
Electronically Controlled Transmission Pattern Select SW
Front Turn Signal Light LH
Front Turn Signal Light RH
Front Wiper Motor
Fuel Pump Relay
Fuel Pump Resistor
Front Diff. Lock Position SW
Front Interior Light (w/ Moon Roof)
Front Interior Light (w/o Moon Roof)
Fuel Sender and Pump
Generator
Glove Box Light
Glove Box Light SW
Headlight Hi LH
Headlight Hi RH
Headlight Lo LH
Headlight Lo RH
Heated Oxygen Sensor (Bank1 Sensor 1)
Heated Oxygen Sensor (Bank1 Sensor 2)
D24
D25
D26
D27
E4
E5
E7
E9
F1
F2
F3
F4
F5
F13
F16
F17
F18
G1
G3
G4
H1
H2
H3
H4
H5
H6

POWER SOURCE (Current Flow Chart)

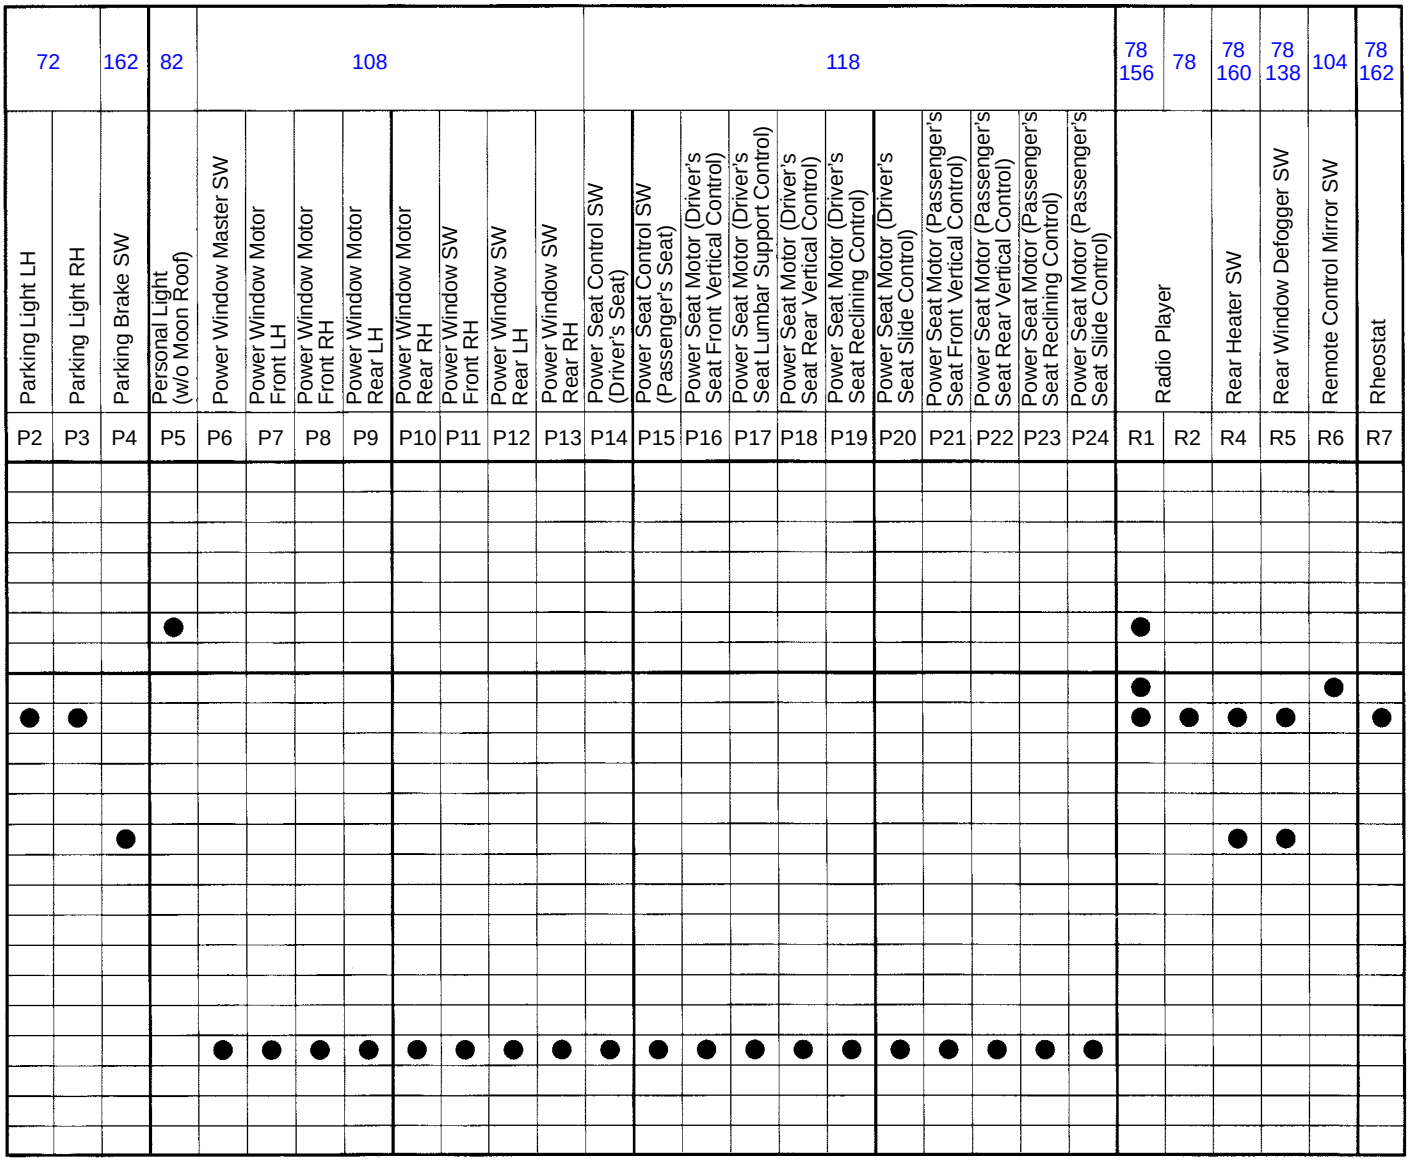
Location	CB or Fuse		*Page Nos. of Related Systems	97		78 86	78 168	168	74	58	82		106	88	72	58	98	82	98	162			78 130	76 130 150
			Parts	Horn LH	Horn RH	Hazard SW	Heater Control SW and A/C SW		High Mounted Stop Light	Idle Air Control Valve	Ignition Key Cylinder Light	Ignition Key Cylinder Light Relay	Ignition SW, Unlock Warning SW and Key Interlock Solenoid	Light Retainer Relay	License Plate Light	Mass Air Flow Meter	Moon Roof Control Relay	Moon Roof Control SW and Personal Light	Moon Roof Limit SW and Motor	Noise Filter (Oil Pressure Sender)	Oil Level Warning SW	Oil Pressure Sender	O/D Main SW	Park/Neutral Position SW
			Code or Location	H7	H8	H9	H10	H11	H12	I1	I10	I11	I12	L1	L2	M1	M2	M3	M4	N2	O1	O2	O4	P1
①	7.5A	CHARGE																						
	15A	EFI								●						●								
	15A	HEAD (LH)																						
	15A	HEAD (RH)																						
	15A	HAZ–HORN	●	●	●																			
	10A	DOME									●	●						●						
	60A	ABS																						
②	15A	CIG											●											
	15A	TAIL			●	●									●								●	
	10A	STOP						●																
	20A	DEFOG																						
	20A	WIPER																						
	10A	GAUGE				●	●													●	●	●	●	●
	7.5A	TURN			●																			
	15A	ECU–IG												●										
	20A	REAR–HTR																						
	7.5A	IGN																						
	10A	A.C.						●																
	30A	DIFF																						
	30A	FL POWER															●		●					
	40A	FL HEATER																						
	10A	ECU–B												●							`			
	15A	OBD																						

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 18)

(2) : Fuse Block (F11 See page 20)

(3) : R/B No. 1 (See page 20)


72
162
82
108
118
78 156
78
78 160
78 138
104
78 162
Parking Light LH
Parking Light RH
Parking Brake SW
Personal Light (w/o Moon Roof)
Power Window Master SW
Power Window Motor Front LH
Power Window Motor Front RH
Power Window Motor Rear LH
Power Window Motor Rear RH
Power Window SW Front RH
Power Window SW Rear LH
Power Window SW Rear RH
Power Seat Control SW (Driver's Seat)
Power Seat Control SW (Passenger's Seat)
Power Seat Motor (Driver's Seat Front Vertical Control)
Power Seat Motor (Driver's Seat Lumbar Support Control)
Power Seat Motor (Driver's Seat Rear Vertical Control)
Power Seat Motor (Driver's Seat Reclining Control)
Power Seat Motor (Driver's Seat Slide Control)
Power Seat Motor (Passenger's Seat Front Vertical Control)
Power Seat Motor (Passenger's Seat Rear Vertical Control)
Power Seat Motor (Passenger's Seat Reclining Control)
Power Seat Motor (Passenger's Seat Slide Control)
Radio Player
Rear Heater SW
Rear Window Defogger SW
Remote Control Mirror SW
Rheostat
P2
P3
P4
P5
P6
P7
P8
P9
P10
P11
P12
P13
P14
P15
P16
P17
P18
P19
P20
P21
P22
P23
P24
R1
R2
R4
R5
R6
R7

POWER SOURCE (Current Flow Chart)

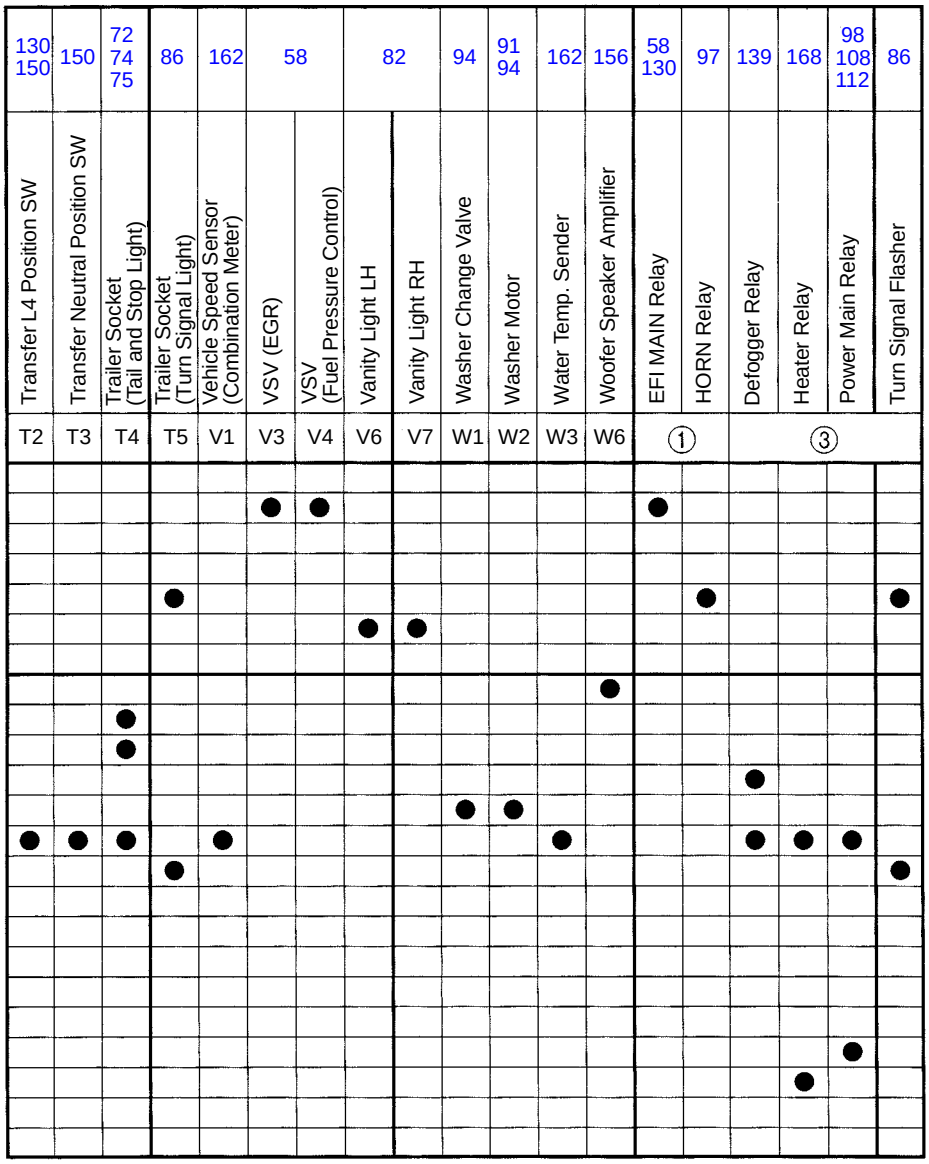
Location	CB or Fuse		*Page Nos. of Related Systems	76	86	74	72	76	86	74	72	152	160		82	137	94		104		140	78 156	58 106 126	74 121 130	106
			Parts	Back–Up Light LH [Rear Comb. Light LH]	Rear Turn Signal Light LH [Rear Comb. Light LH]	Stop Light LH [Rear Comb. Light LH]	Taillight LH [Rear Comb. Light LH]	Back–Up Light RH [Rear Comb. Light RH]	Rear Turn Signal Light RH [Rear Comb. Light RH]	Stop Light RH [Rear Comb. Light RH]	Taillight RH [Rear Comb. Light RH]	Rear Diff. Lock Position SW	Rear Heater	Rear Heater Relay	Rear Interior Light	Rear Window Defogger	Rear Wiper Motor	Rear Wiper Relay	Remote Control Mirror LH	Remote Control Mirror RH	Seat Belt Warning Relay	Stereo Component Amplifier	Stop Light SW	Shift Lock ECU
			Code or Location	R8					R9			R11	R14	R15	R16	R17	R19	R20	R21	R22	S3	S11	S13	S14
①	7.5A	CHARGE																						
	15A	EFI																						
	15A	HEAD (LH)																						
	15A	HEAD (RH)																						
	15A	HAZ–HORN		●																				
	10A	DOME													●					●	●			
	60A	ABS																						
②	15A	CIG																	●	●		●		●
	15A	TAIL					●				●											●		
	10A	STOP				●				●													●	●
	20A	DEFOG														●								
	20A	WIPER															●	●						
	10A	GAUGE	●					●				●	●								●			
	7.5A	TURN		●					●															
	15A	ECU–IG																						●
	20A	REAR–HTR											●	●										
	7.5A	IGN																						
	10A	A.C.																						
	30A	DIFF																						
	30A	FL POWER																						
	40A	FL HEATER																						
	10A	ECU–B																						
	15A	OBD																						

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 18)

(2) : Fuse Block (F11 See page 20)

(3) : R/B No. 1 (See page 20)


130 150
150
72 74 75
86
162
58
82
94
91 94
162
156
58 130
97
139
168
98 108 112
86
Transfer L4 Position SW
Transfer Neutral Position SW
Trailer Socket (Tail and Stop Light)
Trailer Socket (Turn Signal Light)
Vehicle Speed Sensor (Combination Meter)
VSV (EGR)
VSV (Fuel Pressure Control)
Vanity Light LH
Vanity Light RH
Washer Change Valve
Washer Motor
Water Temp. Sender
Woofer Speaker Amplifier
EFI MAIN Relay
HORN Relay
Defogger Relay
Heater Relay
Power Main Relay
Turn Signal Flasher
T2
T3
T4
T5
V1
V3
V4
V6
V7
W1
W2
W3
W6
①
③