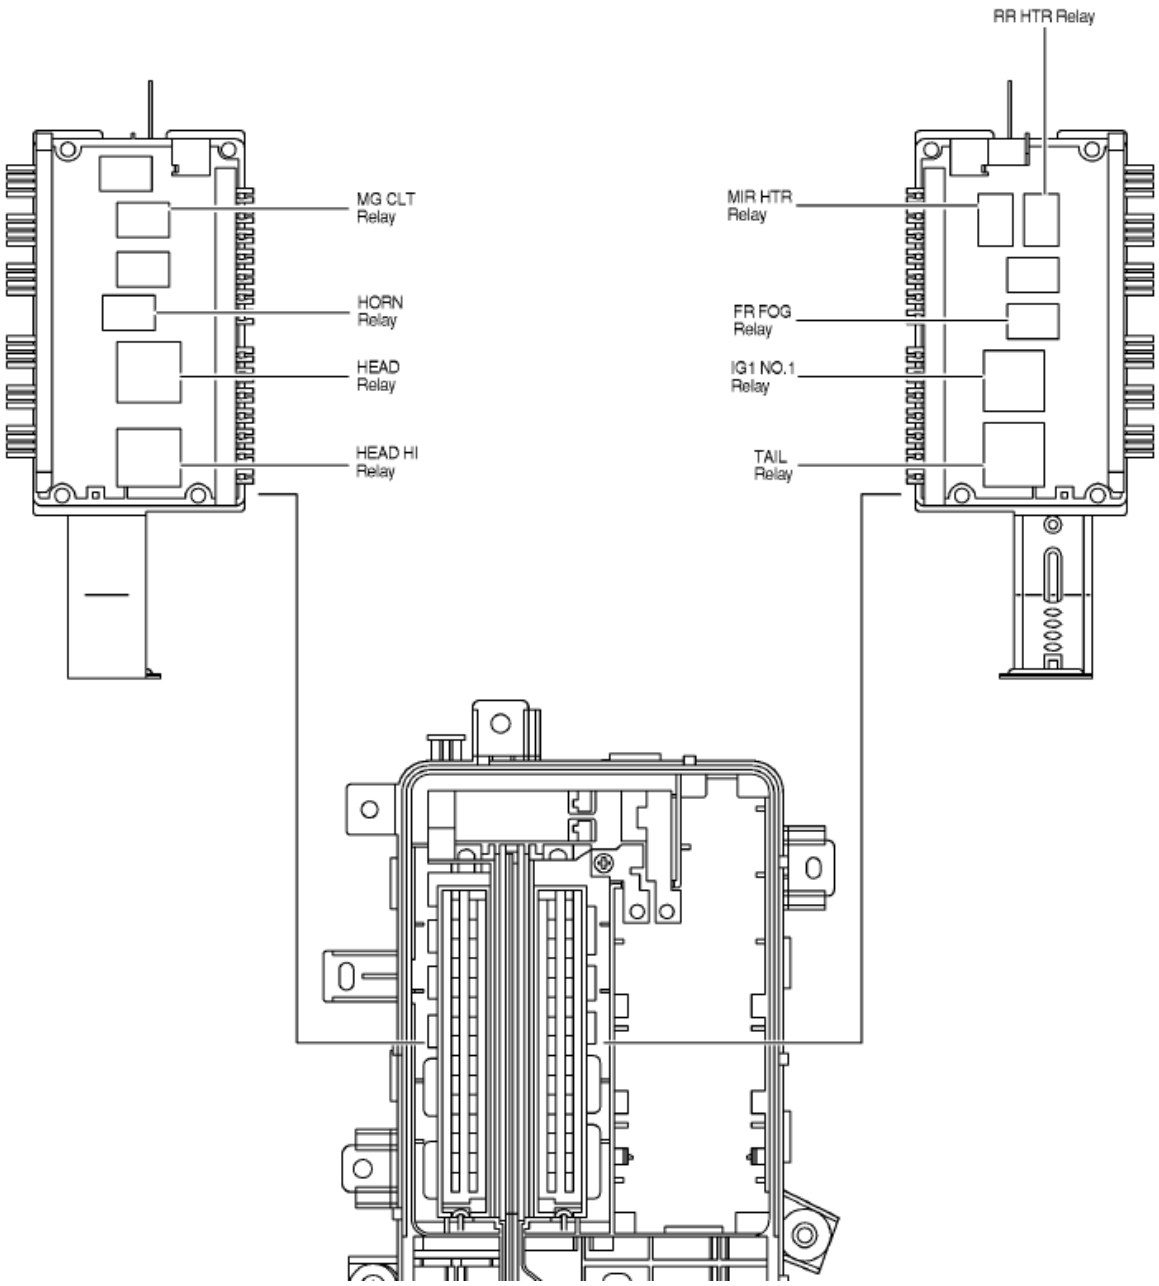
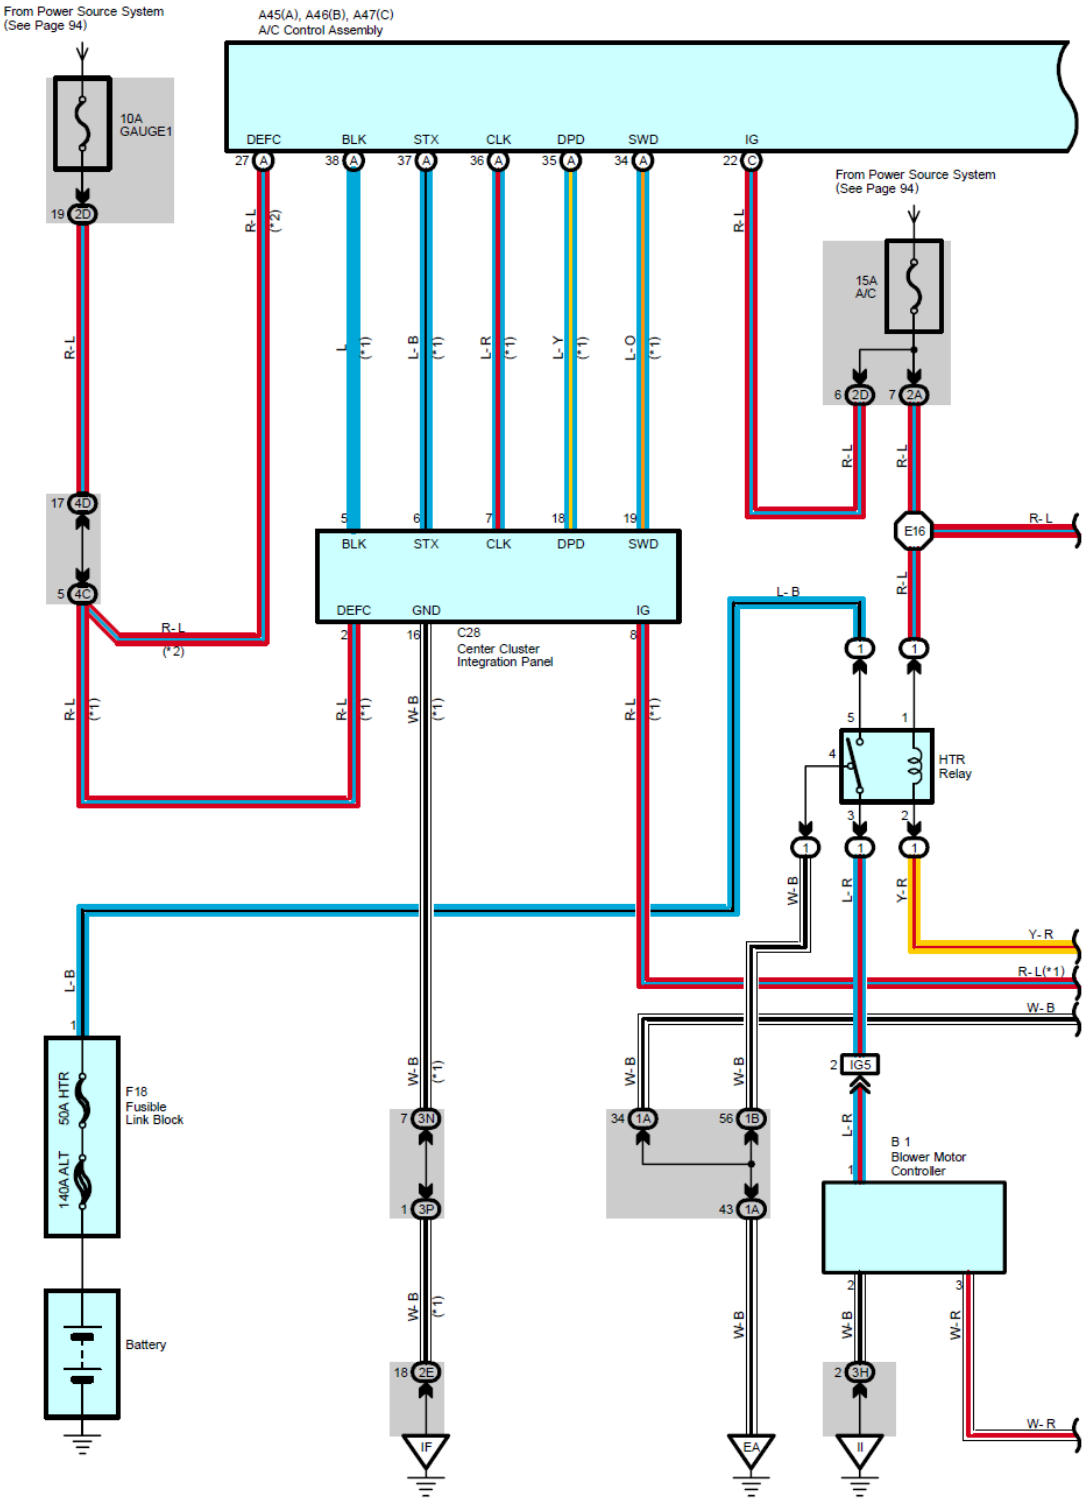
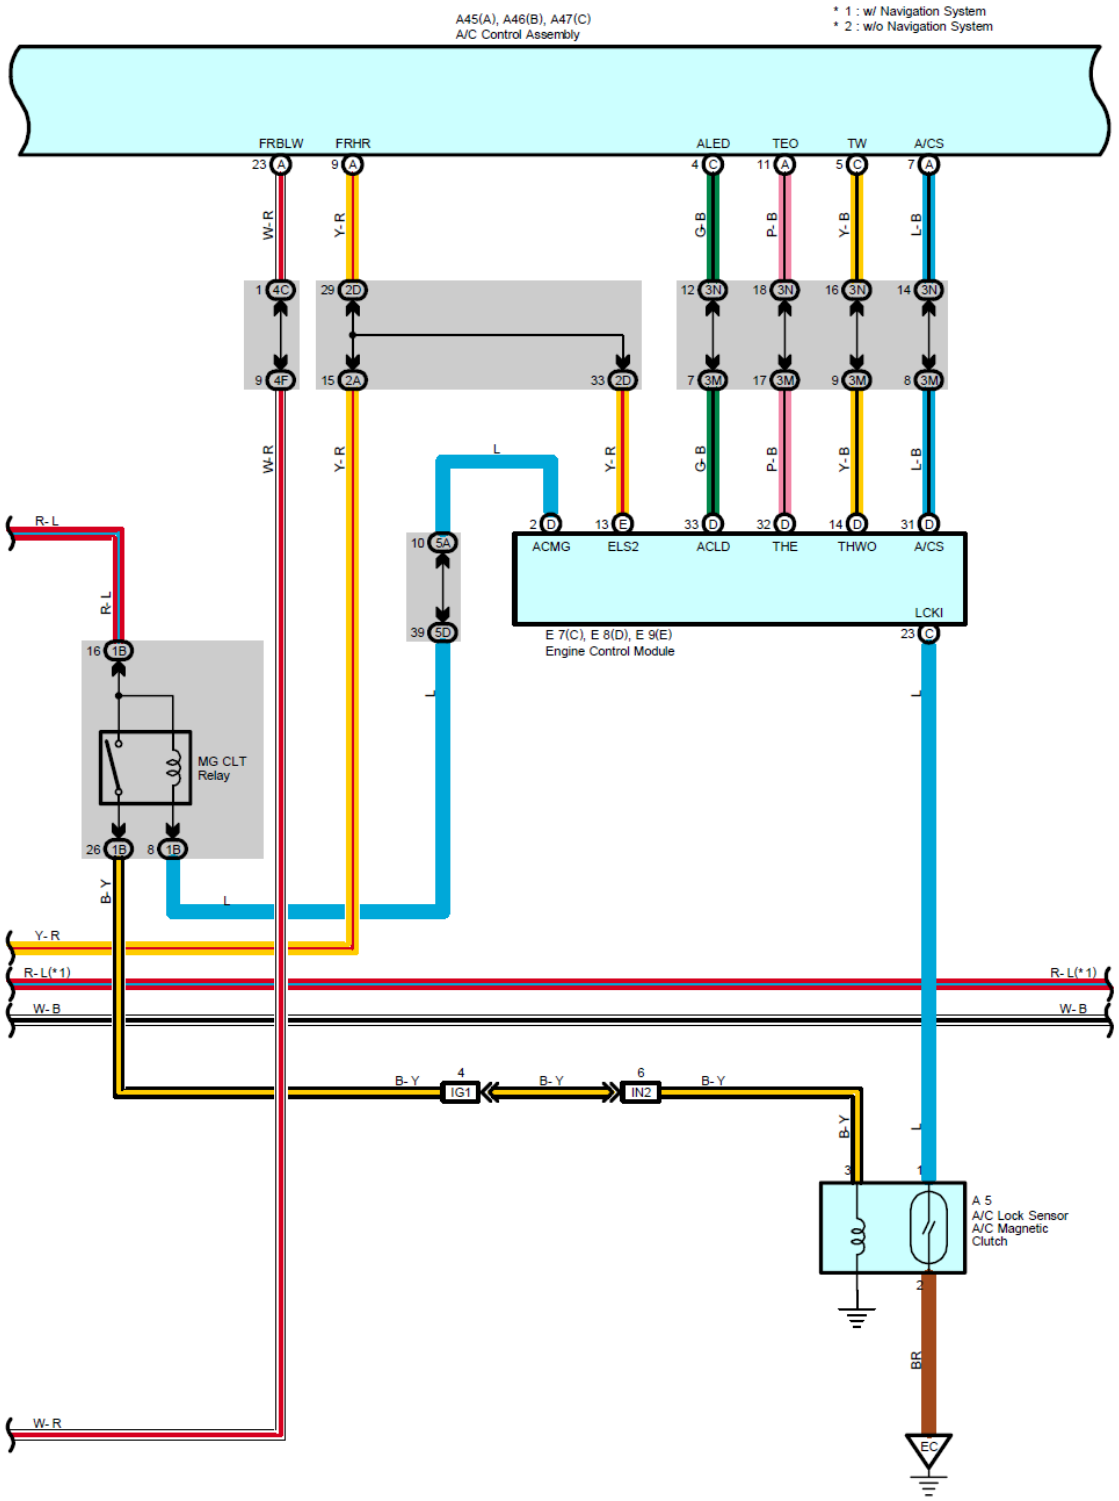
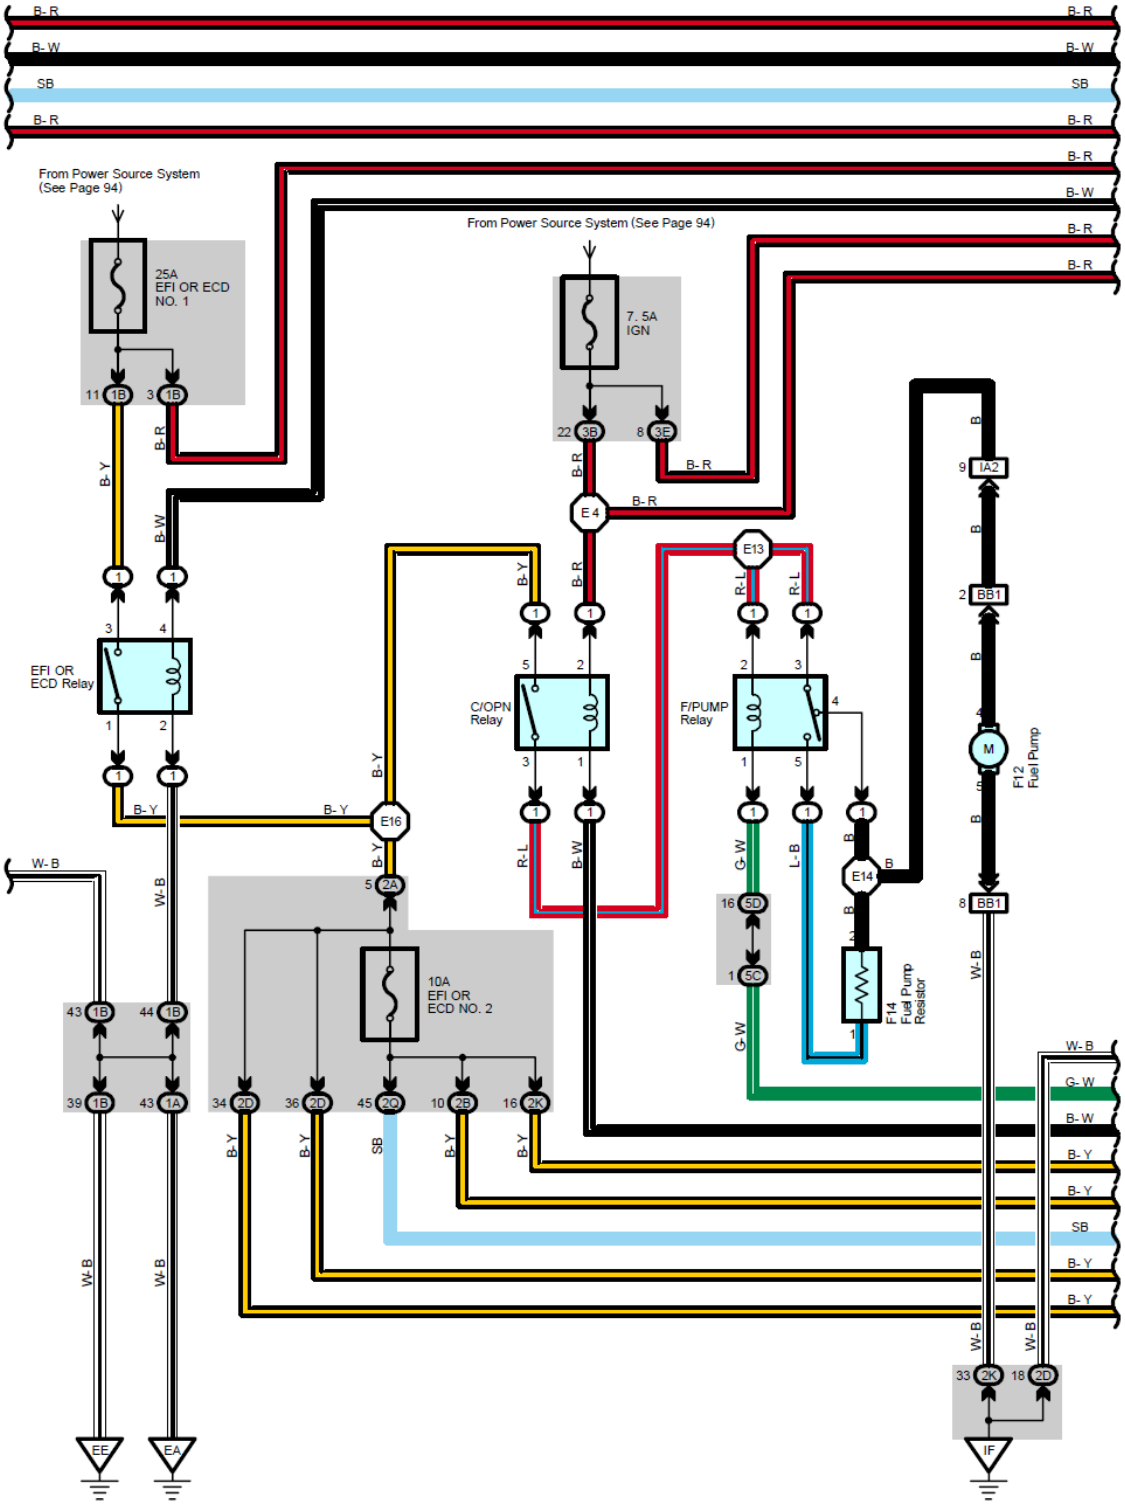

MG CLT Relay
HORN Relay
HEAD Relay
HEAD HI Relay
RR HTR Relay
MIR HTR Relay
FR FOG Relay
IG1 NO.1 Relay
TAIL Relay

Air Conditioning (Front)




A45(A), A46(B), A47(C)
A/C Control Assembly
* 1 : w/ Navigation System
* 2 : w/o Navigation System
FRBLW
FRHR
ALED
TEO
TW
A/CS
W-R
Y-R
G-B
P-B
Y-B
L-B
R-L
L
ACMG
ELS2
ACLD
THE
THWO
A/CS
LCKI
E 7(C), E 8(D), E 9(E)
Engine Control Module
MG CLT
Relay
B-Y
R-L(*1)
W-B
IG1
IN2
A 5
A/C Lock Sensor
A/C Magnetic
Clutch
BR
EC


B- R
B- W
SB
B- R
From Power Source System (See Page 94)
25A EFI OR ECD NO. 1
From Power Source System (See Page 94)
7. 5A IGN
EFI OR ECD Relay
C/OPN Relay
F/PUMP Relay
E16
E4
E13
E14
10A EFI OR ECD NO. 2
F12 Fuel Pump
F14 Fuel Pump Resistor
W- B
G- W
L- B
B- Y
R- L
SB
EE
EA
IF