
SA1UC–01

REPLACEMENT


1. INSPECT BEARINGS

Clean the 2 bearings and outer races and inspect them for wear or damage.

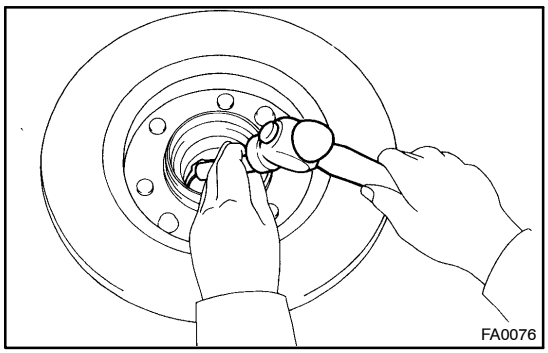

2. REPLACE BEARING OUTER RACES

(a) Using a brass bar and hammer, remove the bearing outer races.

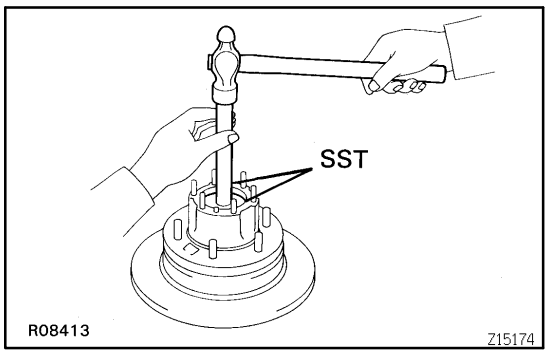

(b) Outside race:
Using SST and a hammer, carefully install 2 new bearing outer races.
SST 09950–60020 (09951–00720),
09950–70010 (09951–07150)

(c) Inside race:
Using SST and a hammer, carefully install 2 new bearing outer races.
SST 09950–60020 (09951–00810),
09950–70010 (09951–07150)