
REAR WINDOW DEFOGGER

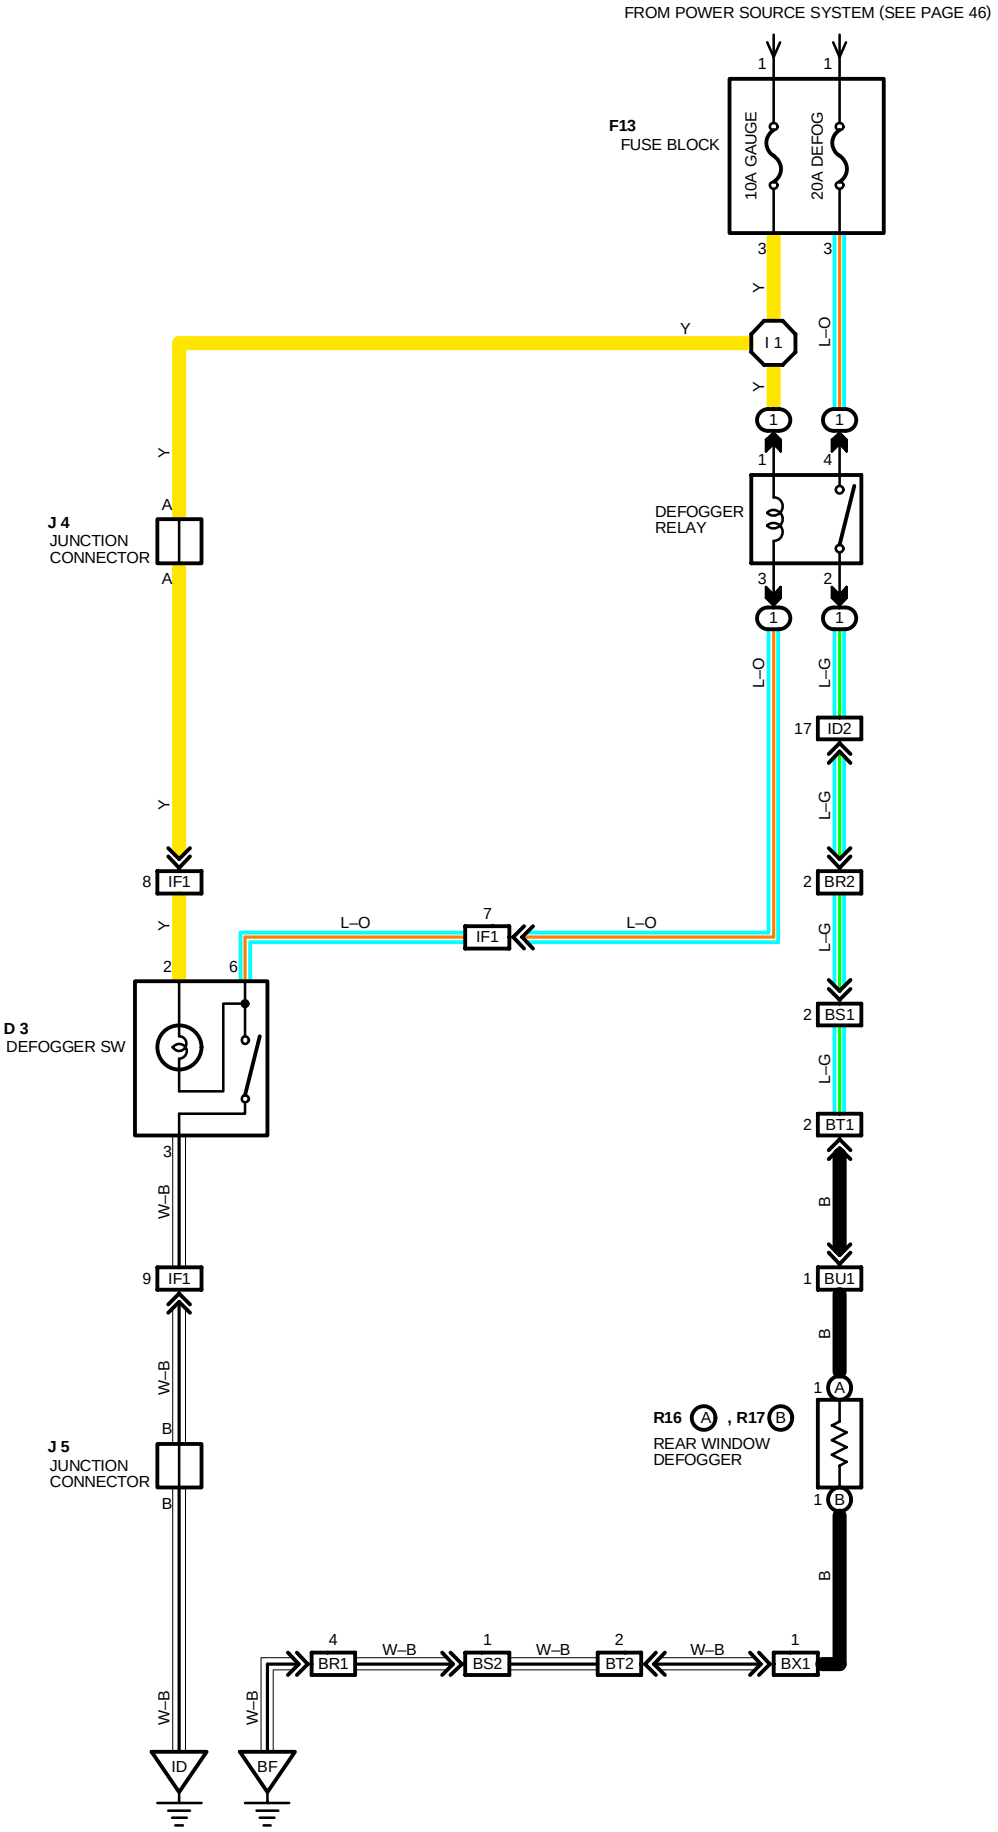

SERVICE HINTS

DEFOGGER RELAY

(1) 4 –**(1)** 2 : CLOSED WITH IGNITION SW ON AND DEFOGGER SW ON

D 3 DEFOGGER SW

2, 6 – GROUND: APPROX. **12** VOLTS WITH IGNITION SW AT **ON** POSITION

3– GROUND: ALWAYS CONTINUITY

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE		SEE PAGE
D 3	23	**J 4**	23	**R16**	A	24
F13	23	**J 5**	23	**R17**	B	24

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID2	28	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
IF1	28	INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL CENTER)
BR1	30	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BR2		
BS1	30	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)
BS2		
BT1	30	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BT2		
BU1	32	REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BX1	32	REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR RIGHT)

: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	28	LEFT KICK PANEL
BF	30	UNDER THE CENTER CONSOLE BOX

: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 1	28	COWL WIRE			


D 3



F13


(SEE PAGE 20)

J 4 ORANGE



(HINT : SEE PAGE 7)

J 5



(HINT : SEE PAGE 7)

R16 (A), **R17** (B) BLACK

