STARTER > REMOVAL

1. REMOVE EXHAUST MANIFOLD SUB-ASSEMBLY RH
2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
3. REMOVE STARTER COVER
4. REMOVE STARTER ASSEMBLY

STARTER > REMOVAL

for Preparation Click here

1. REMOVE EXHAUST MANIFOLD SUB-ASSEMBLY RH

a. Remove the exhaust manifold RH (Click here).


2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

3. REMOVE STARTER COVER


a. Remove the 3 bolts and starter cover.

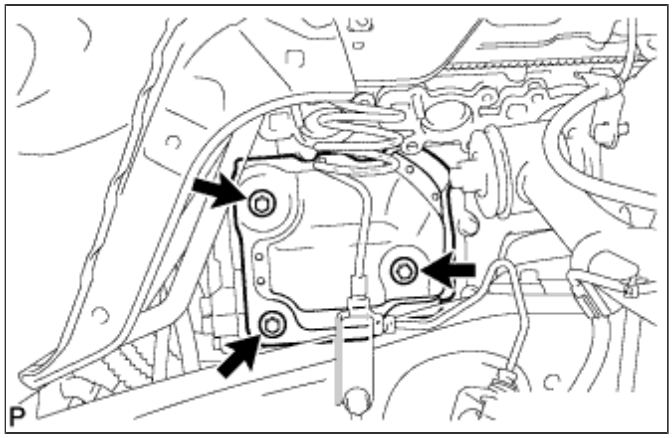


4. REMOVE STARTER ASSEMBLY

a. Disconnect the starter connector.

b. Remove the nut and disconnect the starter wire.

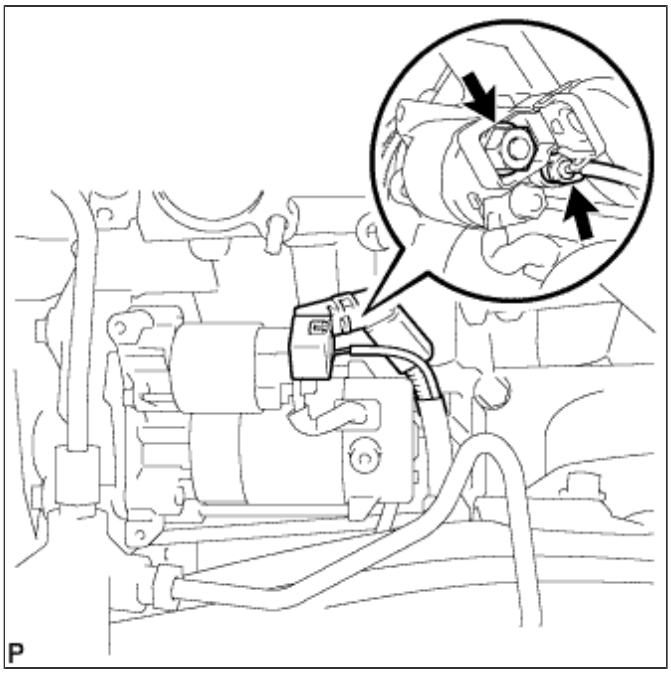

c. Remove the 2 bolts and starter.

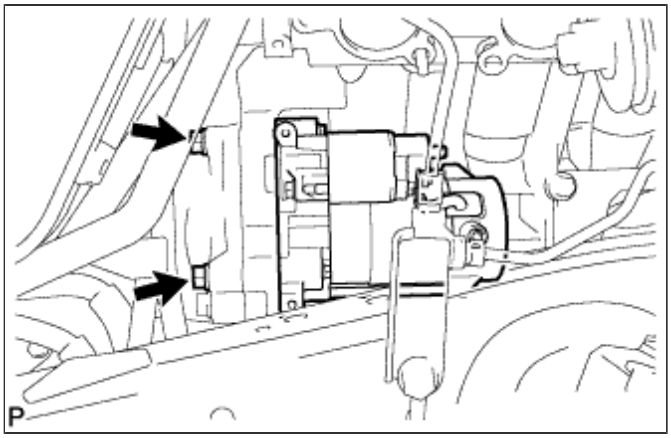

d. Remove the flywheel housing side cover.

