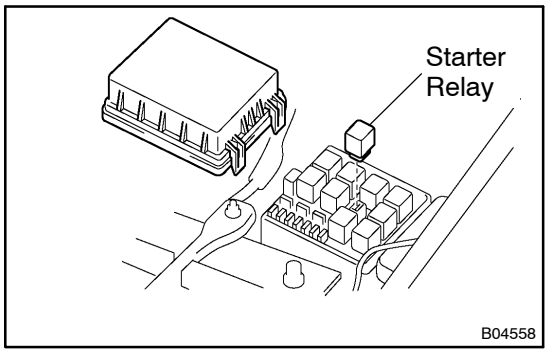



STARTER RELAY

ST08J–03

INSPECTION

1. REMOVE STARTER RELAY (Marking: ”ST”)

Remove the relay box cover and starter relay.

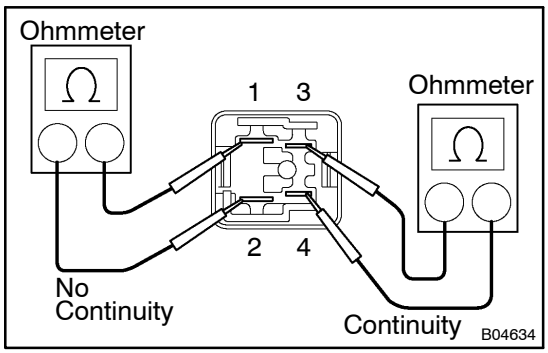


2. INSPECT RELAY CONTINUITY

(a) Using an ohmmeter, check that there is continuity between terminals 3 and 4.

If there is no continuity, replace the relay.

(b) Check that there is no continuity between terminals 1 and 2.

If there is continuity, replace the relay.

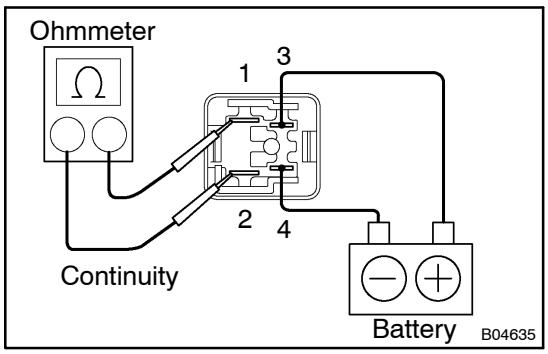

3. INSPECT RELAY OPERATION

(a) Apply battery voltage across terminals 3 and 4.

(b) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

4. REINSTALL STARTER RELAY