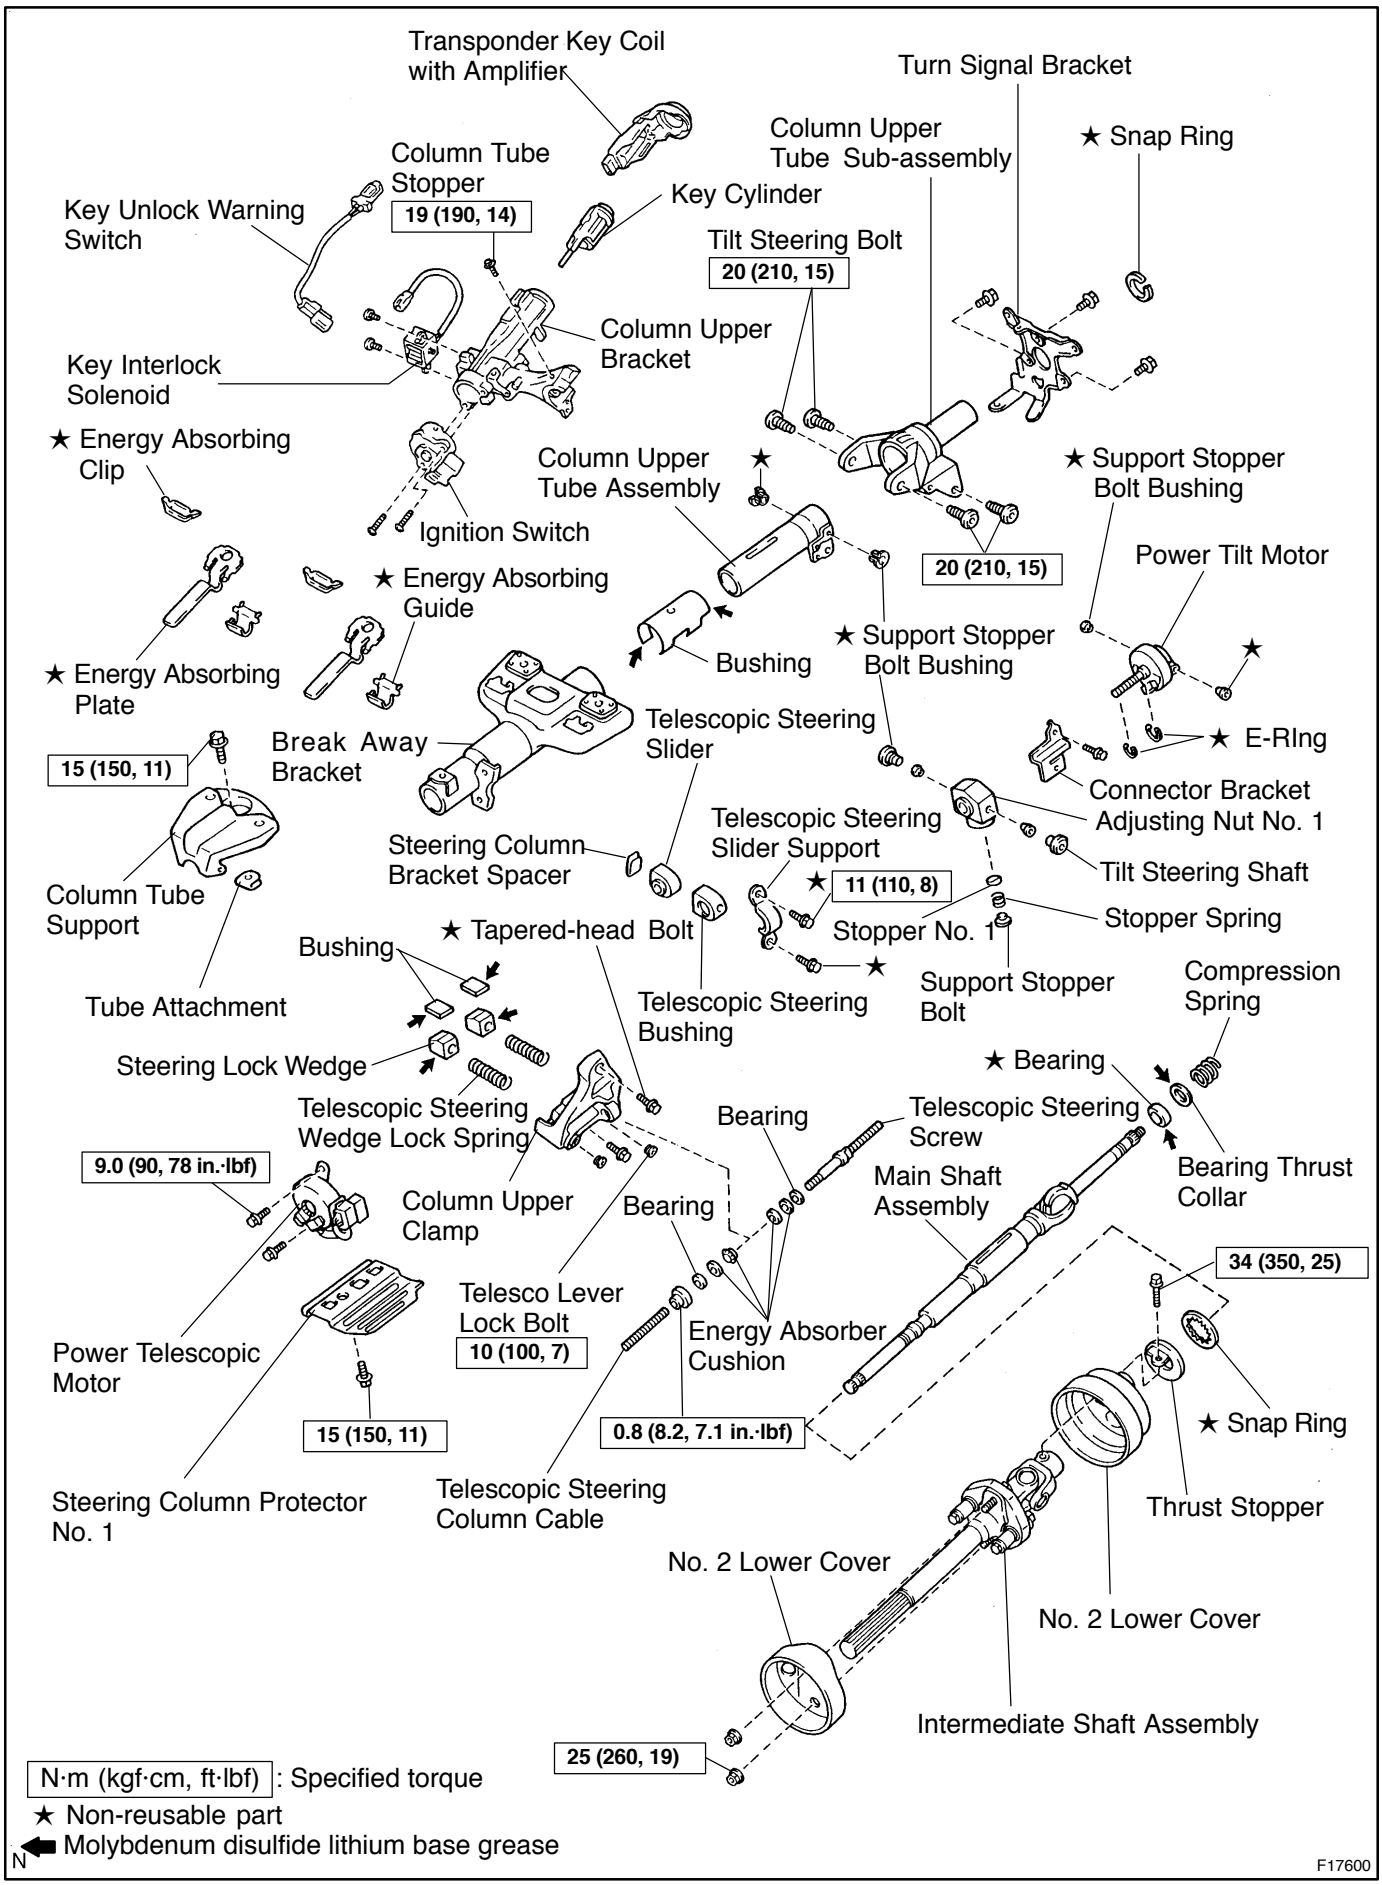

Transponder Key Coil with Amplifier
Turn Signal Bracket
Column Upper Tube Sub-assembly
★ Snap Ring
Column Tube Stopper
19 (190, 14)
Key Cylinder
Key Unlock Warning Switch
Tilt Steering Bolt
20 (210, 15)
Column Upper Bracket
Key Interlock Solenoid
★ Energy Absorbing Clip
Column Upper Tube Assembly
★ Support Stopper Bolt Bushing
Ignition Switch
20 (210, 15)
Power Tilt Motor
★ Energy Absorbing Guide
Bushing
★ Support Stopper Bolt Bushing
★ Energy Absorbing Plate
★ E-RIng
Break Away Bracket
Telescopic Steering Slider
15 (150, 11)
Connector Bracket
Adjusting Nut No. 1
Telescopic Steering Slider Support
Steering Column Bracket Spacer
Tilt Steering Shaft
★ 11 (110, 8)
Stopper No. 1
Stopper Spring
Column Tube Support
★ Tapered-head Bolt
Bushing
Support Stopper Bolt
Compression Spring
Tube Attachment
Telescopic Steering Bushing
★ Bearing
Steering Lock Wedge
Telescopic Steering Screw
Telescopic Steering Wedge Lock Spring
Bearing
Bearing Thrust Collar
9.0 (90, 78 in.·lbf)
Main Shaft Assembly
Column Upper Clamp
Bearing
34 (350, 25)
Telesco Lever Lock Bolt
10 (100, 7)
Energy Absorber Cushion
Power Telescopic Motor
15 (150, 11)
0.8 (8.2, 7.1 in.·lbf)
★ Snap Ring
Steering Column Protector No. 1
Telescopic Steering Column Cable
Thrust Stopper
No. 2 Lower Cover
No. 2 Lower Cover
Intermediate Shaft Assembly
25 (260, 19)
N·m (kgf·cm, ft·lbf) : Specified torque
★ Non-reusable part
Molybdenum disulfide lithium base grease
N
F17600