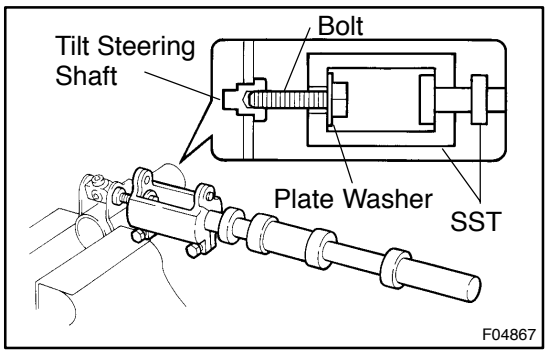


8. REMOVE ADJUSTING NUT NO. 1

(a) Set SST, a plate washer (36 mm outer diameter) and bolt (6 mm normal diameter, 1.0 mm pitch, 50 mm length), as shown.

SST 09910-00015 (09911-0001 1, 09912-00010)

Reference:

Plate washer 90201-10201

Bolt 91111-51050

(b) Remove the 2 tilt steering shafts by using the sliding hammer on SST.


(c) Remove the adjusting nut No. 1.

(d) Remove the 2 support stopper bolt bushings from the adjusting nut No. 1.

9. REMOVE POWER TELESCOPIC MOTOR

(a) Remove the 2 bolts and power telescopic motor.

(b) Remove the telescopic steering column cable.

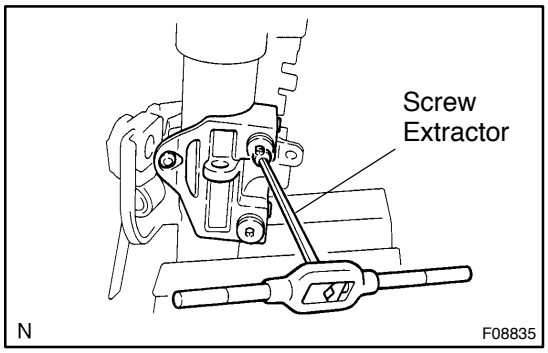

10. REMOVE COLUMN UPPER BRACKET AND COLUMN UPPER CLAMP

(a) Remove the column tube stopper.

(b) Using a centering punch, mark the center of the 2 tapered-head bolts.

(c) Using a 3 - 4 mm (0.12 - 0.16 in.) drill, drill into the 2 bolts.

(d) Using a screw extractor, remove the 2 bolts, column upper bracket and column upper clamp.

(e) Using a hexagon wrench, remove the 2 telesco lever lock bolts.


(f) Remove the 2 telescopic steering wedge lock springs, 2 steering lock wedges and column upper bracket and column upper clamp.

11. REMOVE COLUMN TUBE SUPPORT

(a) Remove the bolt.

(b) Remove the column tube support with tube attachment.

(c) Remove the tube attachment from the column tube support.

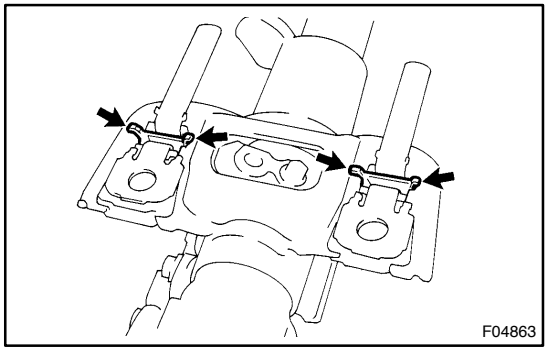

12. REMOVE 2 ENERGY ABSORBING PLATES

(a) Using pliers, remove the 2 energy absorbing clips.

(b) Remove the 2 energy absorbing plates and 2 energy absorbing guides.