13. REMOVE TELESCOPIC STEERING SLIDER SUPPORT

Remove the 2 bolts and telescopic steering slider support.

14. REMOVE TELESCOPIC STEERING BUSHING

15. REMOVE TELESCOPIC STEERING SLIDER

16. REMOVE STEERING COLUMN BRACKET SPACER

17. REMOVE TELESCOPIC STEERING SCREW

Remove the nut, 4 energy absorber cushions, 2 bearings and telescopic steering screw.

18. REMOVE COLUMN UPPER TUBE SUB-ASSEMBLY WITH MAIN SHAFT ASSEMBLY


(a) Using a screwdriver, remove the lower side snap ring from the main shaft assembly.

(b) Using a hexagon wrench, remove the 2 tilt steering bolts and column upper tube sub-assembly with the main shaft assembly.

(c) Remove the column upper tube assembly from the break away bracket.

(d) Remove the 2 support stopper bolt bushings from the column upper tube assembly.

(e) Remove the 3 bushings from the break away bracket.

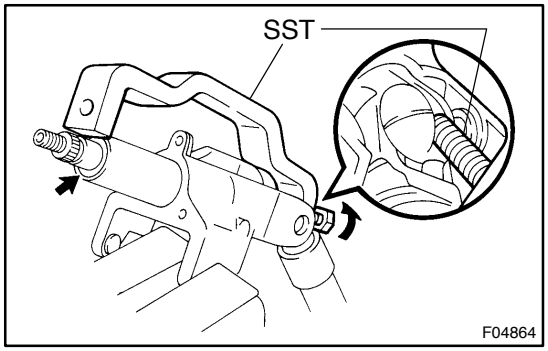

19. REMOVE MAIN SHAFT ASSEMBLY

(a) Using SST, compress the compression spring.
SST 09950-4001 1 (09958-04011)

NOTICE:

Do not bend the universal joint of the shaft assembly more than 20°.

(b) Using a snap ring expander, remove the upper side snap ring.

(c) Remove the main shaft assembly from the column upper tube sub-assembly.

(d) Remove the compression spring and bearing thrust collar from the main shaft assembly.