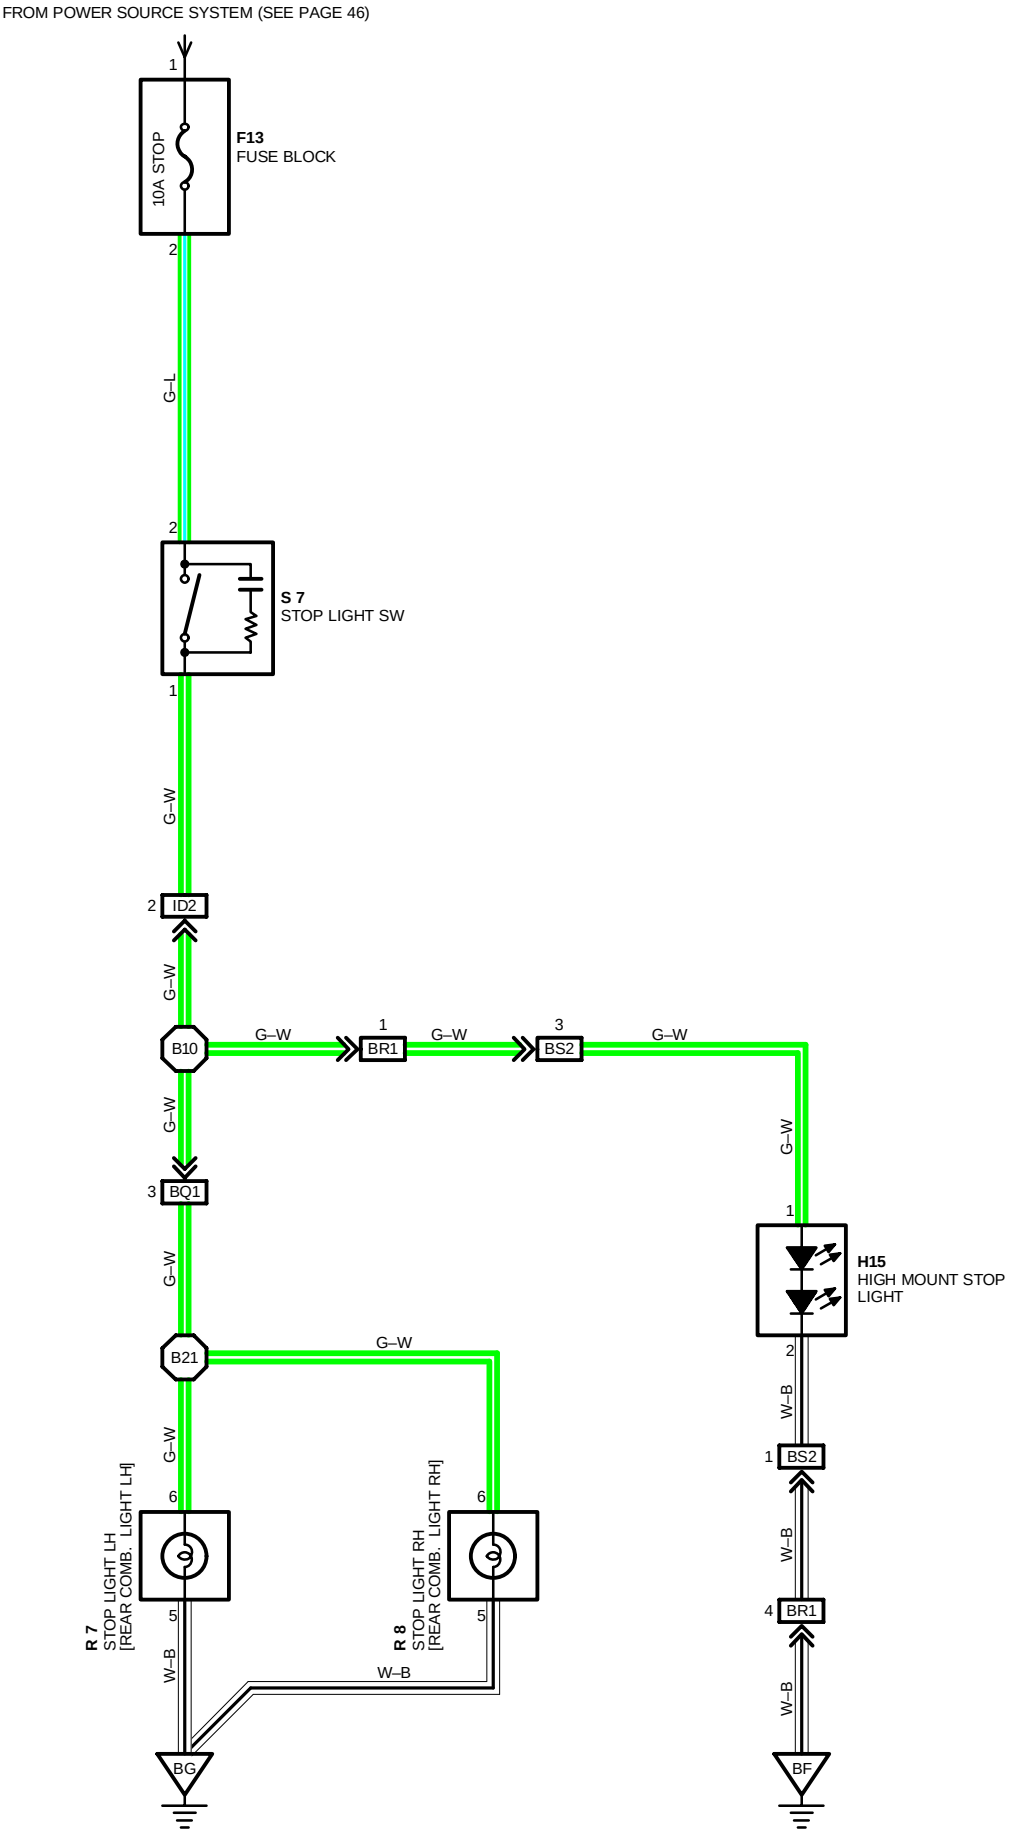
STOP LIGHT


FROM POWER SOURCE SYSTEM (SEE PAGE 46)
1
10A STOP
F13
FUSE BLOCK
2
G–L
2
S 7
STOP LIGHT SW
1
G–W
2
ID2
G–W
B10
G–W
1
BR1
G–W
3
BS2
G–W
G–W
3
BQ1
G–W
1
H15
HIGH MOUNT STOP LIGHT
B21
G–W
2
W–B
G–W
1
BS2
6
6
R 7
STOP LIGHT LH
[REAR COMB. LIGHT LH]
R 8
STOP LIGHT RH
[REAR COMB. LIGHT RH]
5
5
W–B
W–B
W–B
4
BR1
W–B
BG
BF

SERVICE HINTS

S 7 STOP LIGHT SW

2–1: CLOSED WITH BRAKE PEDAL DEPRESSED

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F13	23	**R 7**	24	**S 7**	23
H15	24	**R 8**	24		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID2	28	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
BQ1	30	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BR1	30	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BS2	30	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)

: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BG	30	LOWER BACK PANEL CENTER
BF	30	UNDER THE CENTER CONSOLE BOX

: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B10	32	FLOOR NO. 1 WIRE	**B21**	32	FLOOR NO. 3 WIRE


F13

(SEE PAGE 20)

H15



R 7, R 8

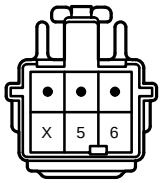

S 7 BLACK

