
Wheel Opening Extension

COMPONENTS

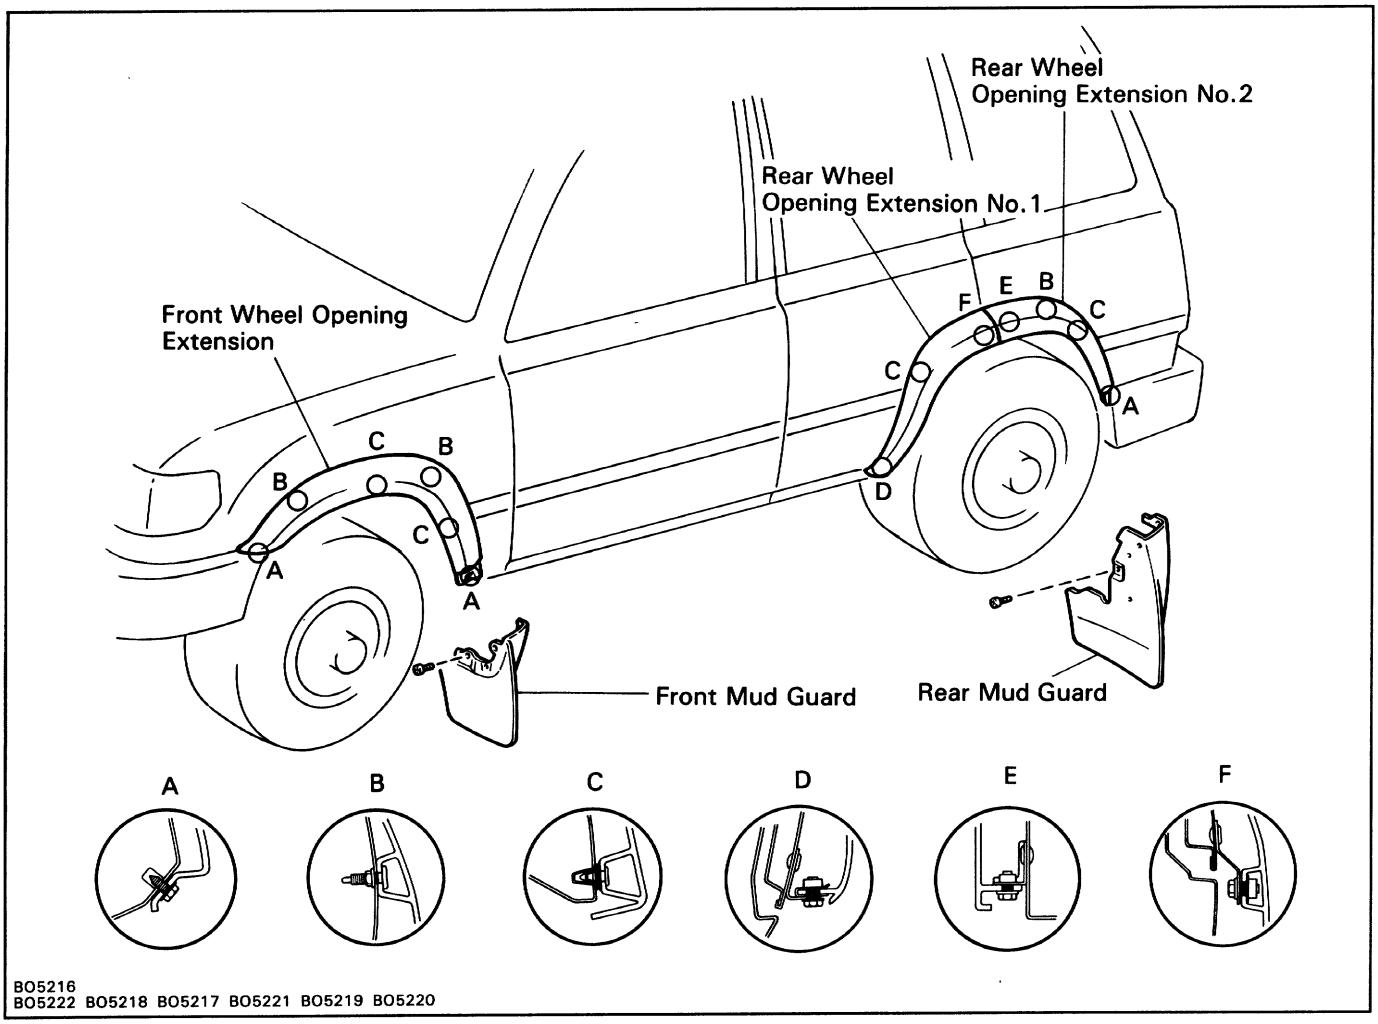

BO5216
BO5222 BO5218 BO5217 BO5221 BO5219 BO5220

REMOVAL OF FRONT WHEEL OPENING ETENSION

1. REMOVE FRONT MUD GUARD

Remove six screws and the mud guard.

2. REMOVE FRONT WHEEL OPENING EXTENSION

(a) Remove two bolts and two nuts.

(b) Remove the extension by pulling.

REMOVAL OF REAR WHEEL OPENING EXTENSION NO. 1

REMOVE REAR WHEEL OPENING EXTENSION

(a) Remove two bolts.

(b) Remove the extension by pulling.

REMOVAL OF REAR WHEEL OPENING EXTENSION NO.2

(See page BO–41)

1. REMOVE REAR MUD GUARD

Remove eight screws and the mud guard.

2. REMOVE REAR WHEEL OPENING EXTENSION NO.2

(a) Remove two bolts and the nut.

(b) Remove the extension by pullings.

INSTALL OF FRONT WHEEL OPENING EXTENSION

(See page BO–41)

1. INSTALL FRONT WHEEL OPENING EXTENSION

(a) Tap the extension to install it.

(b) Install two bolts and two nuts.

2. INSTALL FRONT MUD GUARD

Install the mud guard with six screws.

INSTALL OF REAR WHEEL OPENING EXTENSION

(See page BO–41)

INSTALL REAR WHEEL OPENING EXTENSION NO. 1

(a) Tap the extension to install it.

(b) Install two bolts.

INSTALL OF REAR WHEEL OPENING EXTENSION NO.2

(See page BO–41)

1. INSTALL REAR WHEEL OPENING EXTENSION NO.2

(a) Tap the extension to install it.

(b) Install two bolt, and the nut.

2. INSTALL THE MUD GUARD

Install the mud guard with eight screws.