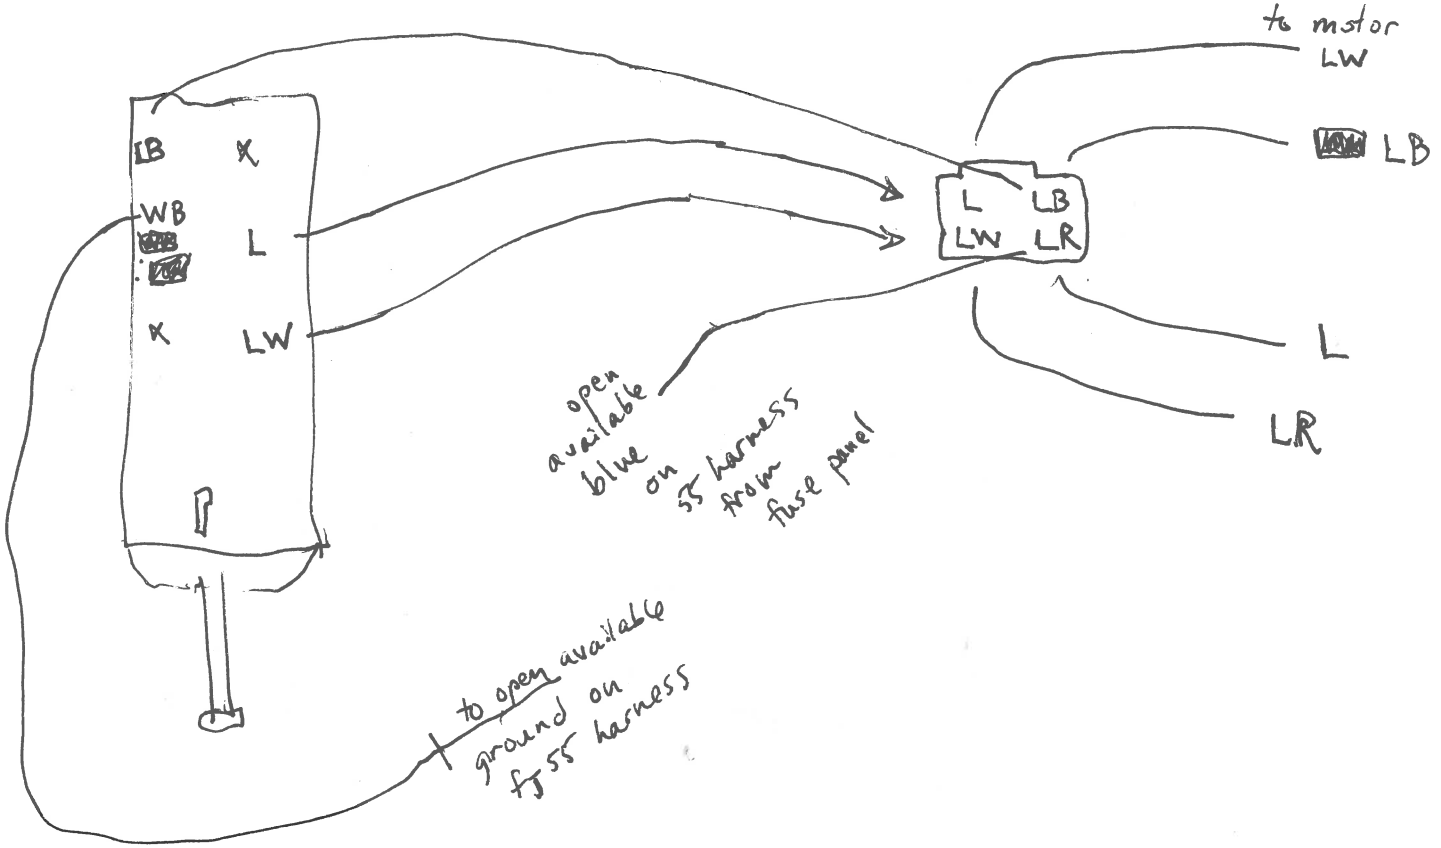

to motor
LW
LB
L
LR
LB
WB
L
X
LW
L LB
LW LR
open available blue on 55 harness from fuse panel
to open available ground on fg 55 harness