
# FJ60 Ash Tray Switch Panel

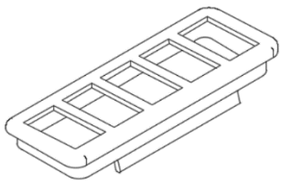


## Before Installation

Please understand that this switch panel uses a *compressive* force to stay in place. Some instrument panels may not be suitable if they have *pre-existing cracks* around the circumference on the ashtray slot. If your instrument panel is cracked in a compromising spot, then breaking the locking tab and compression tab off your new switch panel and gluing It In place may be more desirable.

*Switches can be installed before or after installation.*

## Installation

1. Slide the locking tab behind the top face of your instrument panel as shown below.

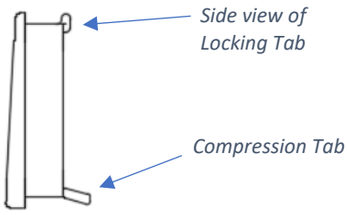




*How the locking tab goes into place as described in step 1.*

2. Use your thumbs to assist the compression tab into place starting from the outer edges inward, carefully working the panel into place.



*Demonstration of how compression tab should be pressed in.*

**For more FJ60 Products check out these links.**

Etsy Shop

https://www.etsy.com/shop/FJ60Solutions?ref=l2-about-shopname

ih8mud.com

https://forum.ih8mud.com/threads/fj60-part-reproductions-and-solutions.1234894/