

Receiver Wiring Adaptor

120 70-8116

IMPORTANT

Before starting, compare items on your invoice with items received. Thoroughly check packing materials. If an item is missing, please call:

Crutchfield at 1-888-955-6000


Revision 01/10/11

STEP 1 -- CONNECT WIRES

- ▶ Match wires below to the matching function of each wire on your receiver (refer to instructions supplied with receiver). The wire colors of your new receiver may, or may not, match the wire colors of the adaptor. Match adaptor and receiver wires by function, disregarding color.
- ▶ Connect Black wire to Ground wire of new receiver.
- ▶ Individually tape off any unused wires.
- ▶ Make final wiring connections following instructions on the next page.

STEP 2 -- INSTALL

Plug housings into factory harnesses in vehicle.

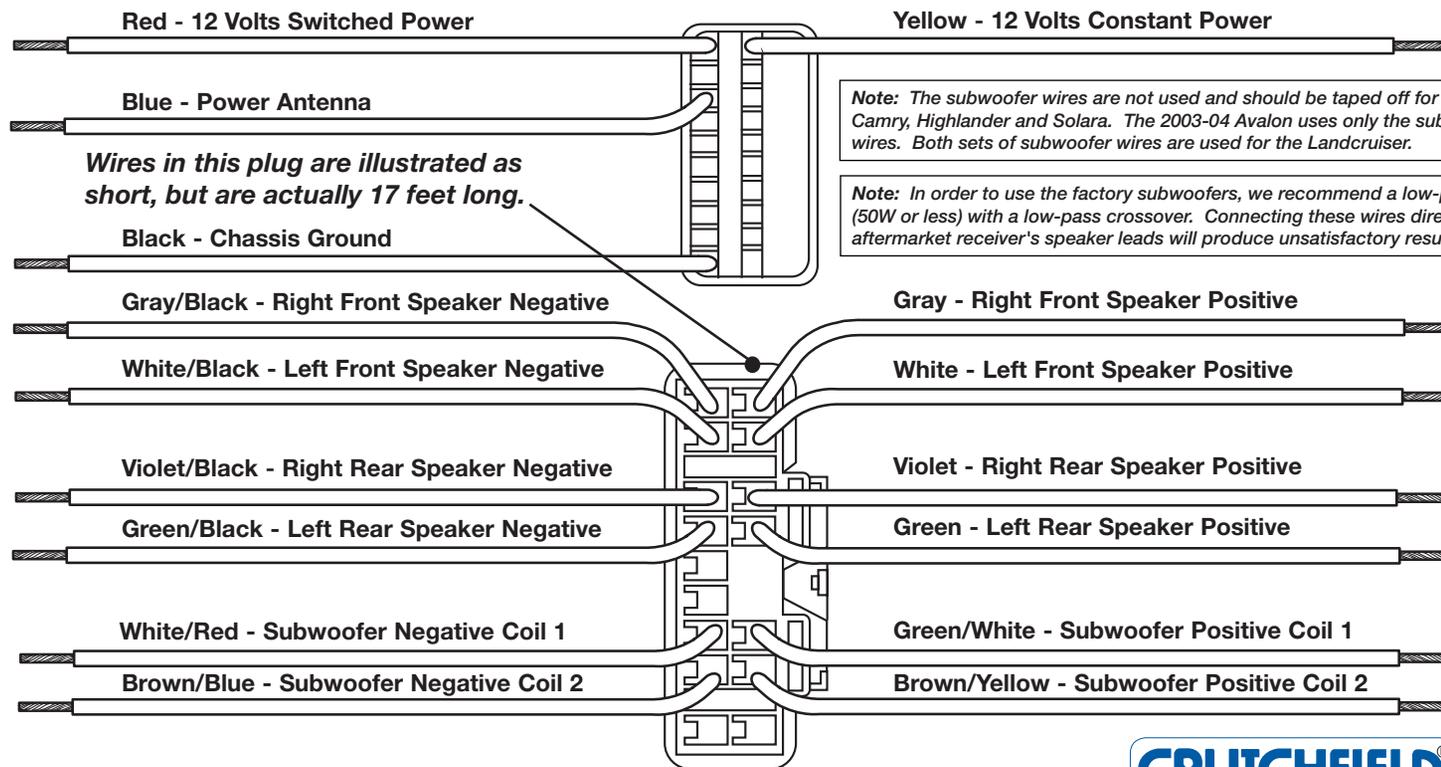

CRUTCHFIELD
CRUTCHFIELD.COM



Copyright 2011 Crutchfield Corporation



120708116


CRIMP METHOD

A. Strip wires back 1/2”.

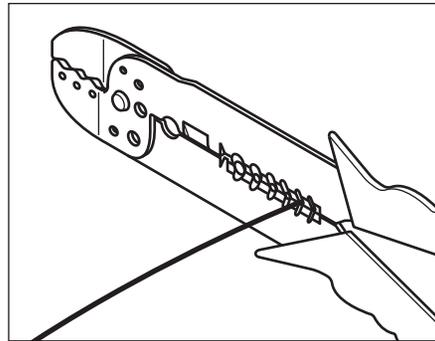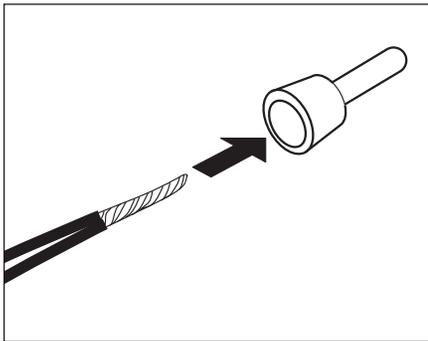


B. Twist wires together and insert in crimp cap.

C. Squeeze middle of cap for tight connection.

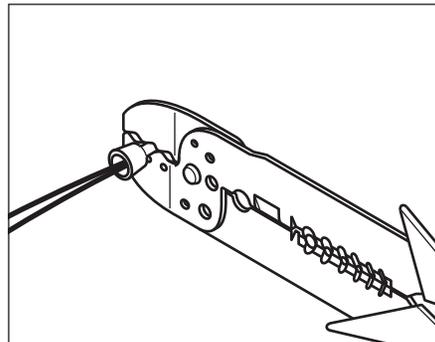

Tools Required



Crimp Tool/
Wire Stripper




Crimp Caps

SOLDER METHOD


A. Strip wires back 1/2”.



B. Twist wires together.




C. Solder:
1. Heat wire.
2. Touch solder to wire, not to iron.

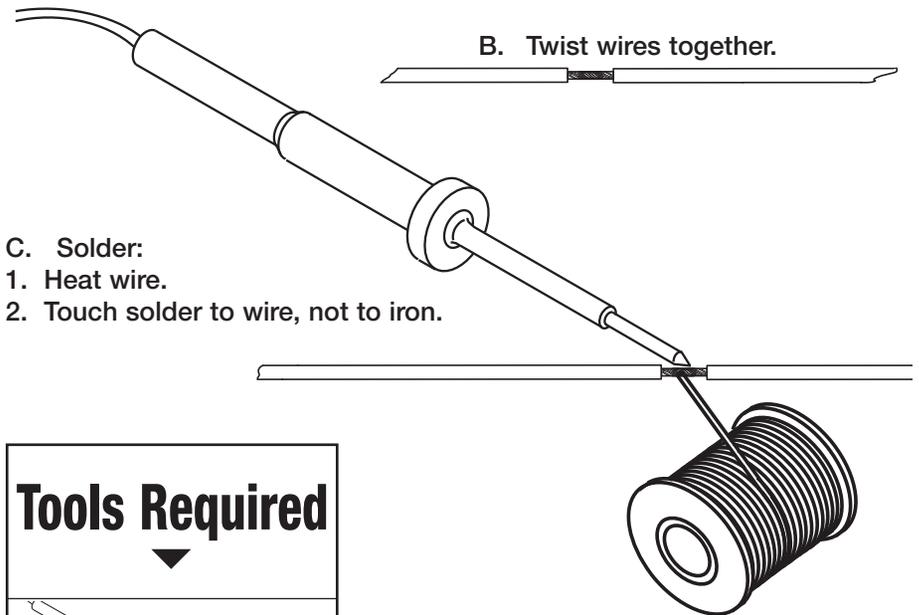


D. Tape



Tools Required



Soldering
Iron



Solder
(Rosin Core
Suggested)



Electrical
Tape