in the illustration.

CAUTION: This check should be done upon closing the throttle valve completely, and not operating the throttle adjusting screw.

To adjust the installed height of the step-up-rod, vary the amount of bend of the counter-arm (1) or the throttle connector link (2).

5. When installing the throttle adjusting screw, screw in until it touches the flange, and then screw in about 3/4 turn. At this time, check the throttle valve position with the slow port as shown in the illustration.
To adjust the valve position, screw in or out the throttle adjusting screw.

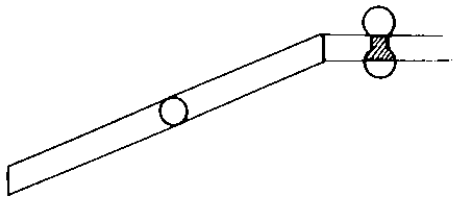


Fig.4-33 Valve Position X4990

Installation

To install the carburetor on to the car, reverse the Removal procedures. Check the fuel leak from the connections.

* * * * * * * * * * * * * * * * *