


FRONT SUSPENSION

COMPONENTS

2609K–02

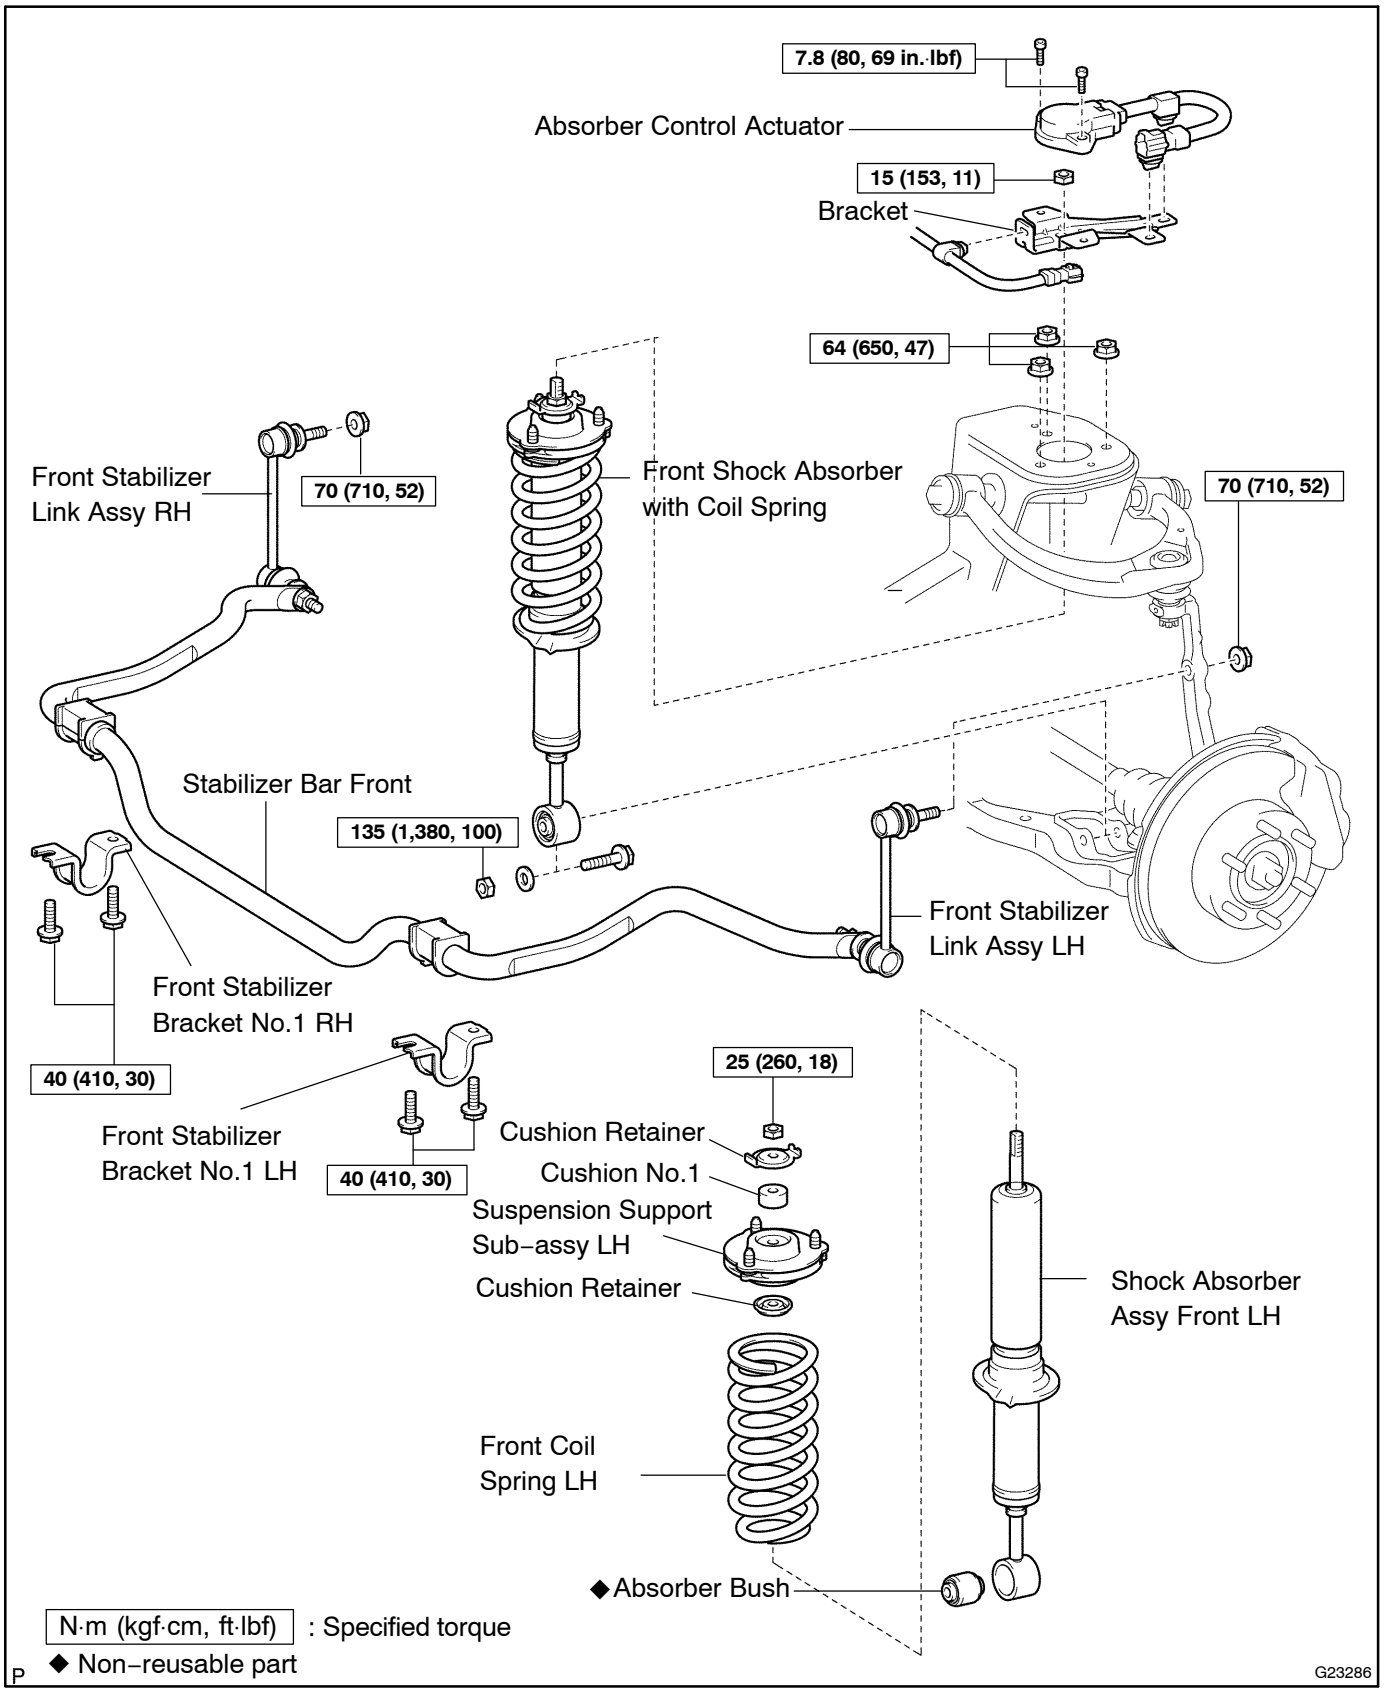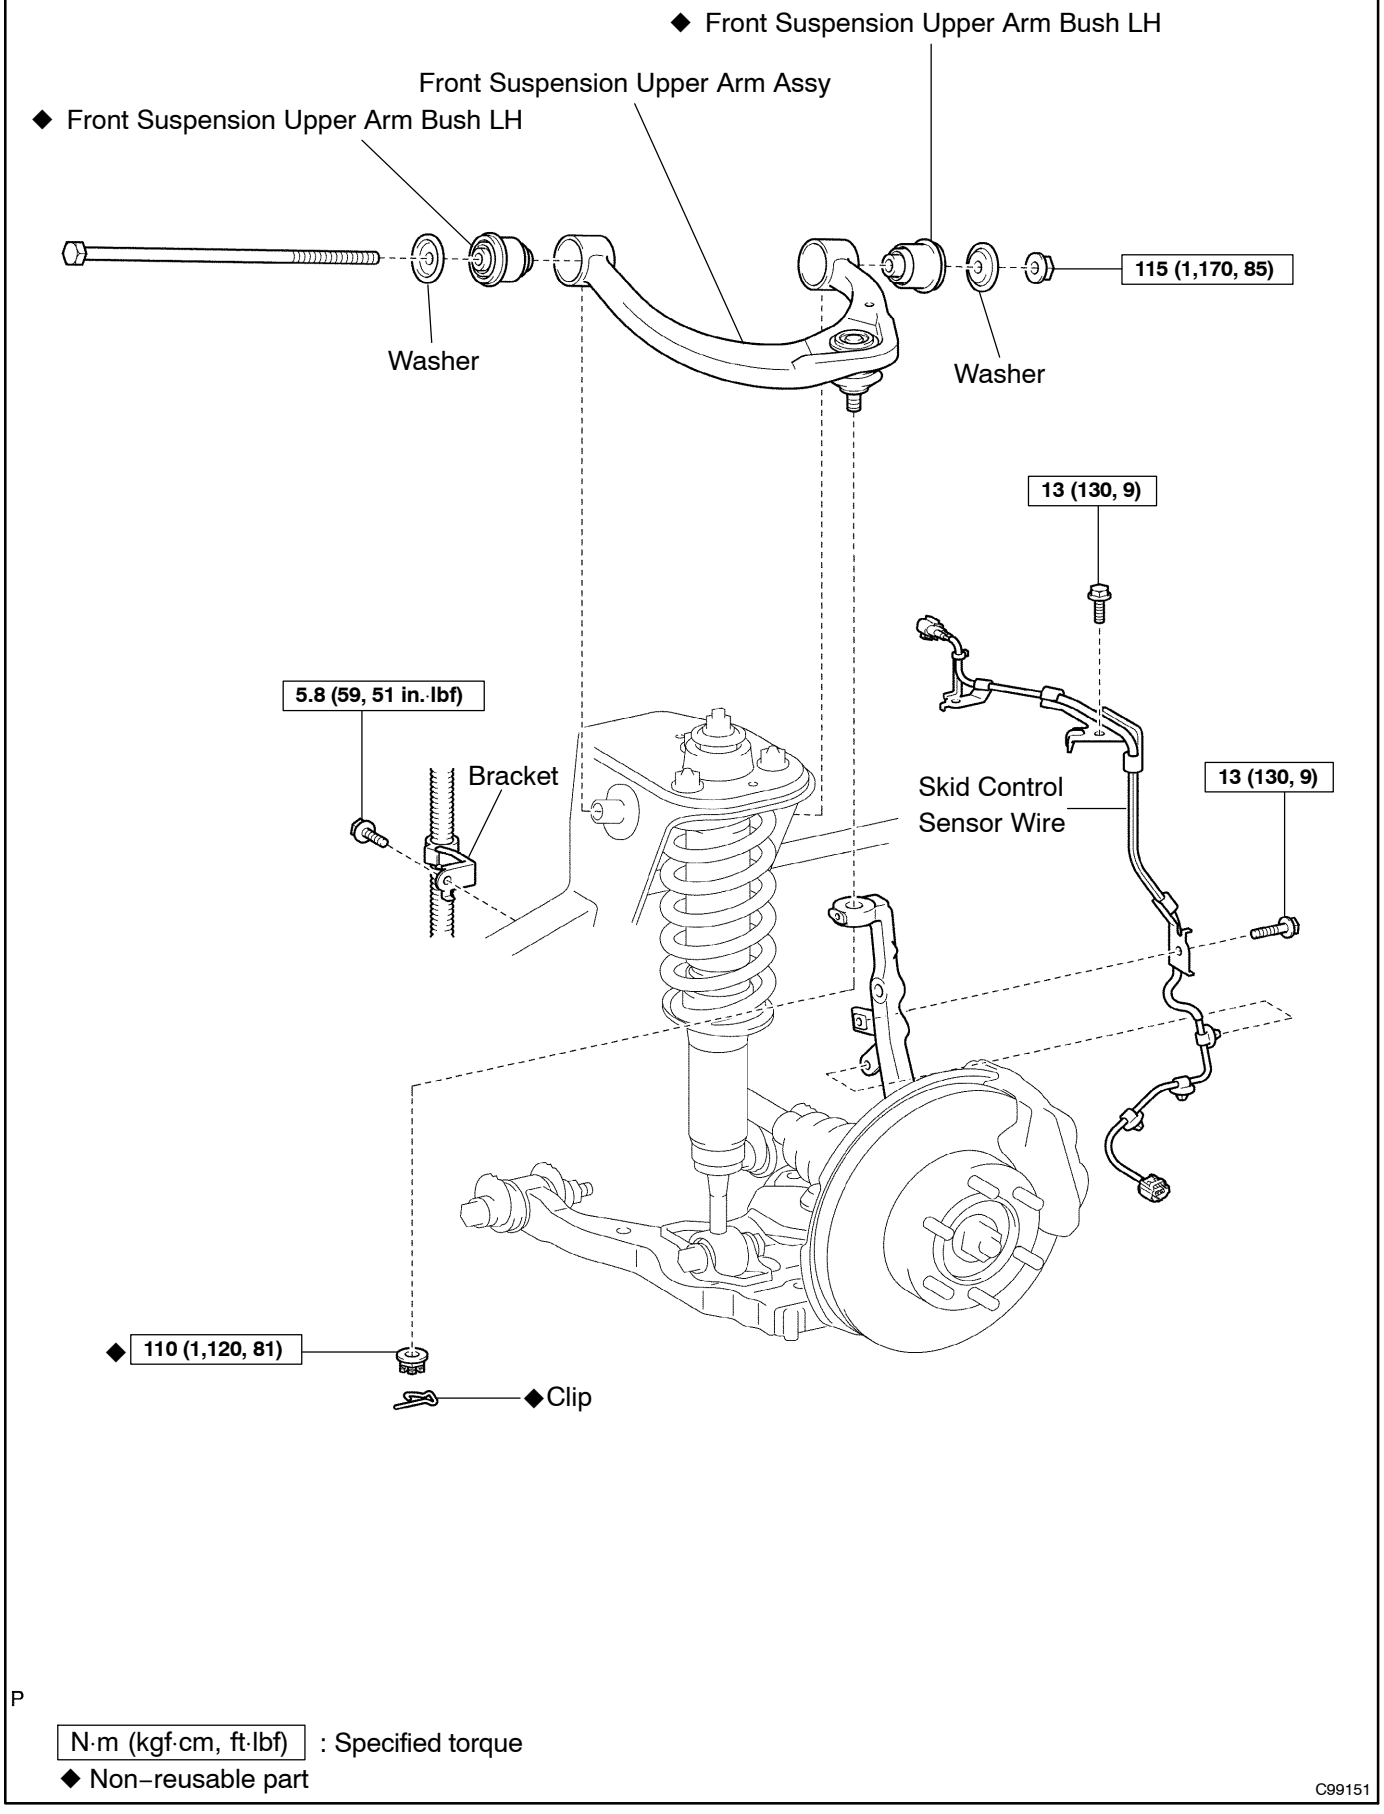


◆ Front Suspension Upper Arm Bush LH
Front Suspension Upper Arm Assy
◆ Front Suspension Upper Arm Bush LH
115 (1,170, 85)
Washer
Washer
13 (130, 9)
5.8 (59, 51 in.·lbf)
Bracket
Skid Control
Sensor Wire
13 (130, 9)
◆ 110 (1,120, 81)
◆Clip
P
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
C99151

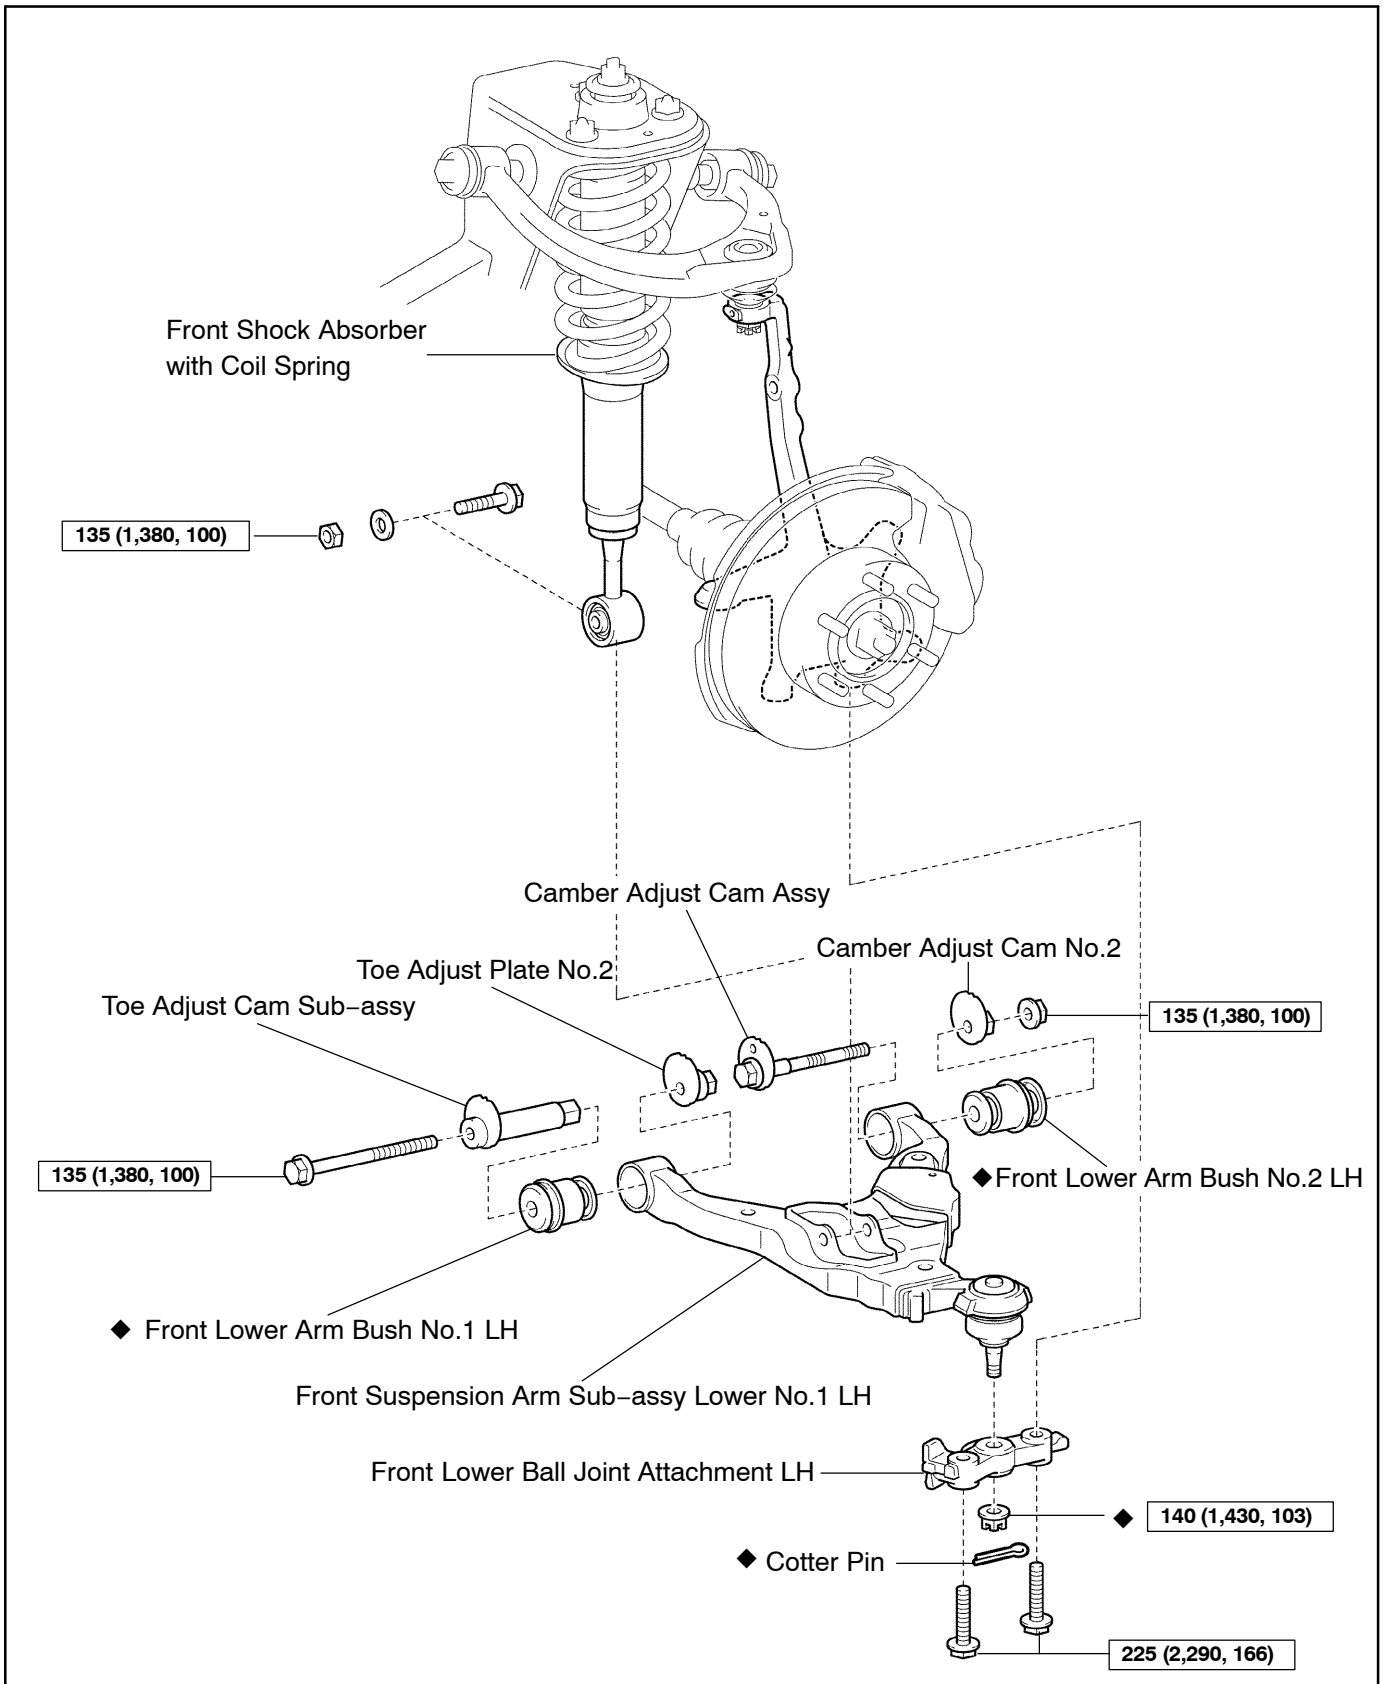


P

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

C99152

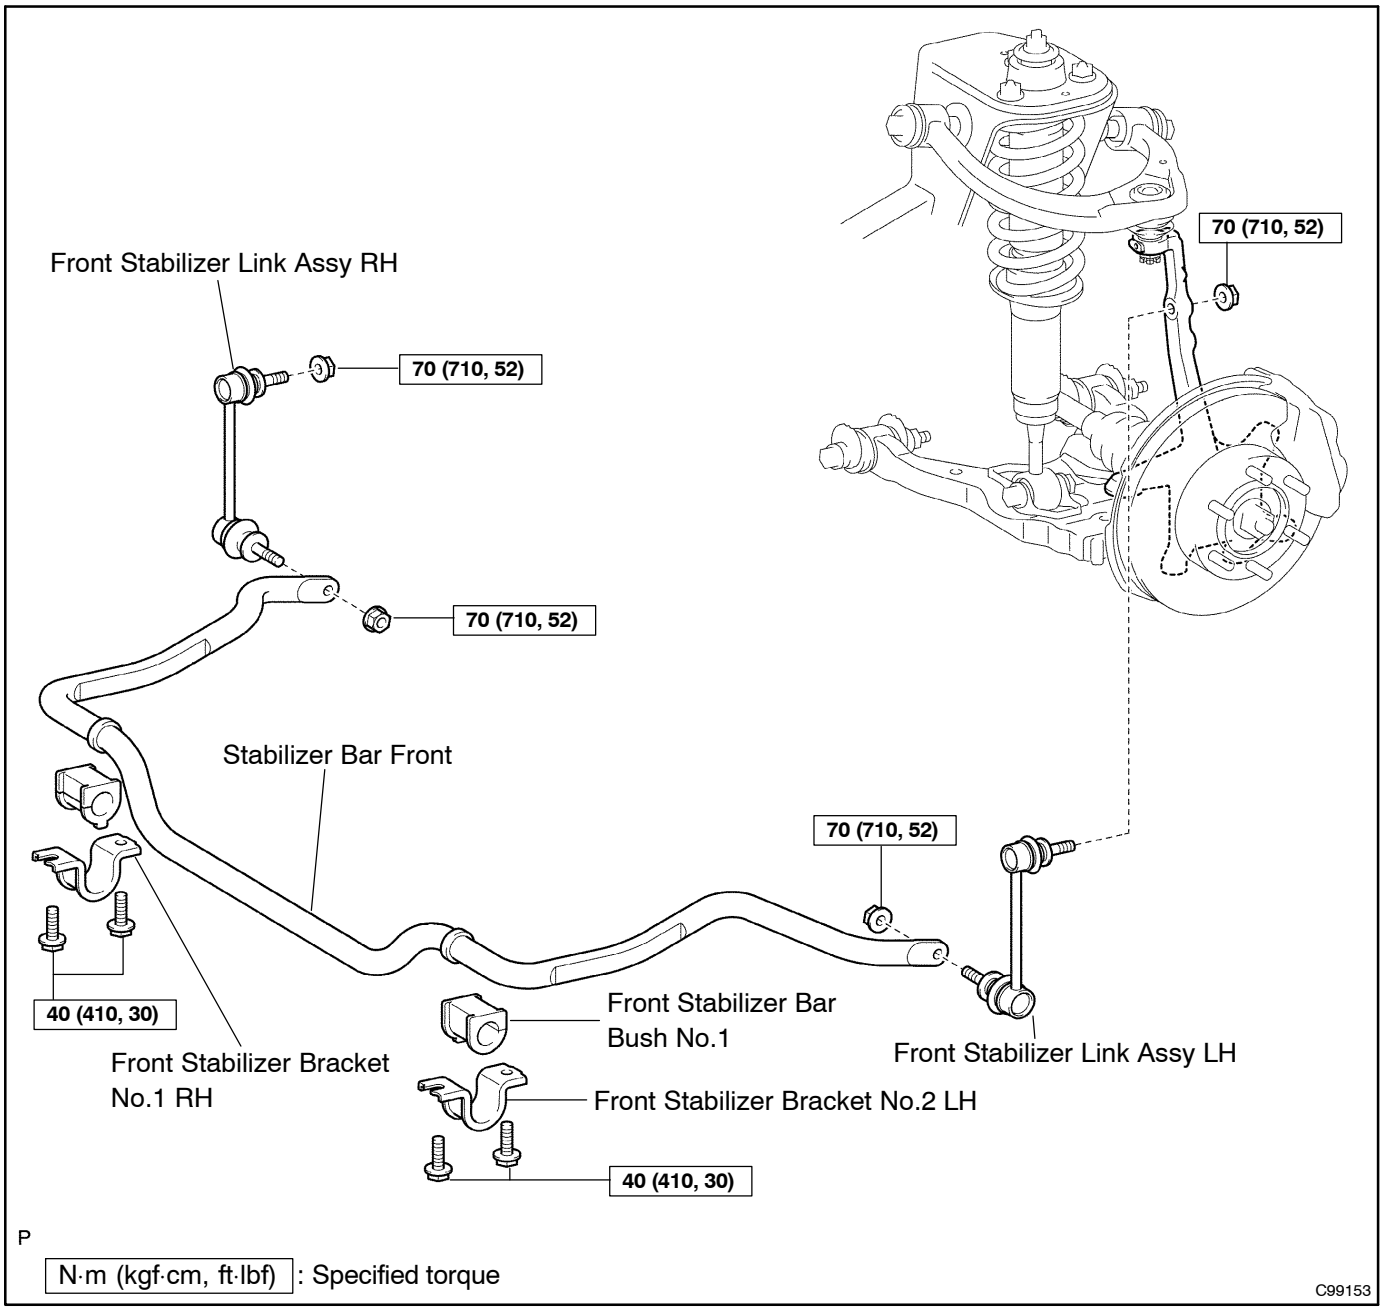
Front Stabilizer Link Assy RH
70 (710, 52)
70 (710, 52)
70 (710, 52)
Stabilizer Bar Front
70 (710, 52)
40 (410, 30)
Front Stabilizer Bar
Bush No.1
Front Stabilizer Link Assy LH
Front Stabilizer
Bracket
No.1 RH
Front Stabilizer Bracket No.2 LH
40 (410, 30)
P
N·m (kgf·cm, ft·lbf) : Specified torque
C99153